


DRAGON FLAME HP071



CP-ASSY-HP071 #-A1-20200725


Installation Reminder

- Prepare tools:

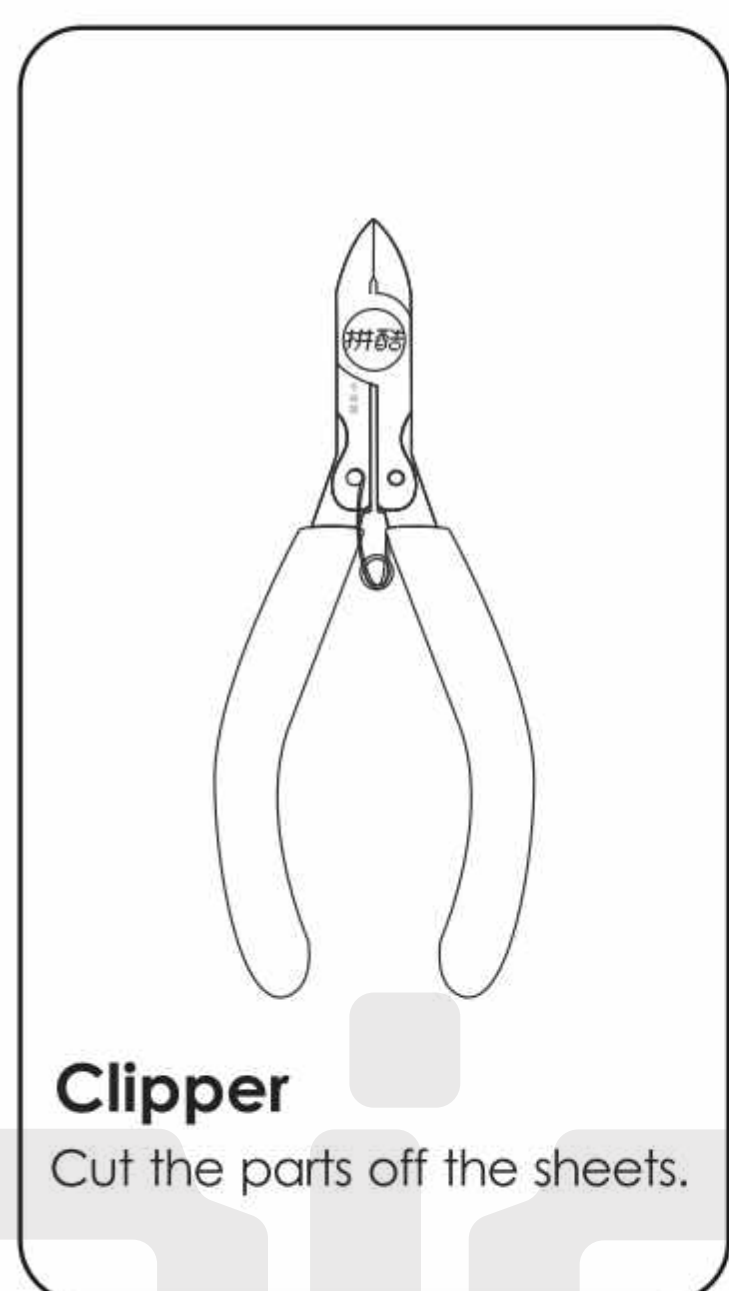

Clipper

Cut the parts off the sheets.

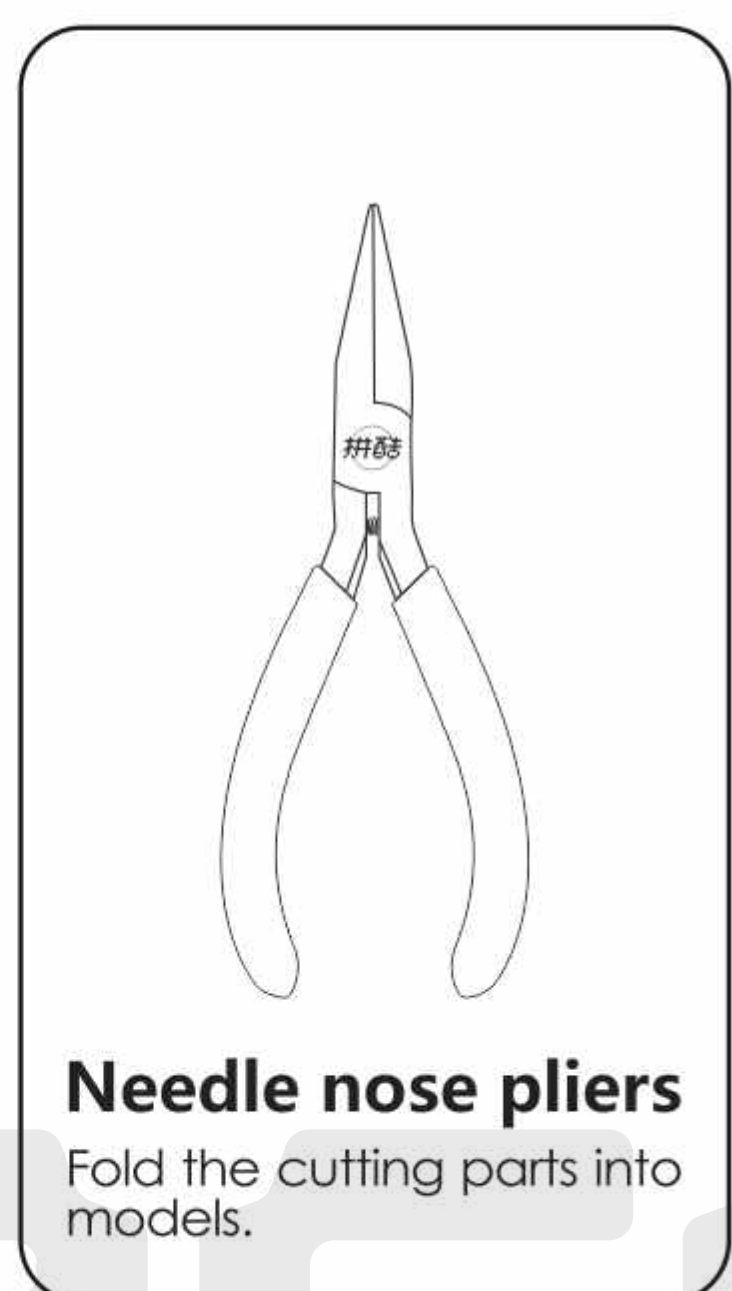

Needle nose pliers


Fold the cutting parts into models.

It is recommended to use piececool authentic assembly tools to build or fix the design. It is tailor made for the metal pieces and user friendly.

Please handle the metal trim carefully to prevent scratches.


• Installation Method:

a. Remove the parts

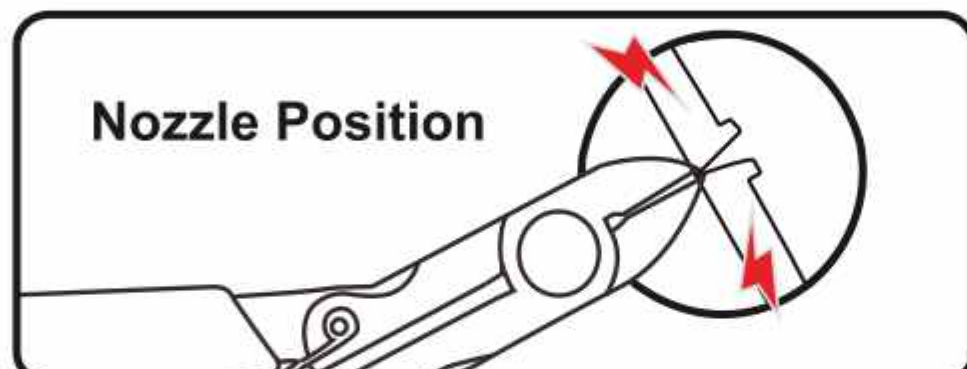


Please use the clipper to cut the nozzle position and remove the parts.

b. Identify the parts

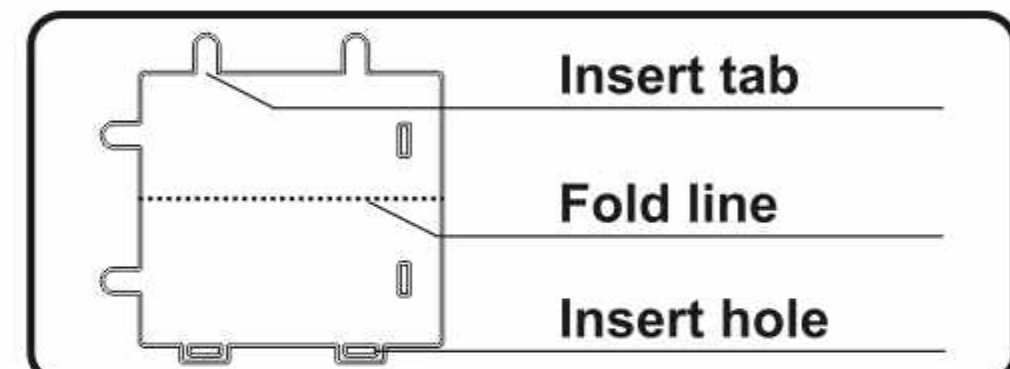


Identify the insert tab, fold line and the insert hole.

c. Folding the parts

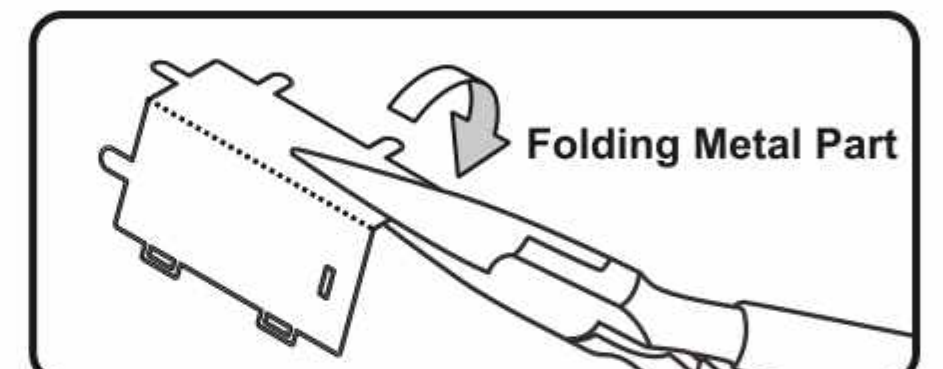


Please use the Needle nose pliers to fold the cutting parts into models.

d. Retaining the parts

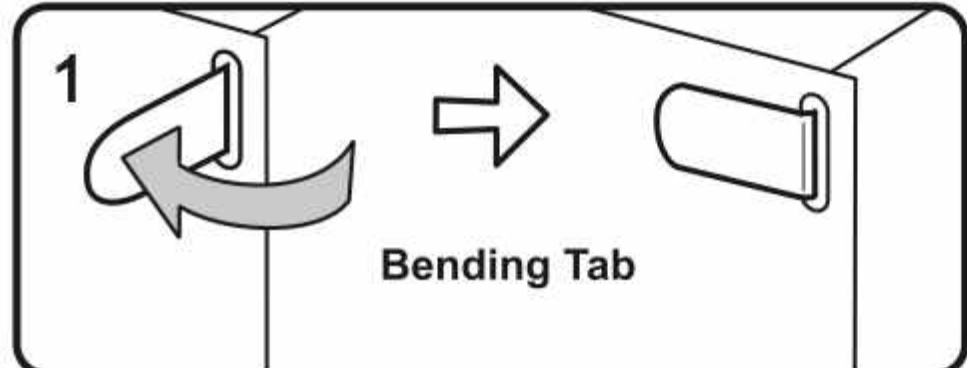

Insert the hole, bending tab with angle 90°

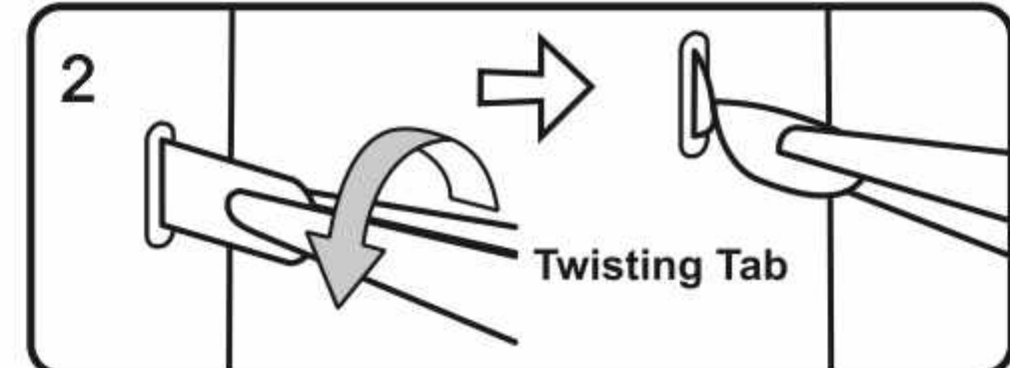

Insert the hole, twisting tab with angle 90°

• Attention :


- Engraved / Color side
- Non-engraved / Silver side
- Attention Point
- Keep the parts symmetrical

When cutting metal parts, please do not cut the "insert tab" as "nozzle position". Only cut the parts of the current step when cutting the parts. Do not cut all the parts at one time to avoid loss.


When encountering the parts of the folding line, please pay attention to the front and back of the metal sheet and the direction of the folding. According to the direction indicated in the instruction, cut lightly and fold slowly. It is best to fold it once. Do not fold it repeatedly to avoid damage to the parts.

Assembly Guide


Step 1

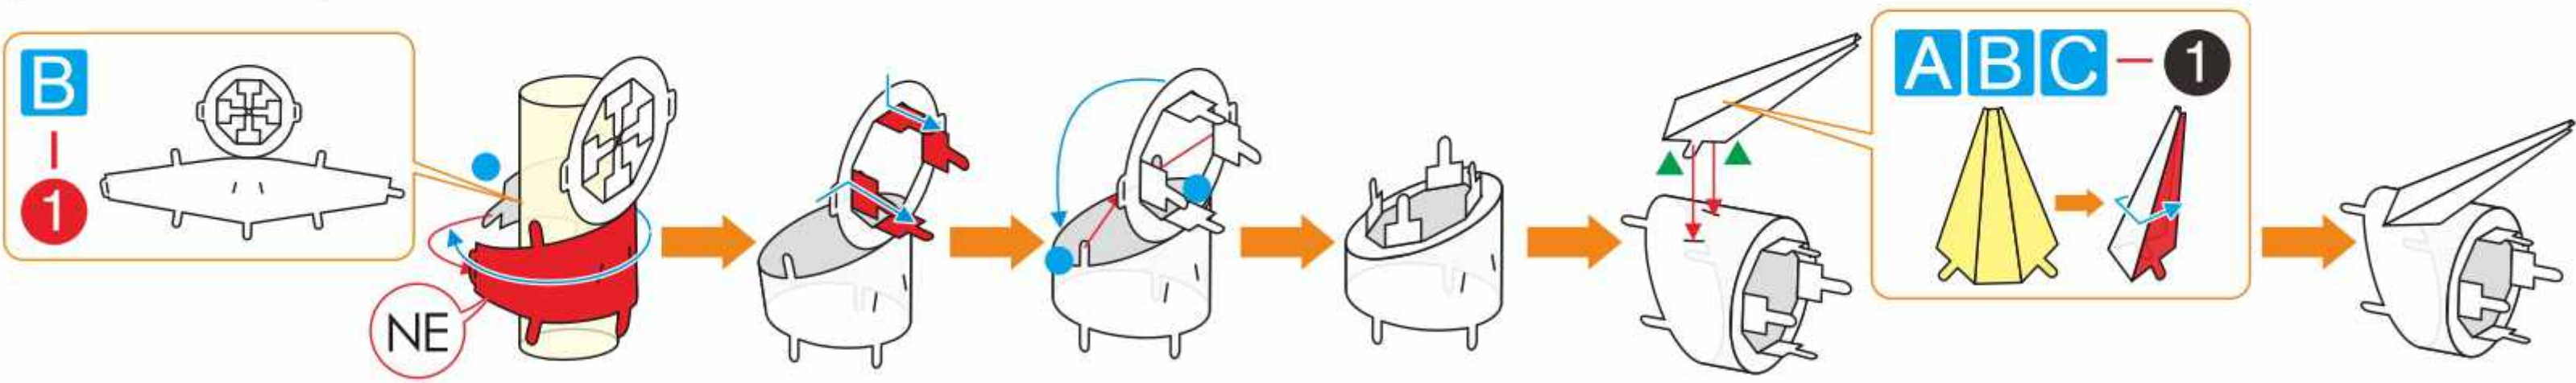


Step 2

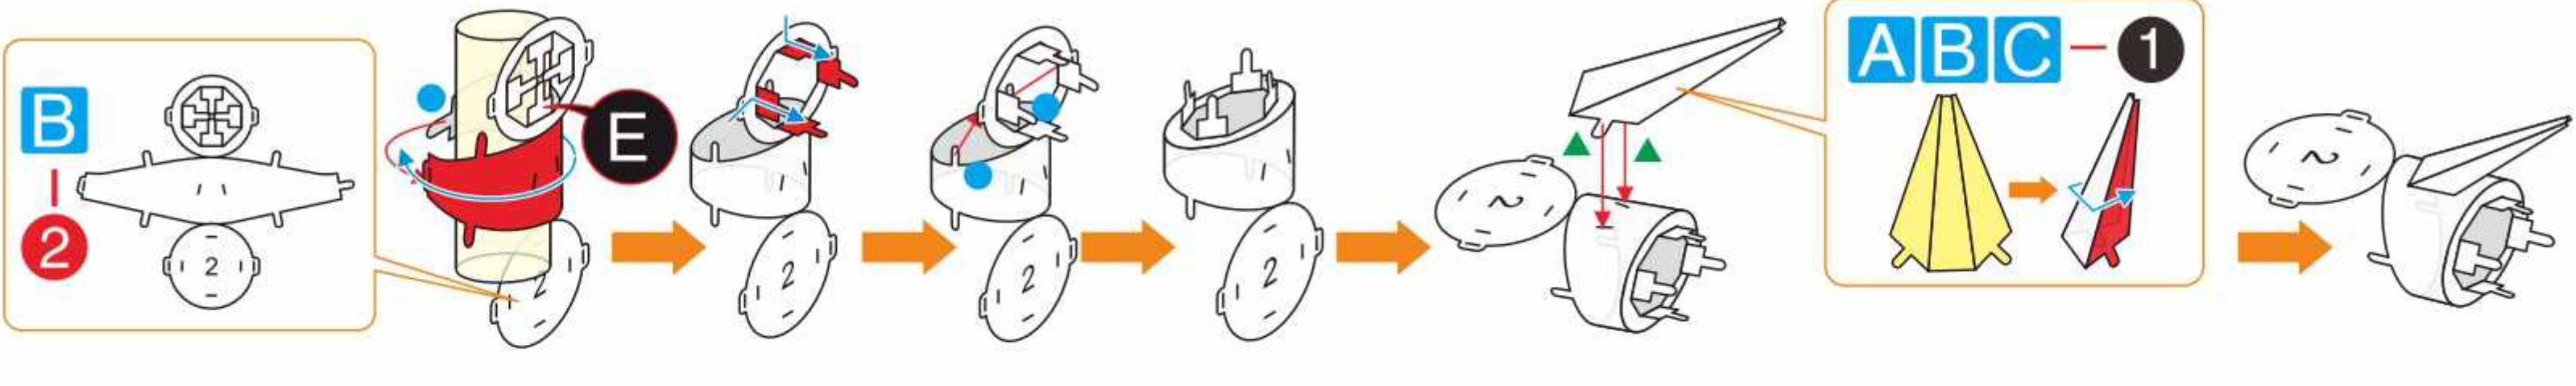


Step 3

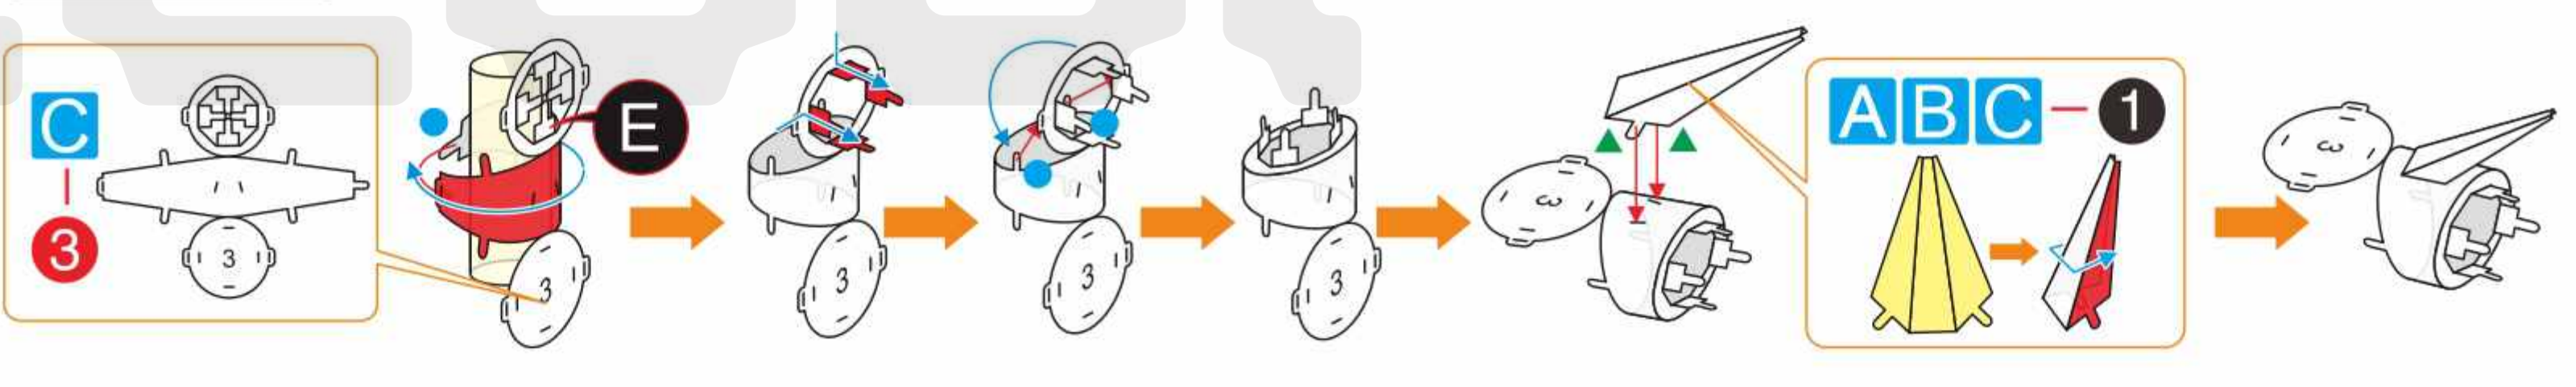


Step 4

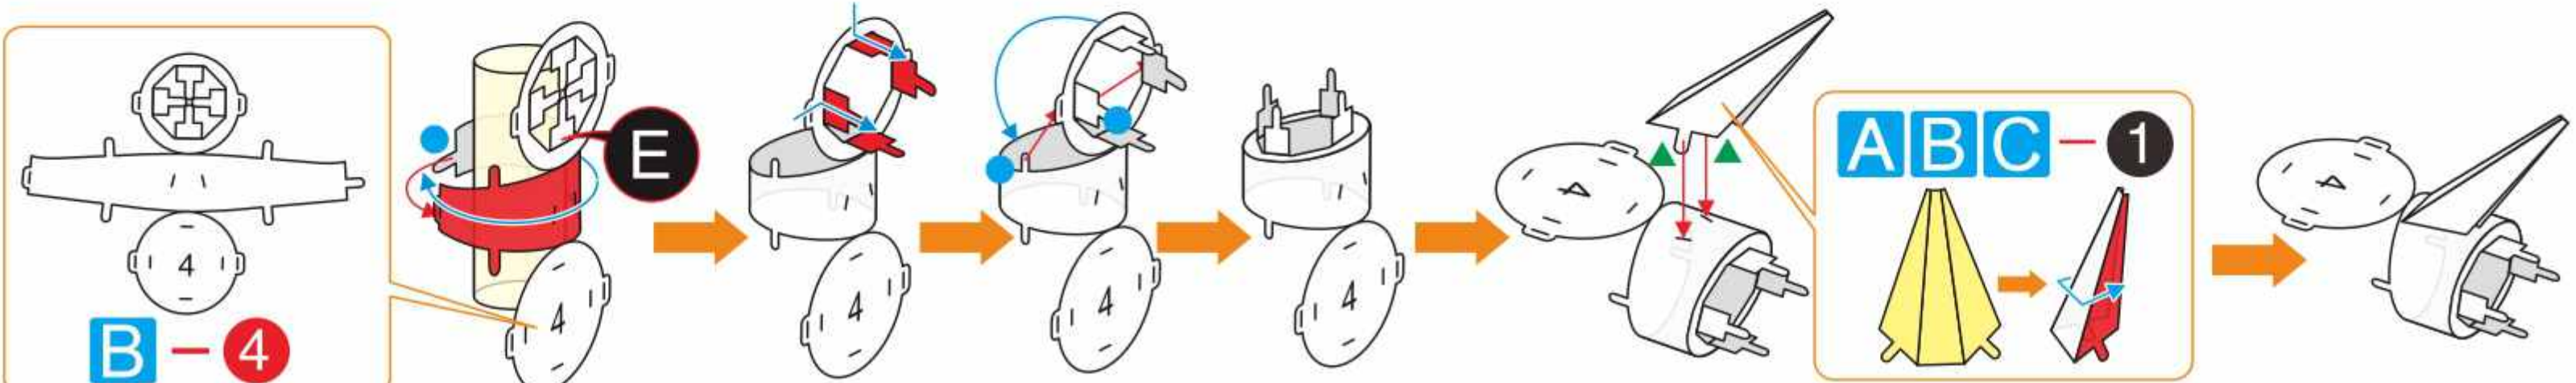


Step 5

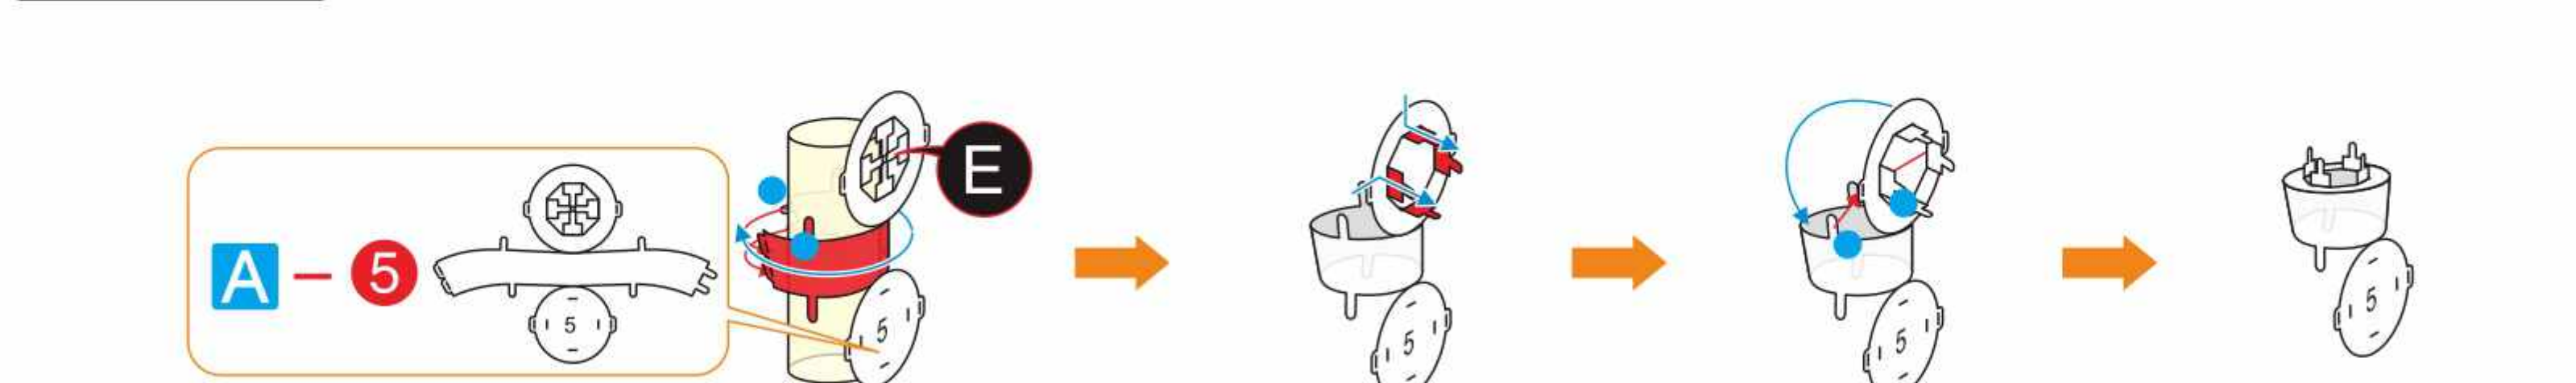


Step 6

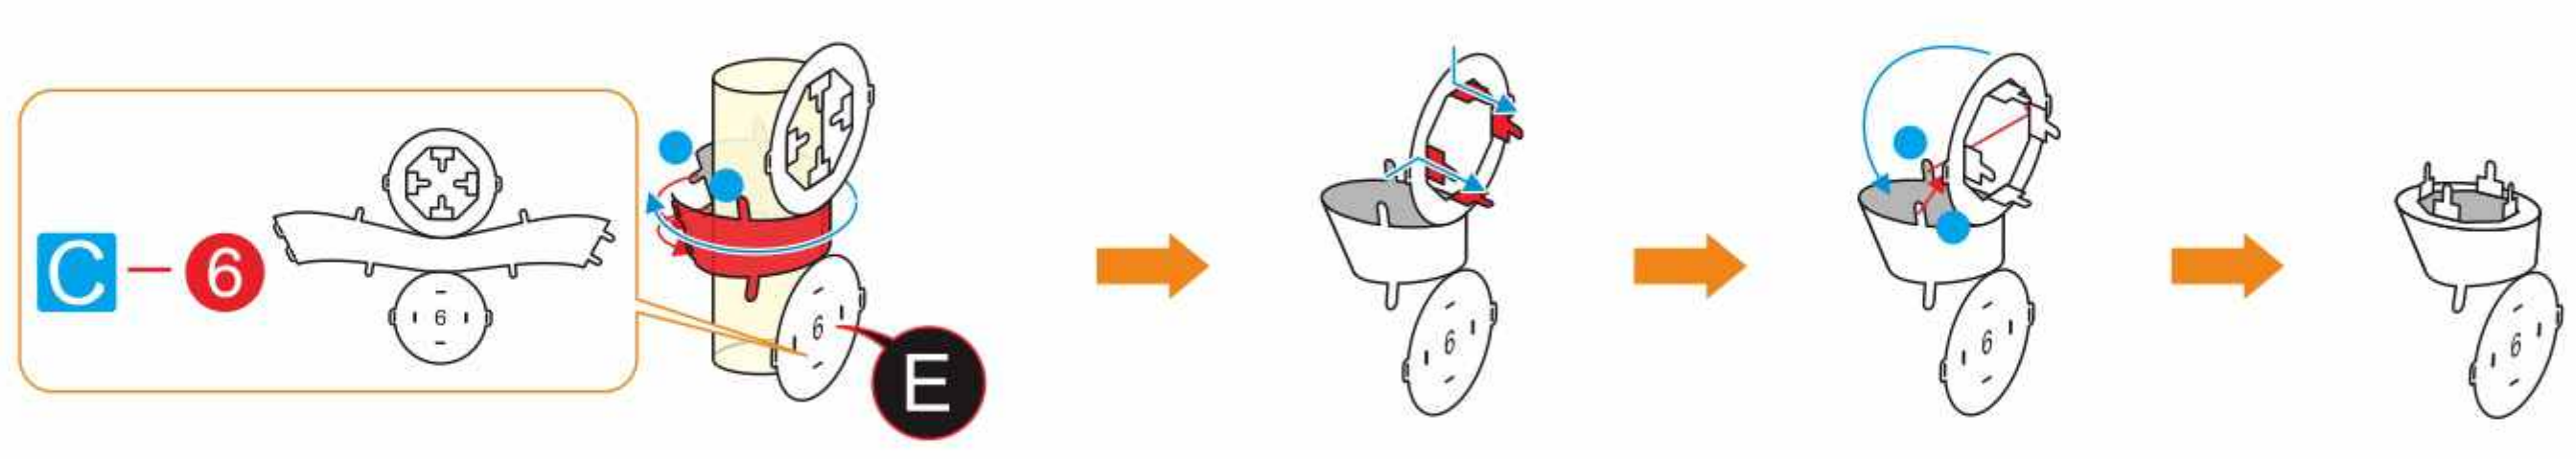


Step 7

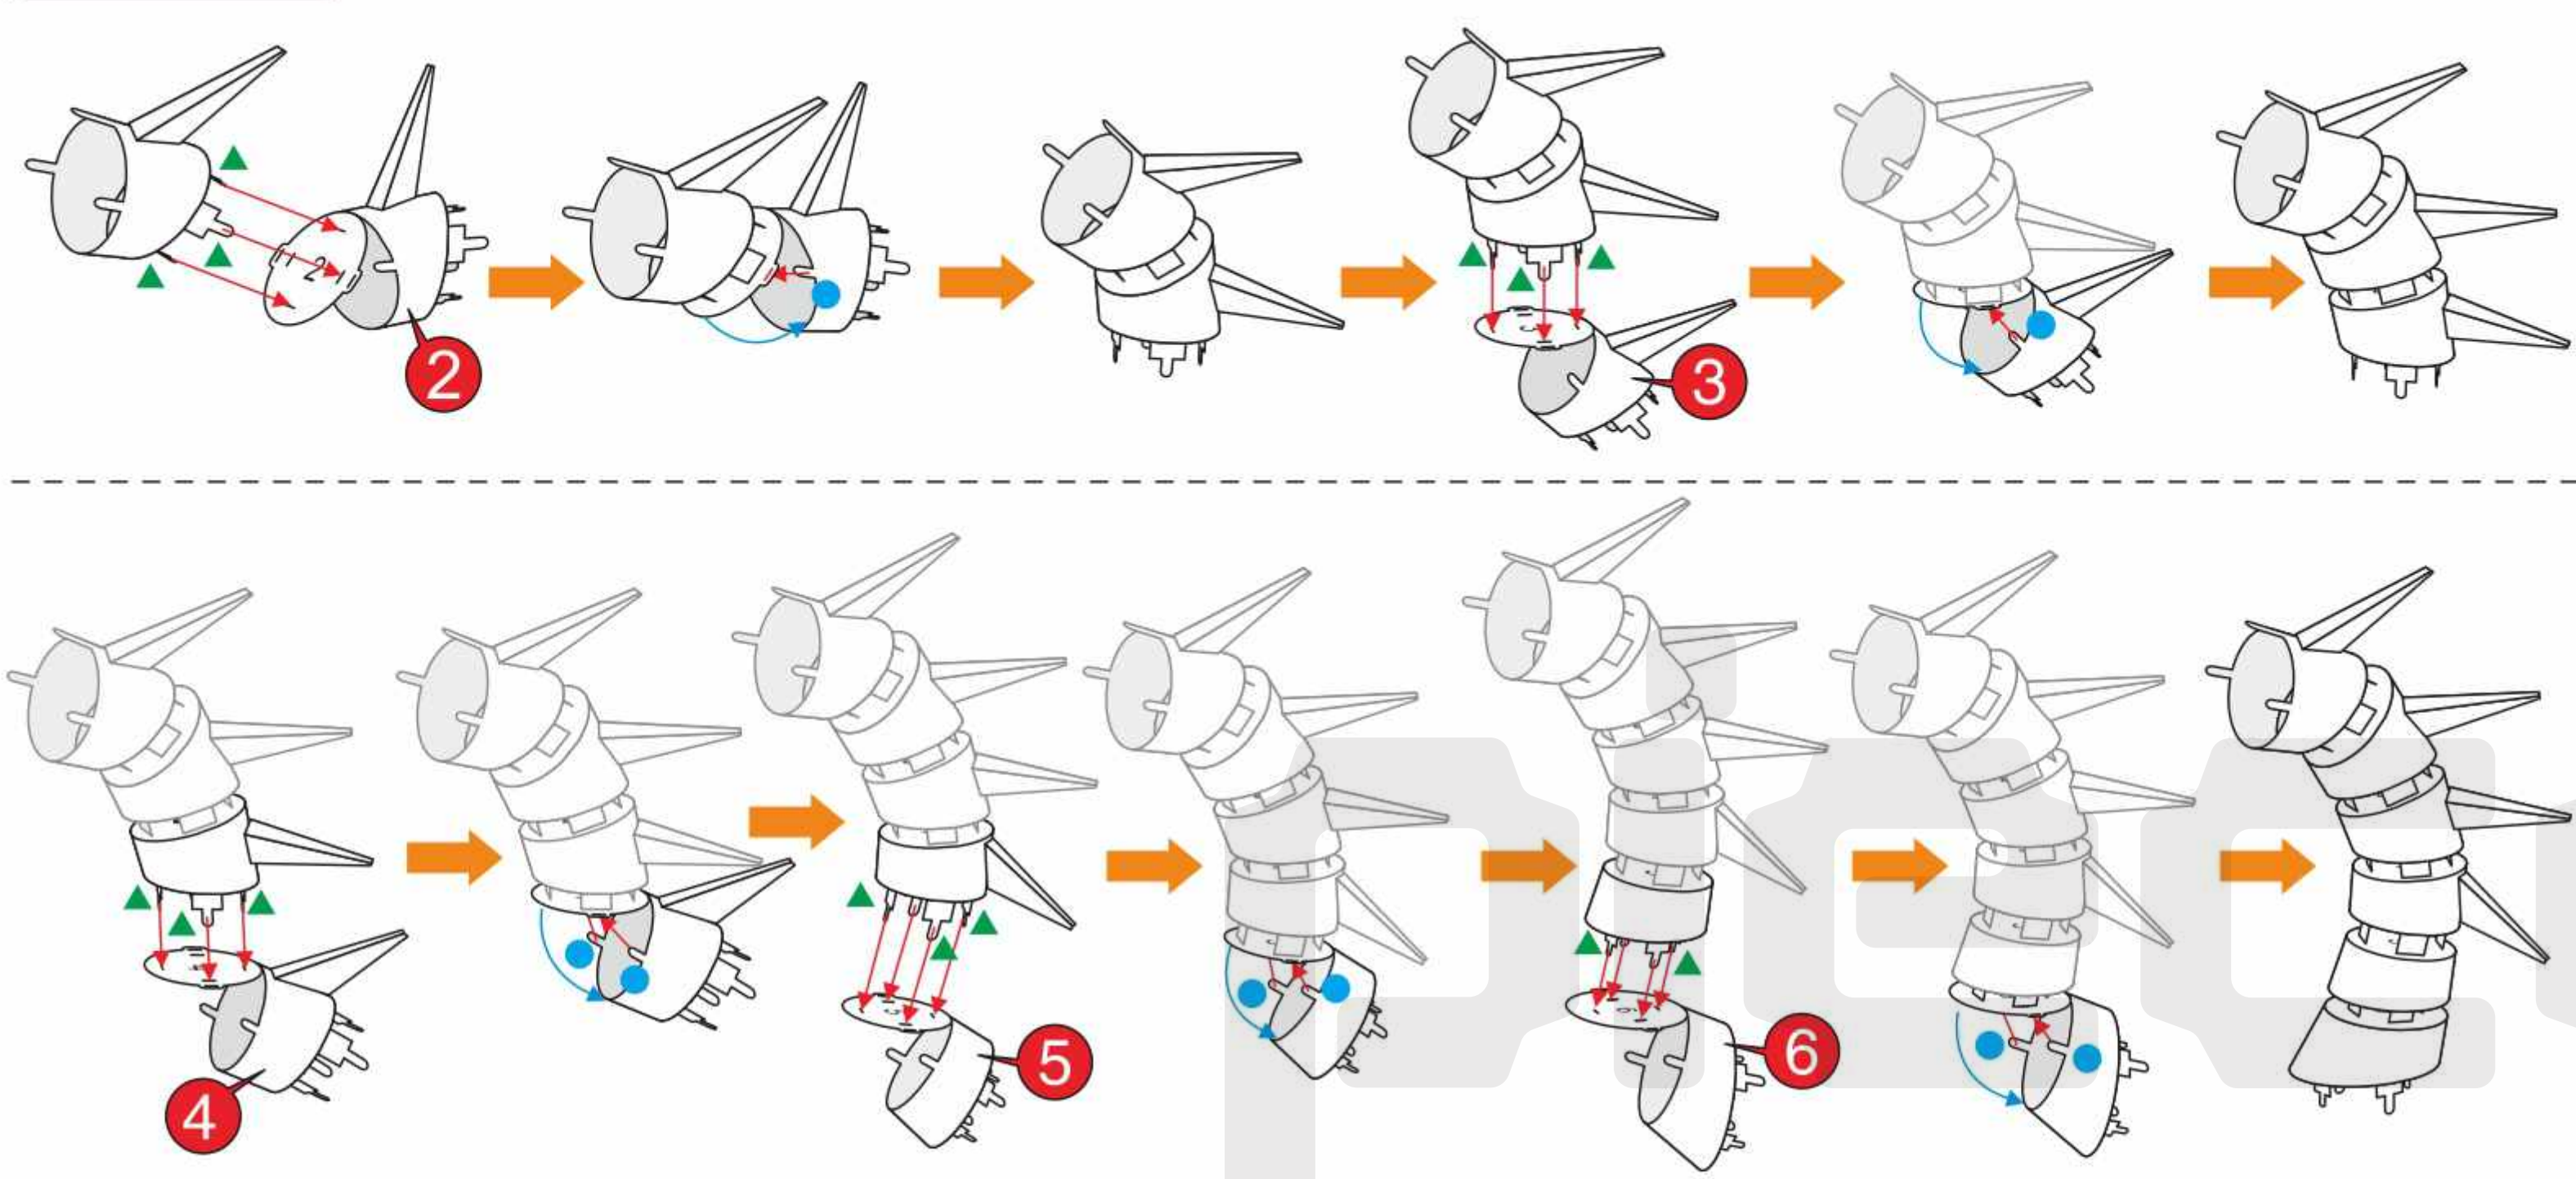


Step 8

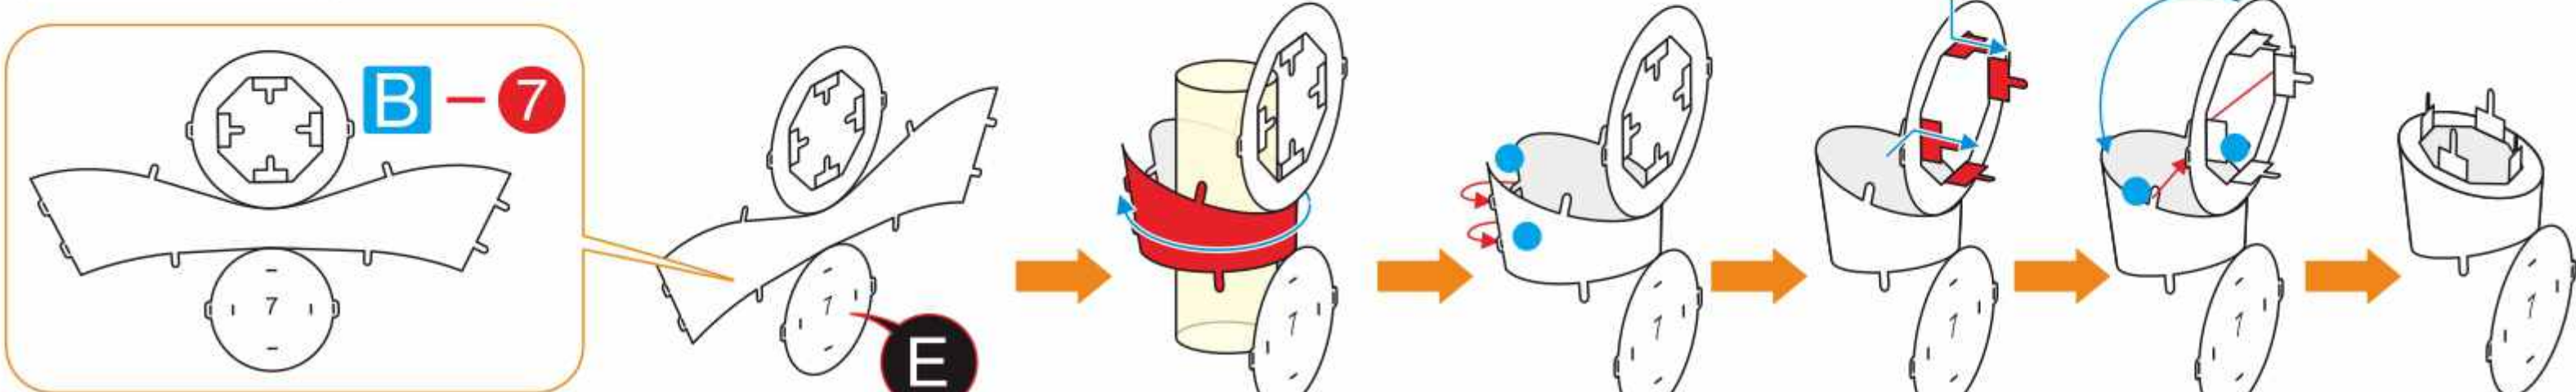


Step 9

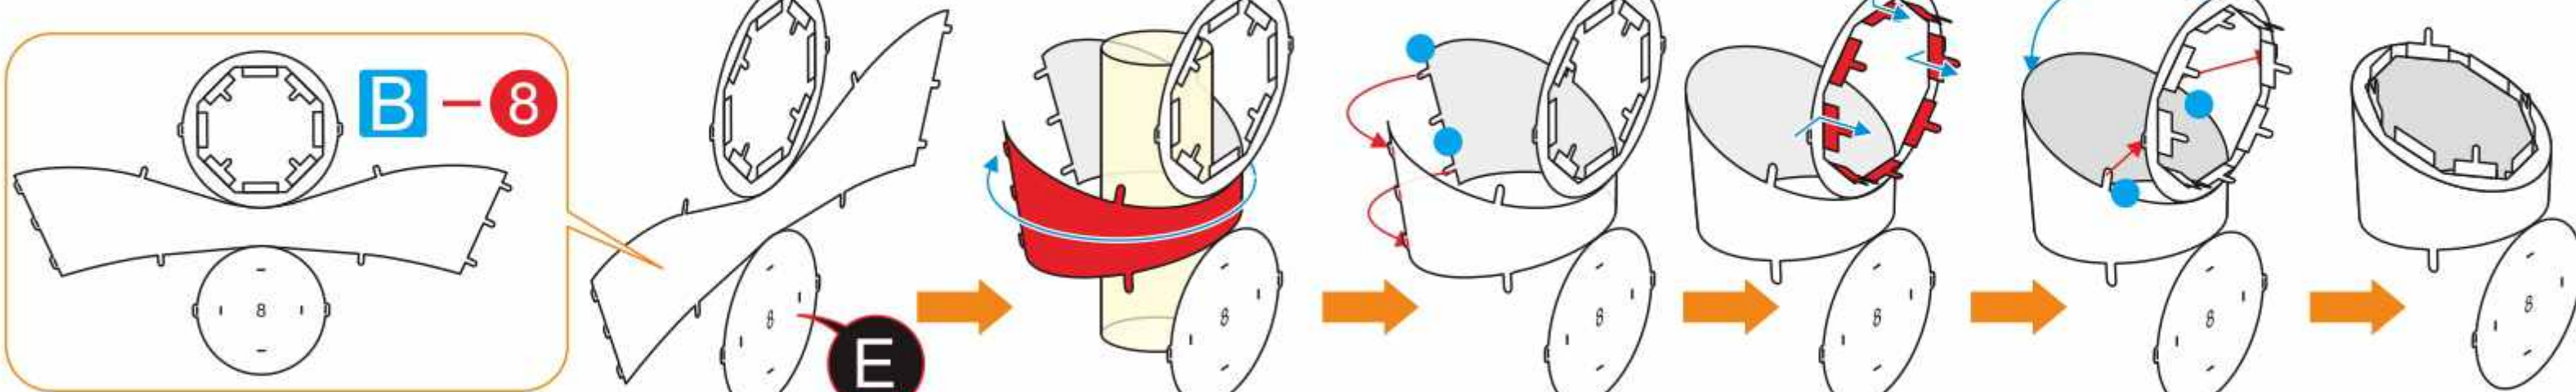


Step 10

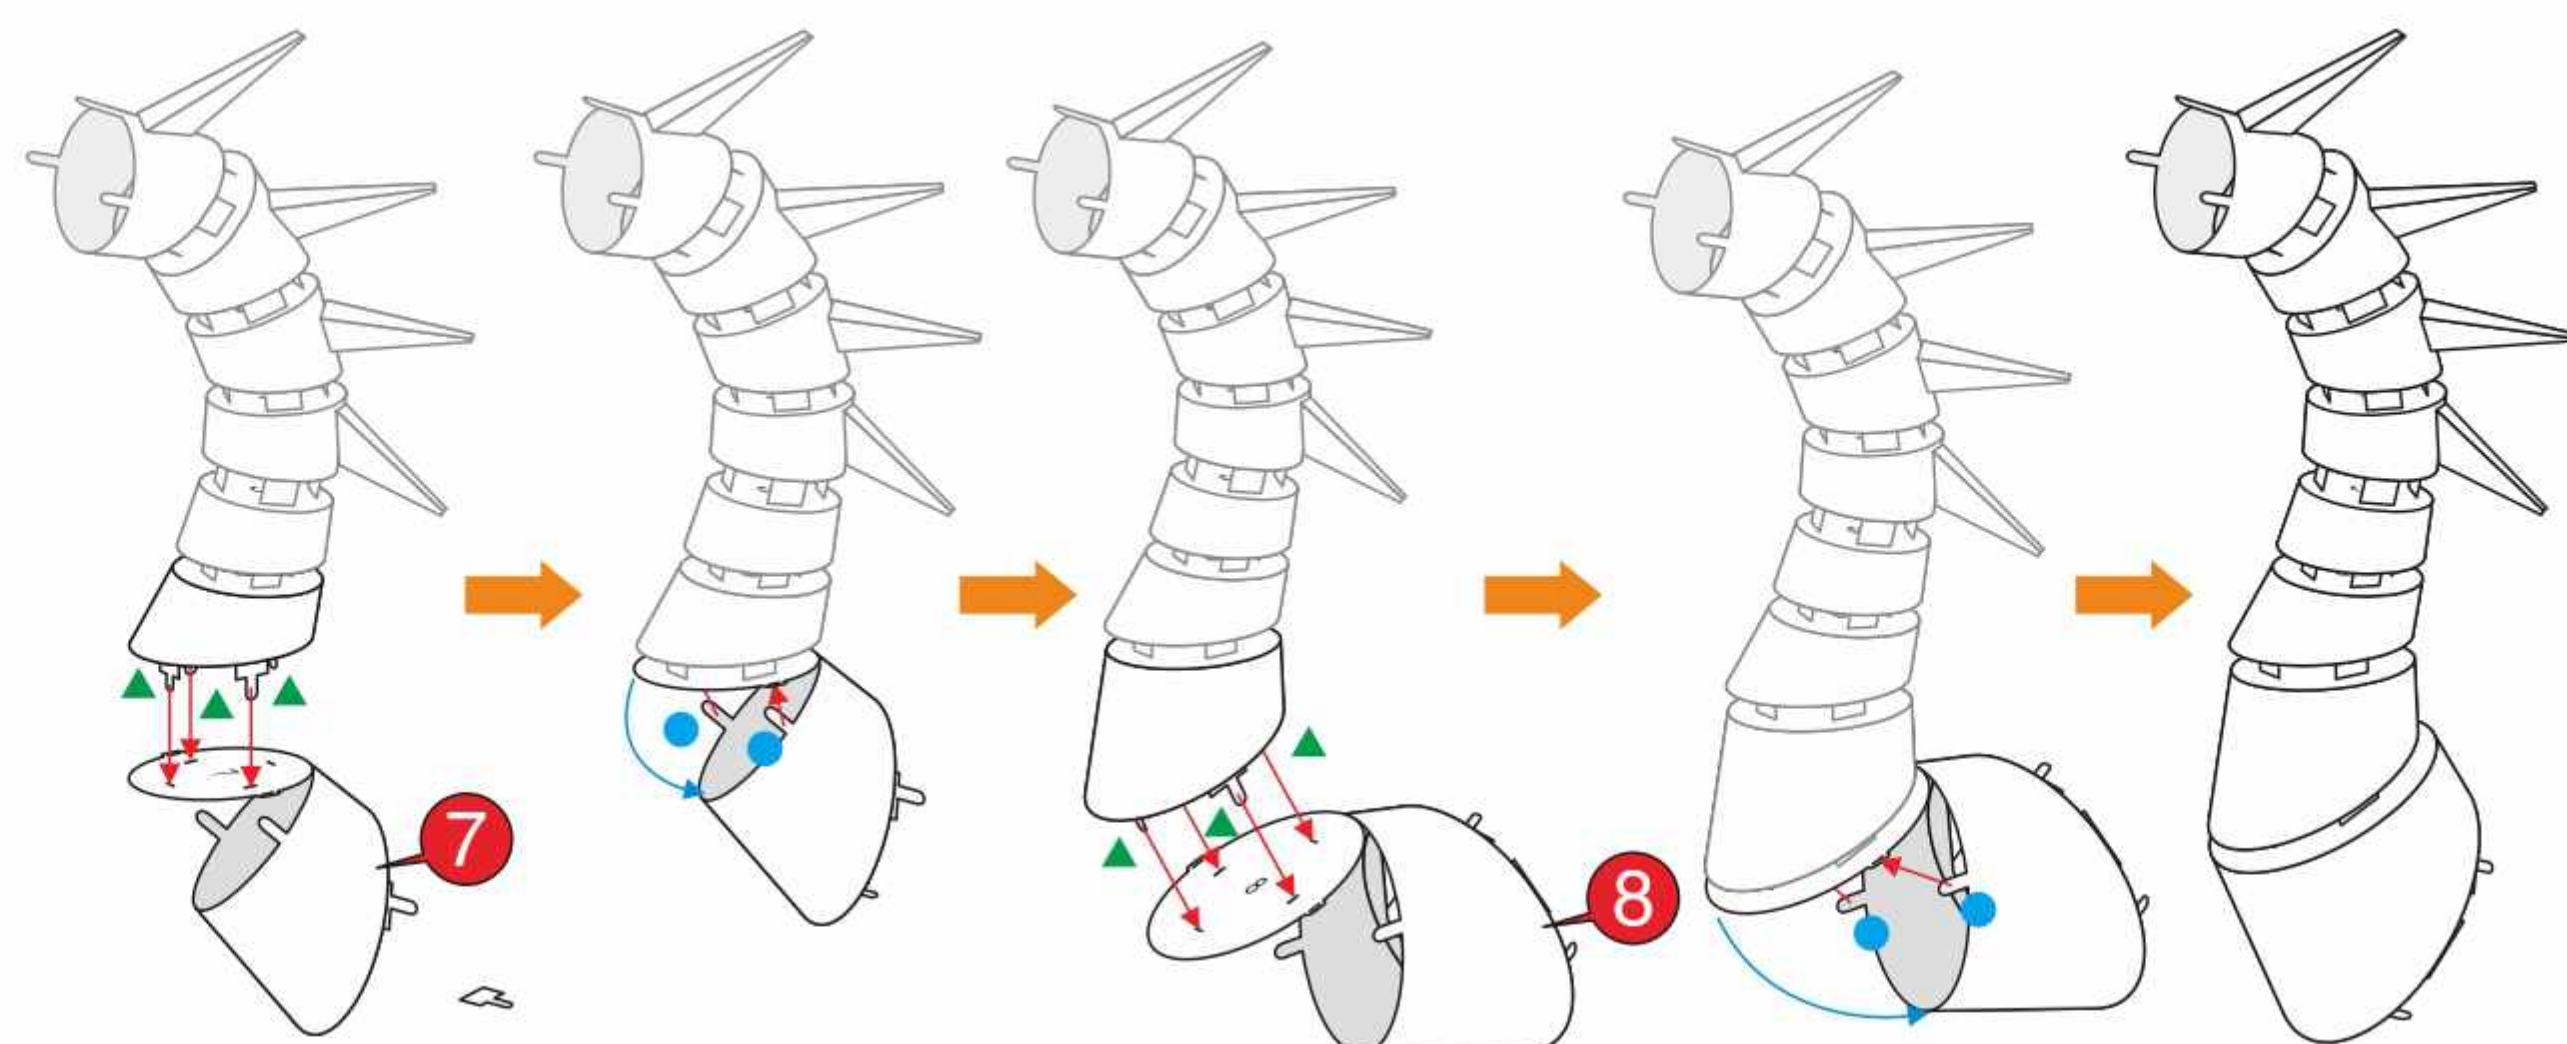


Step 11

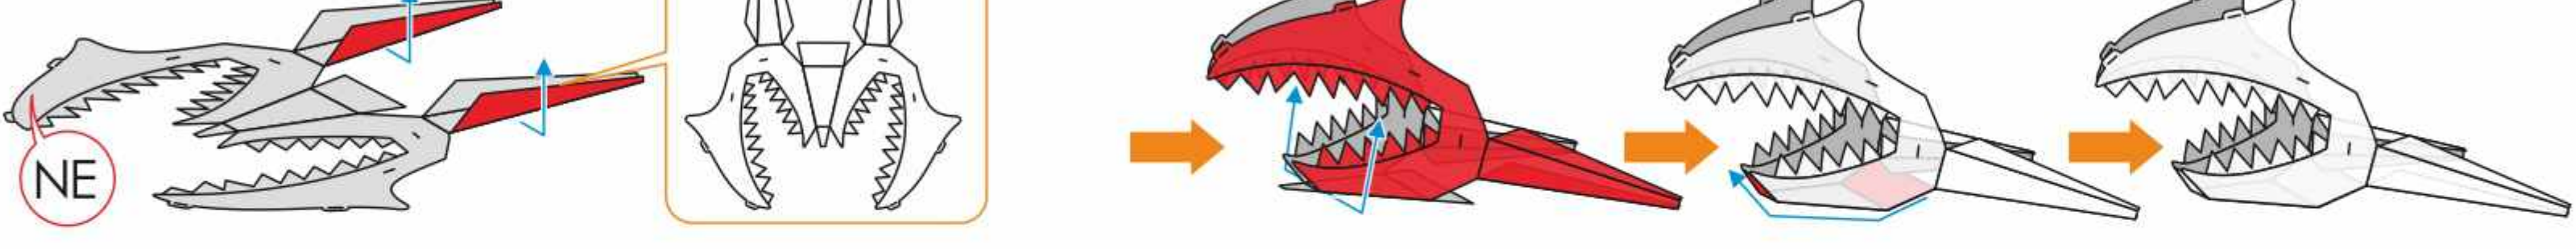


Step 12

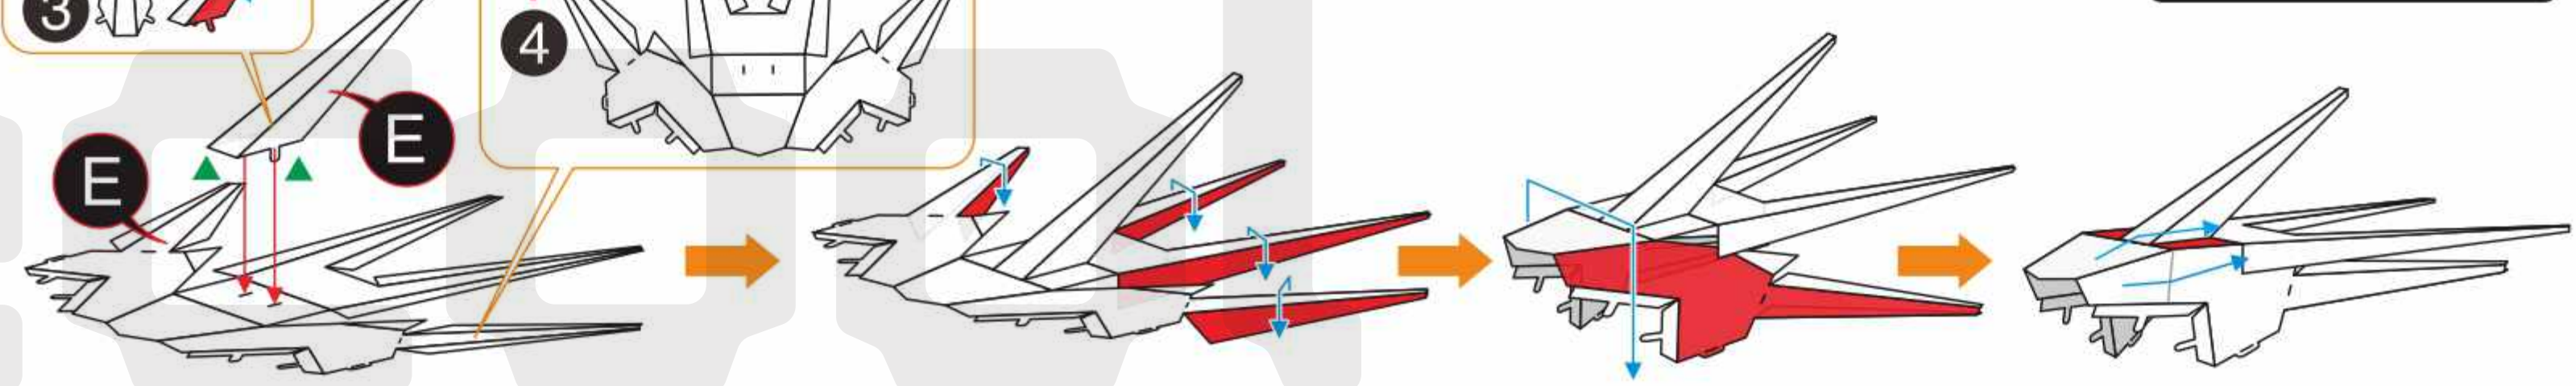


Step 13

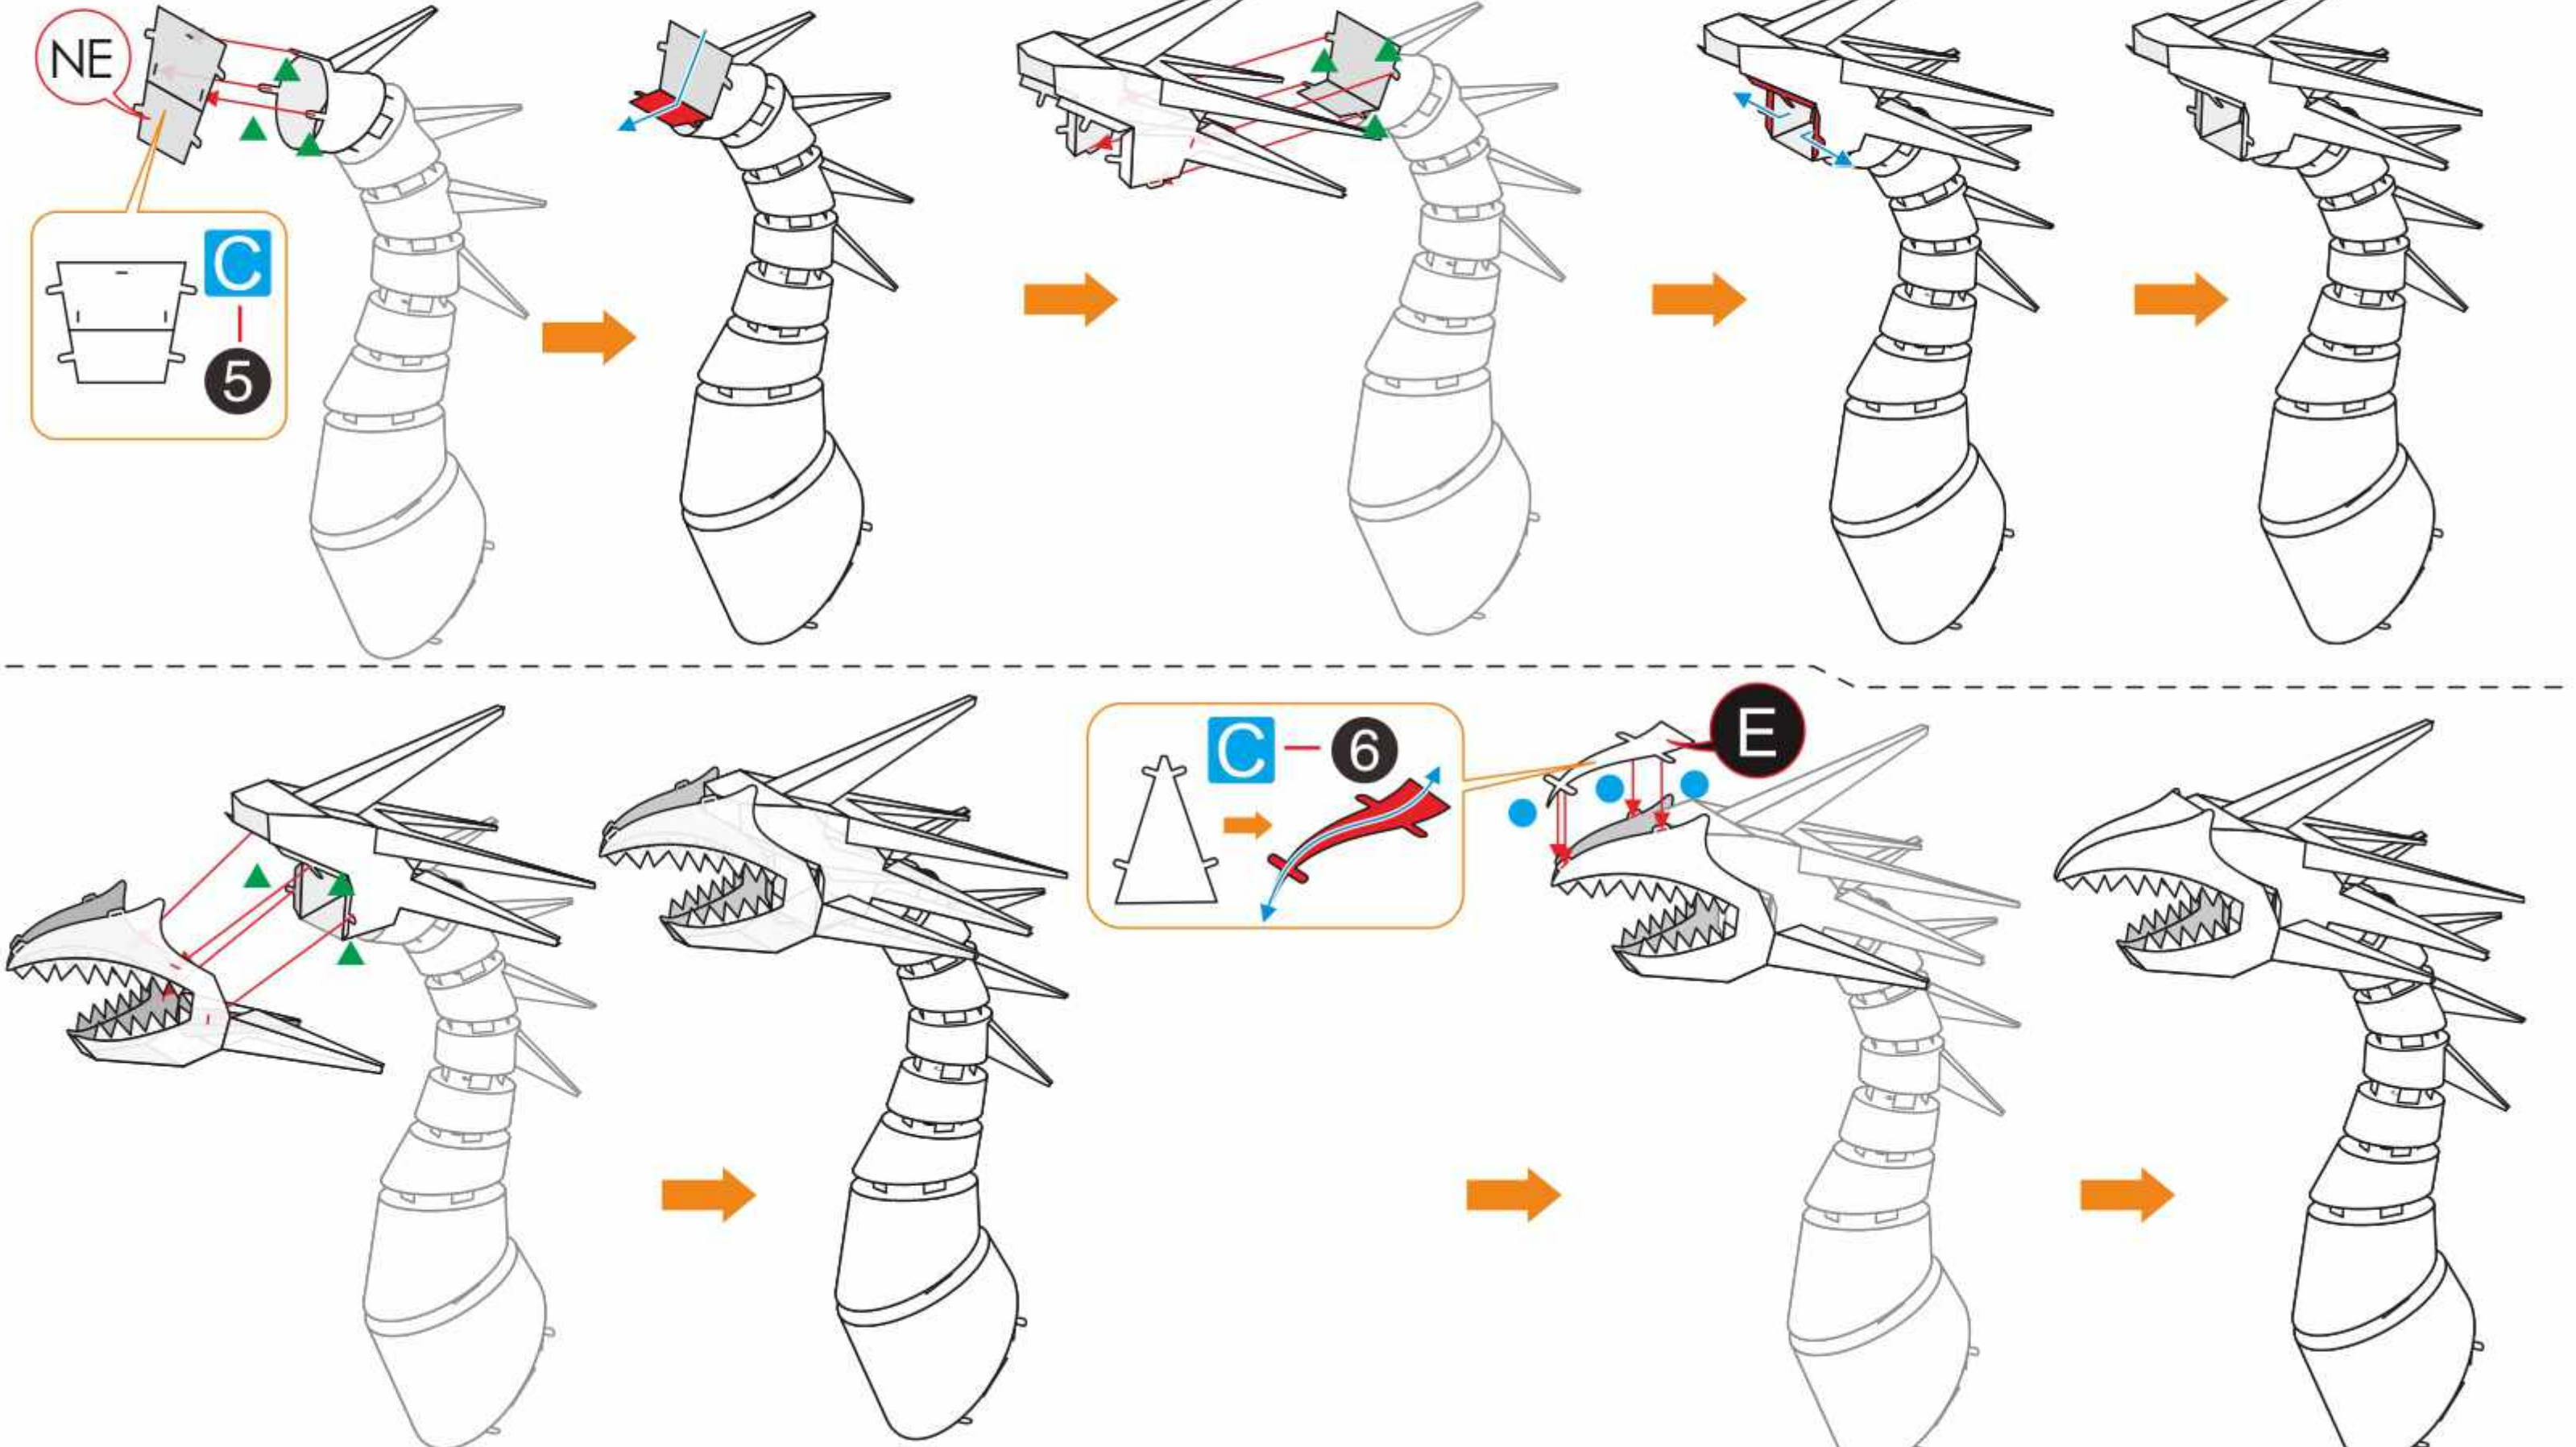


Step 14

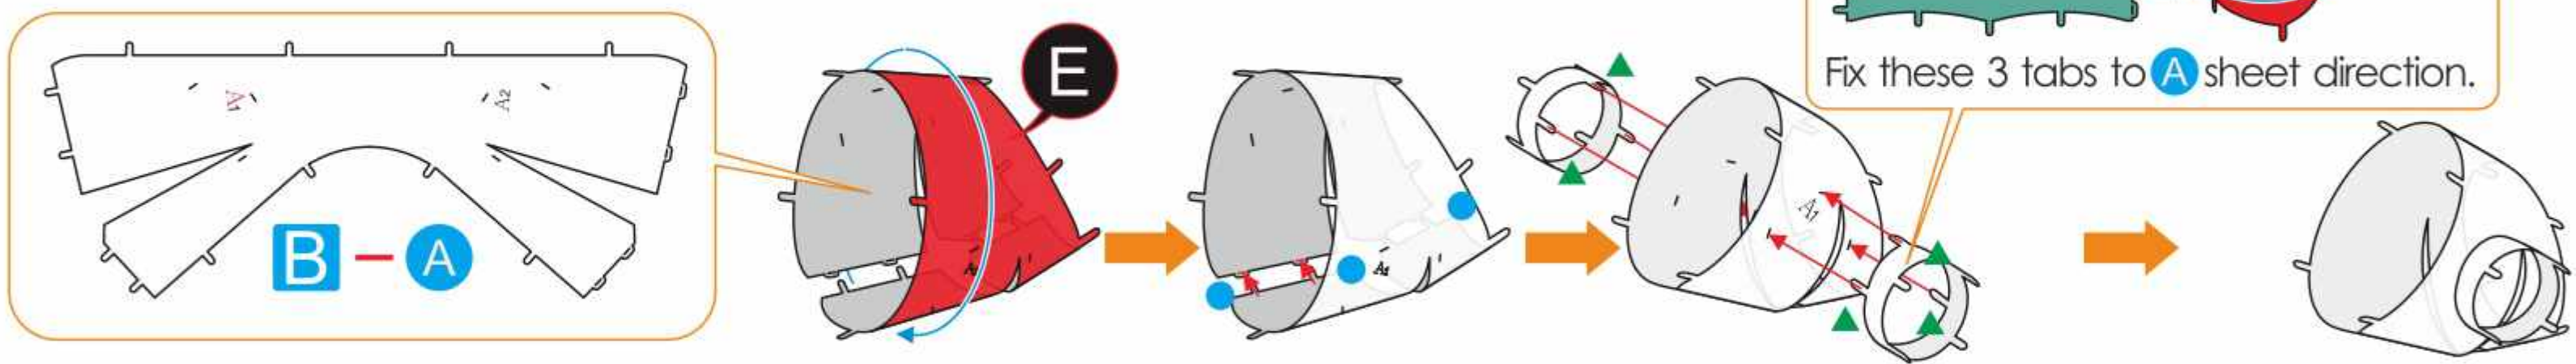




Step 15

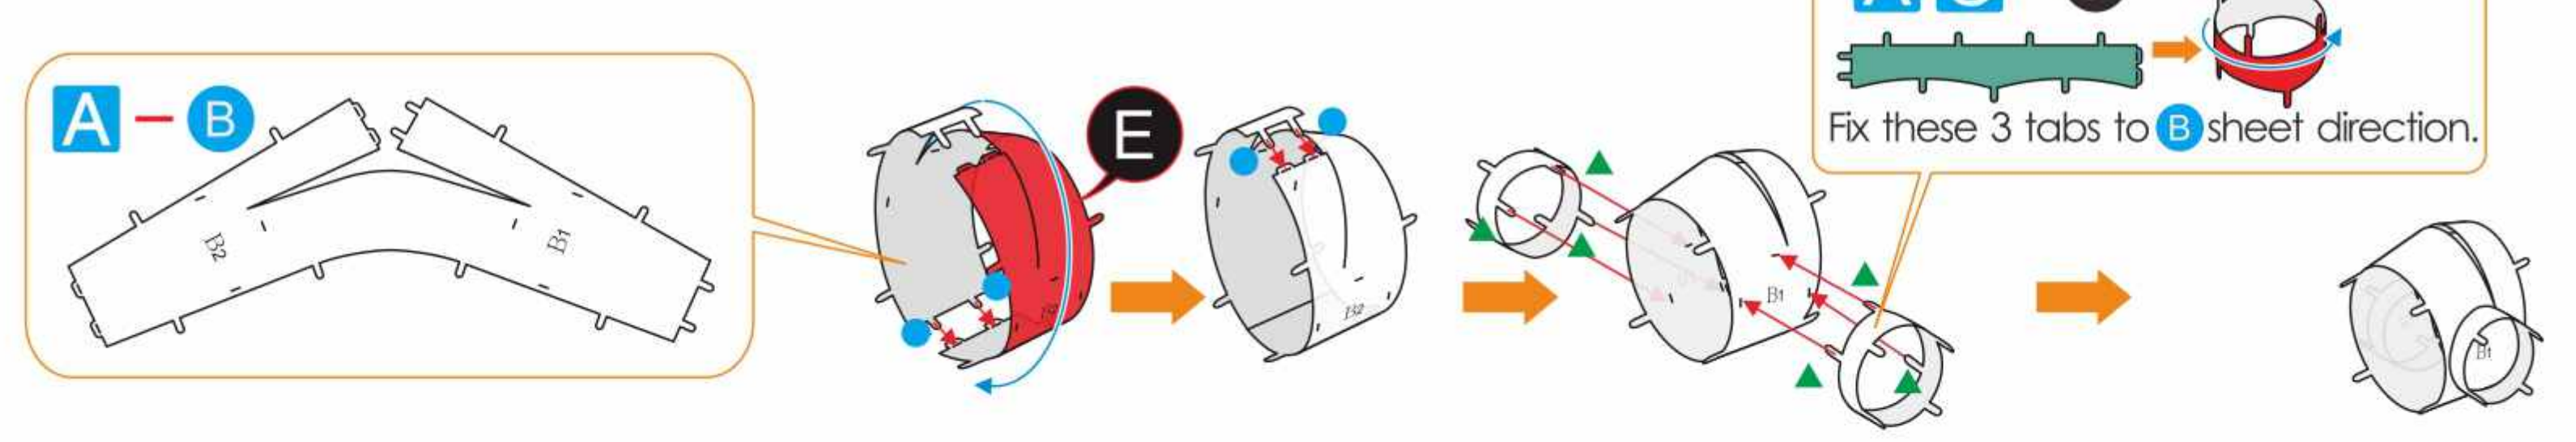



Step 16

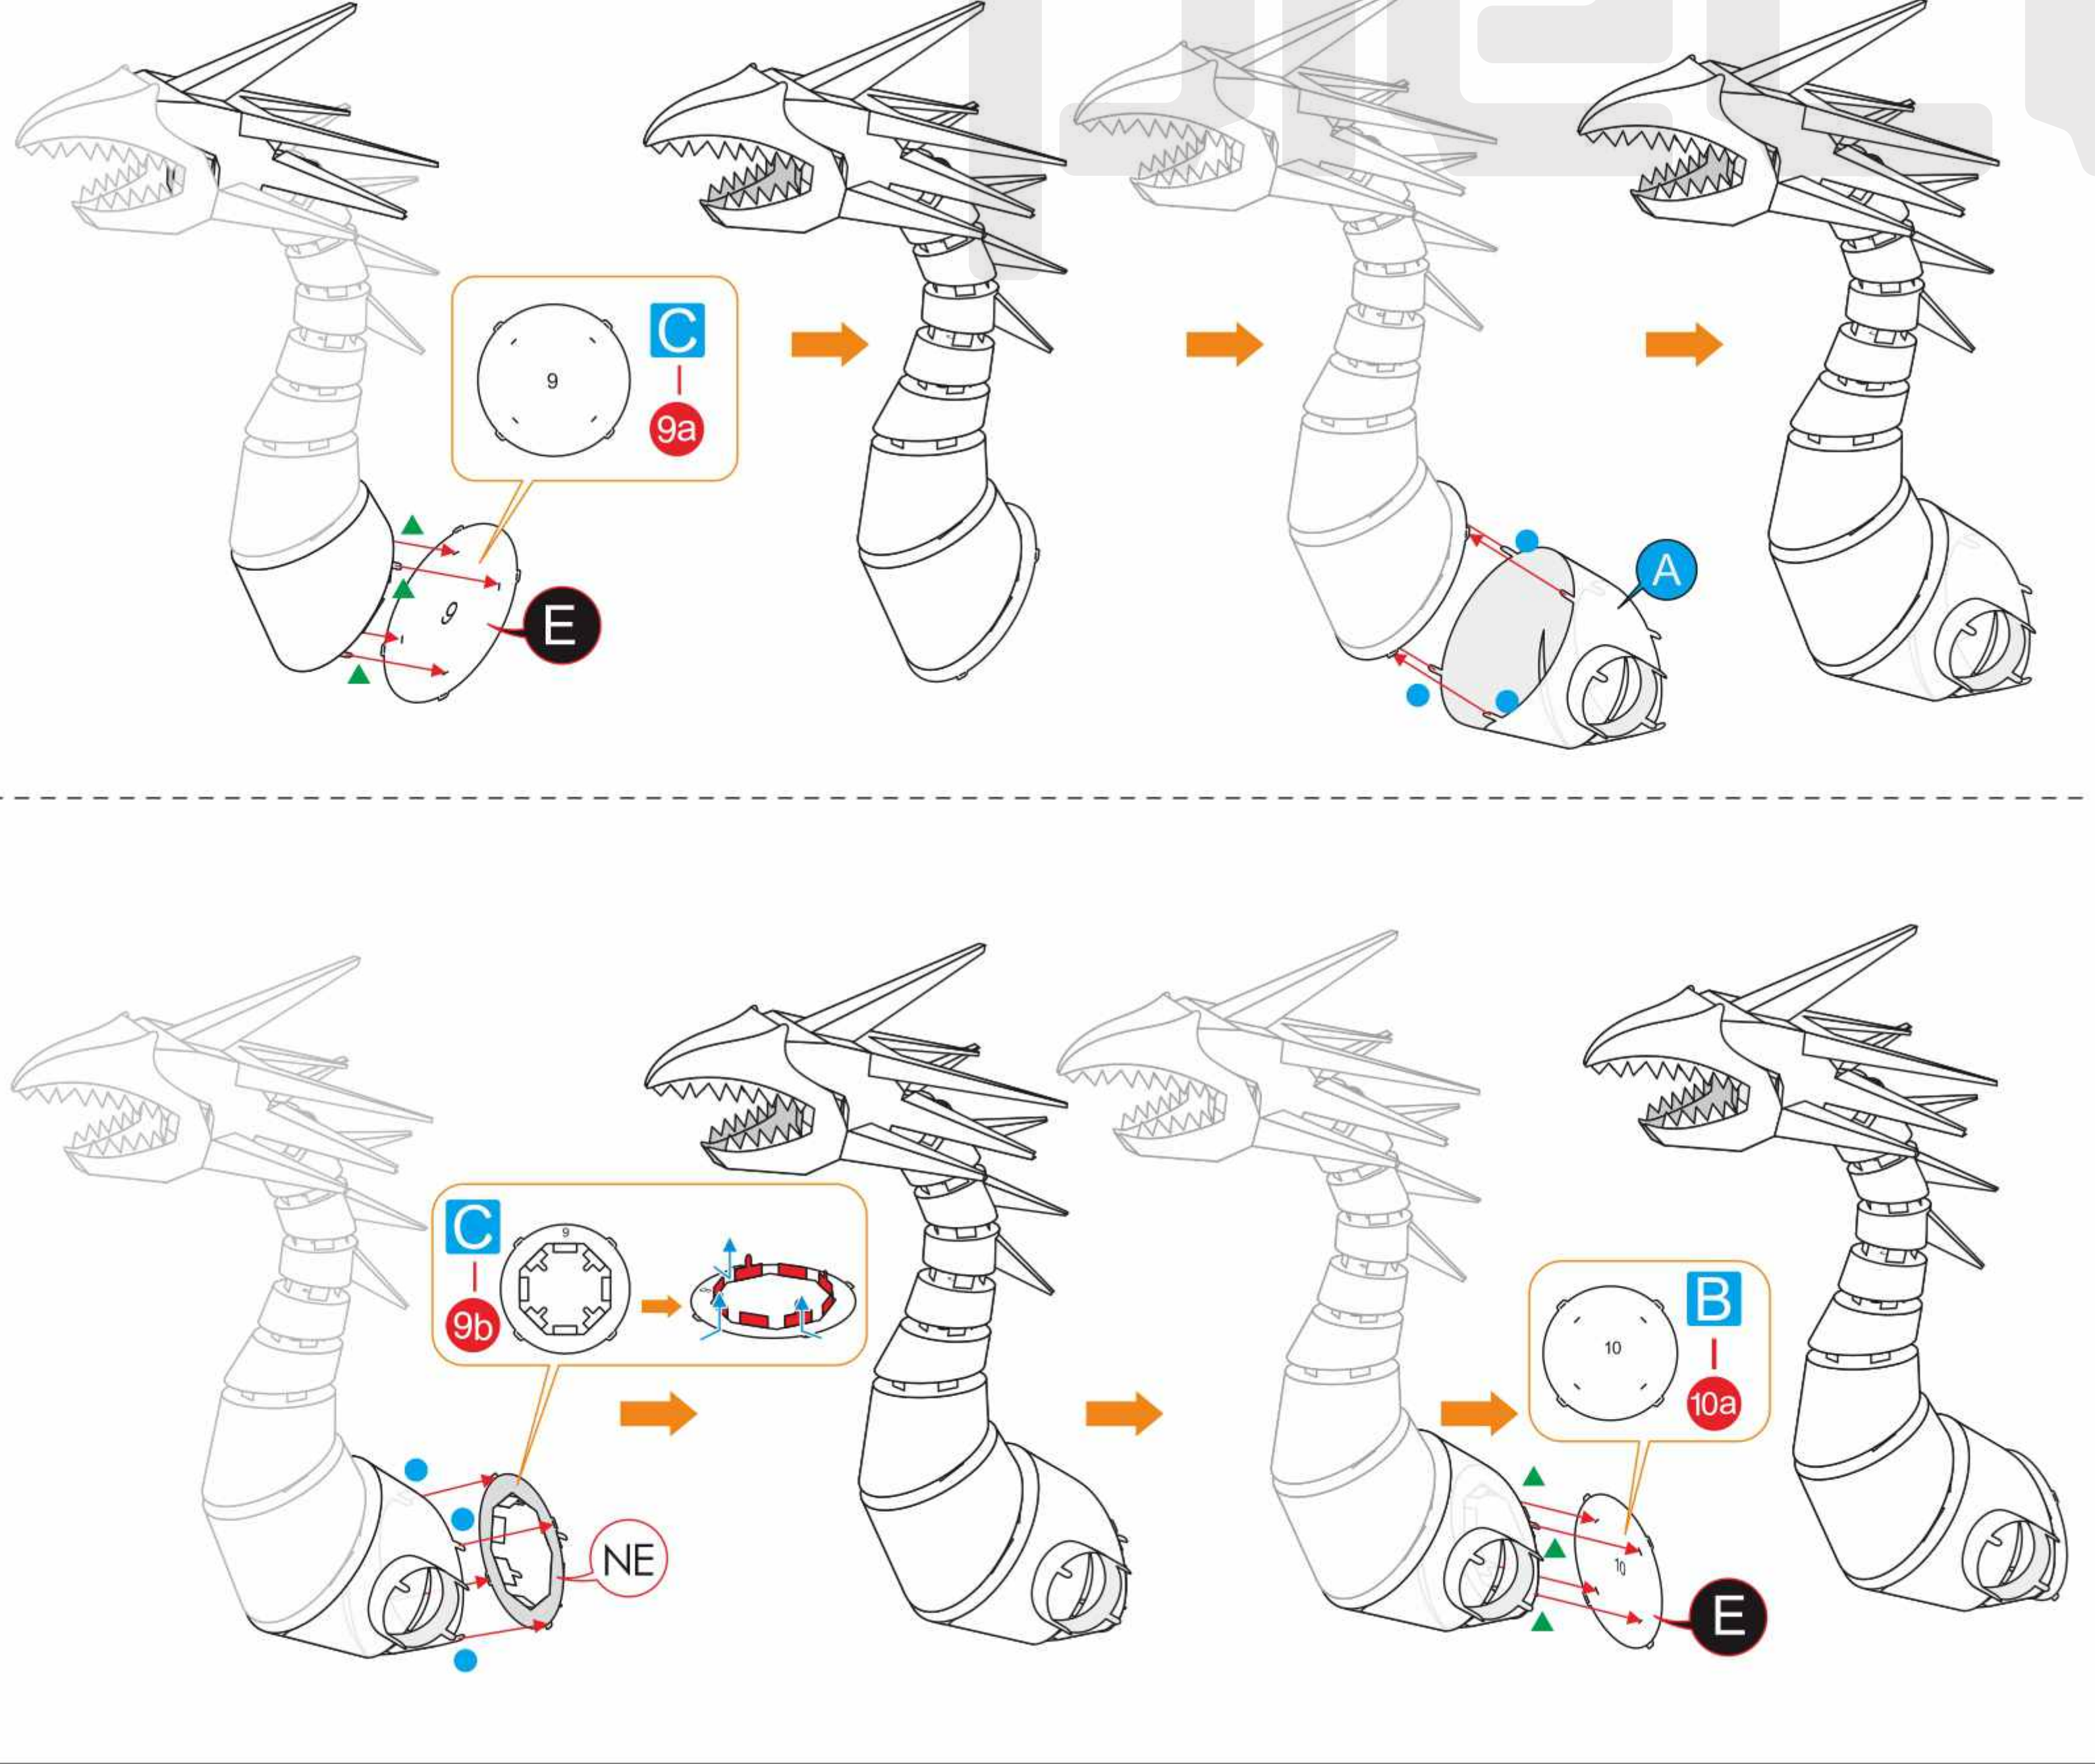

Step 17

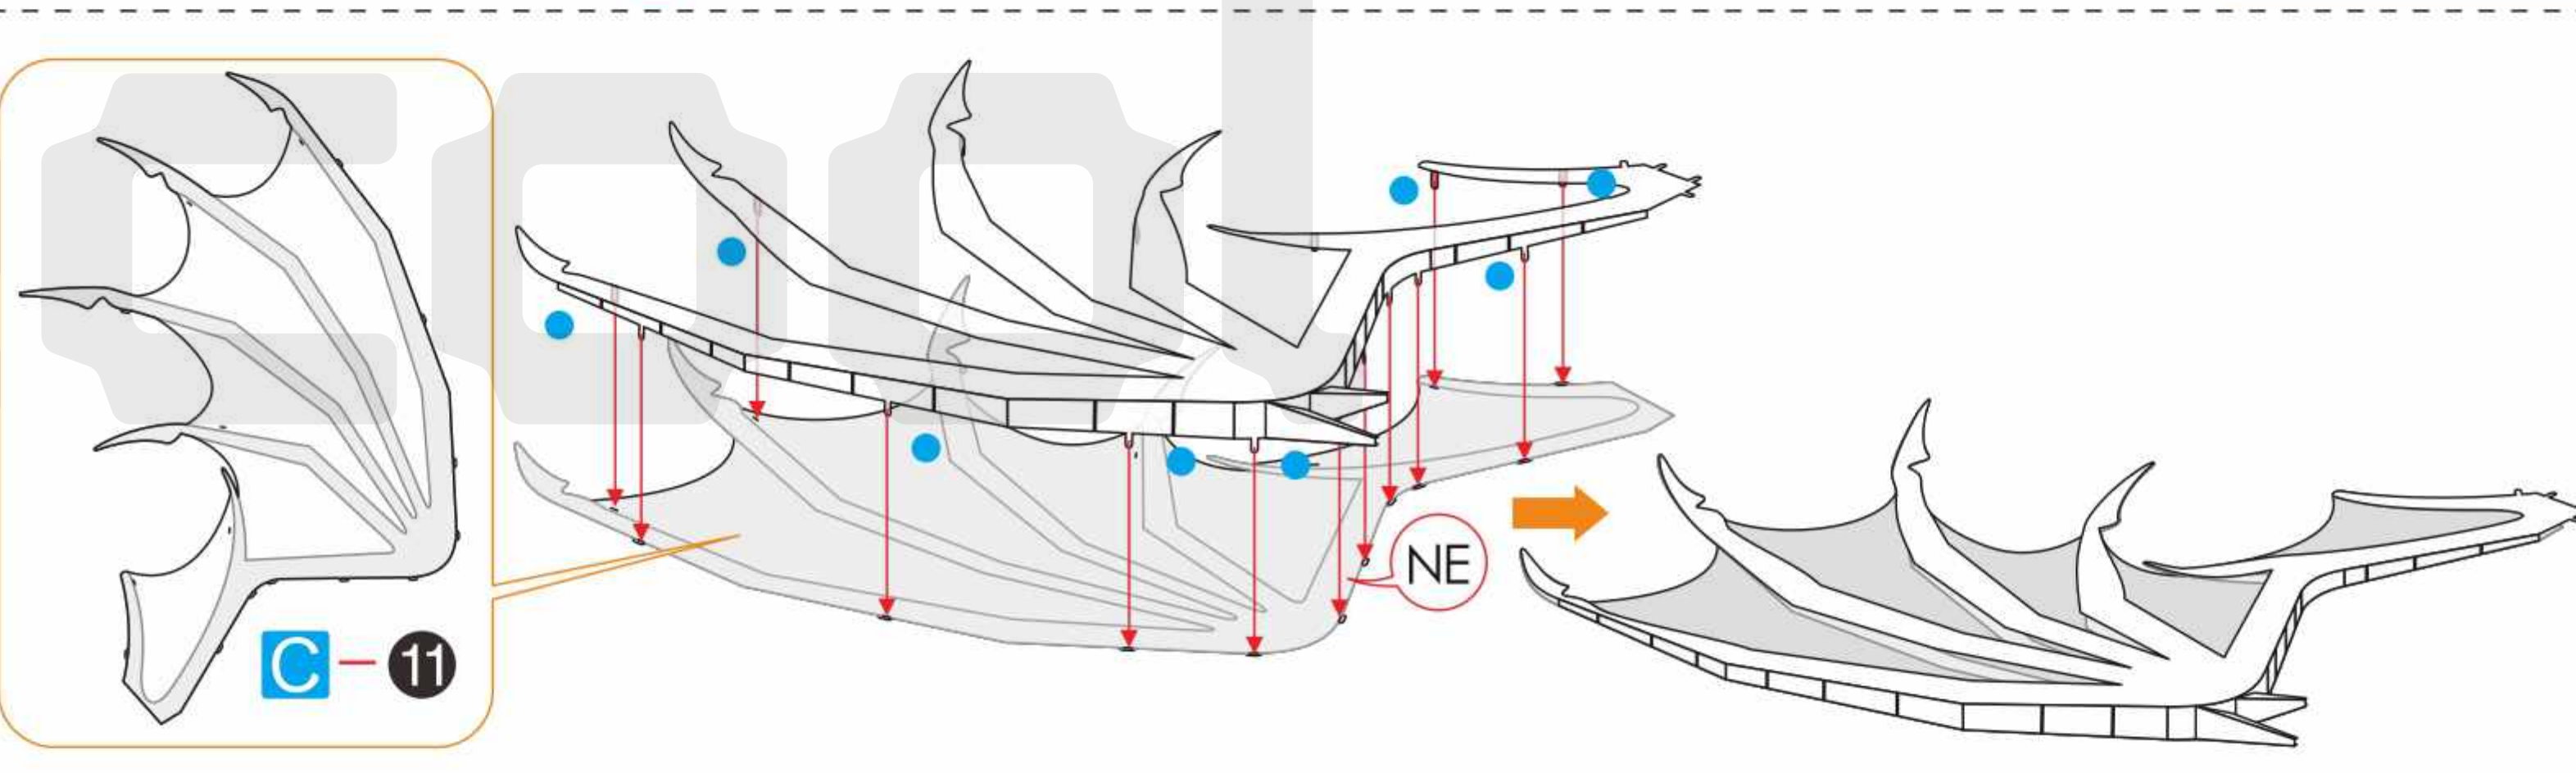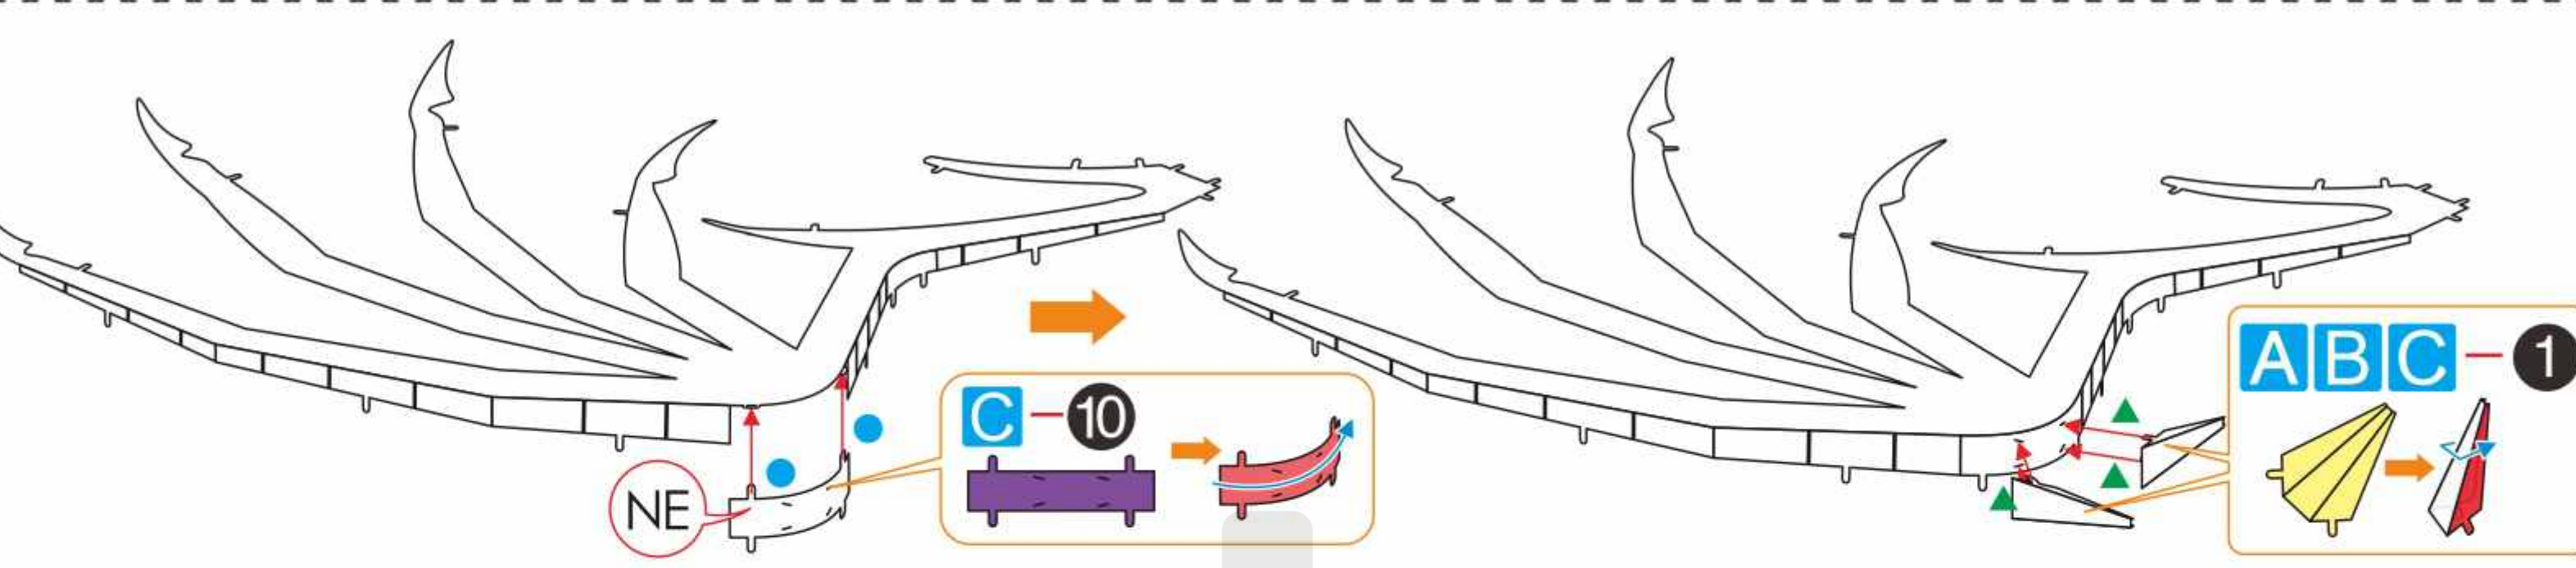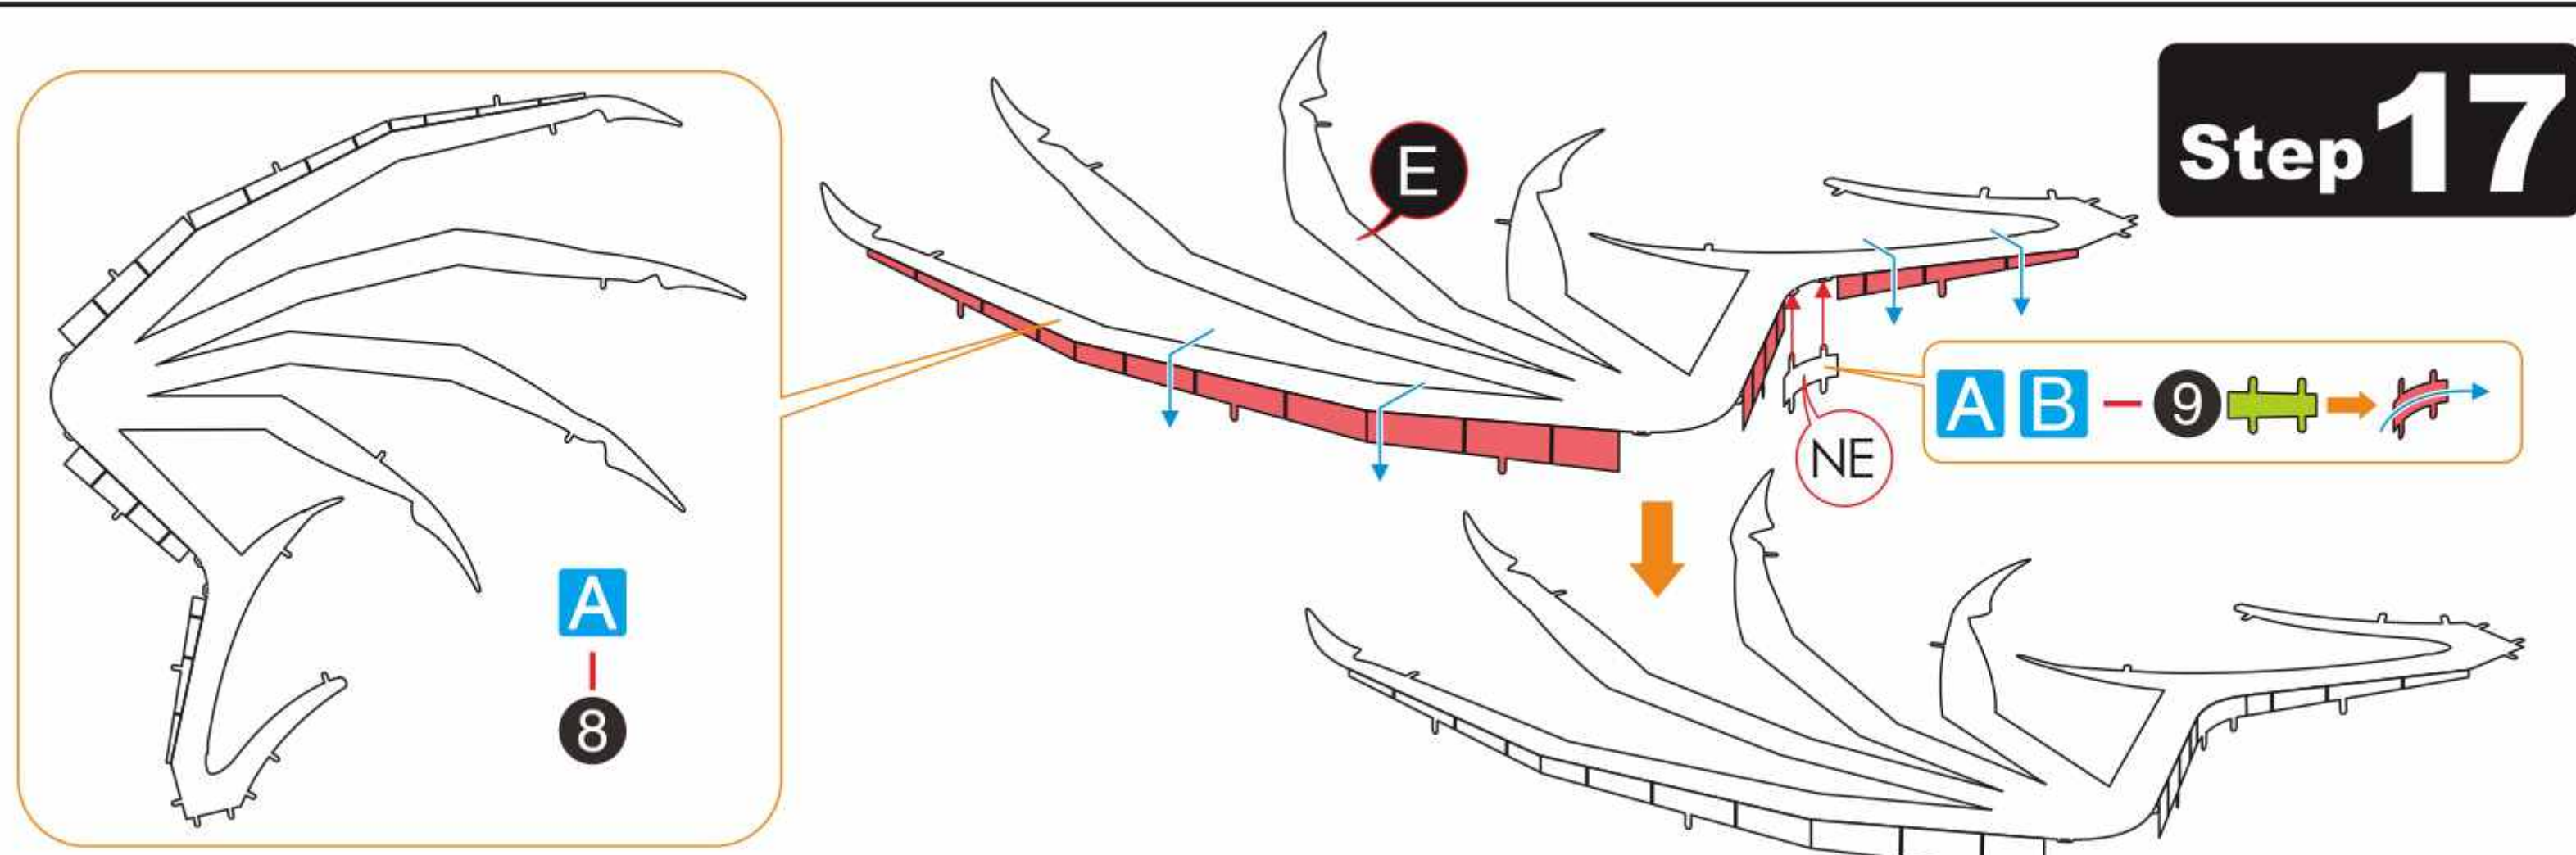


Step 18

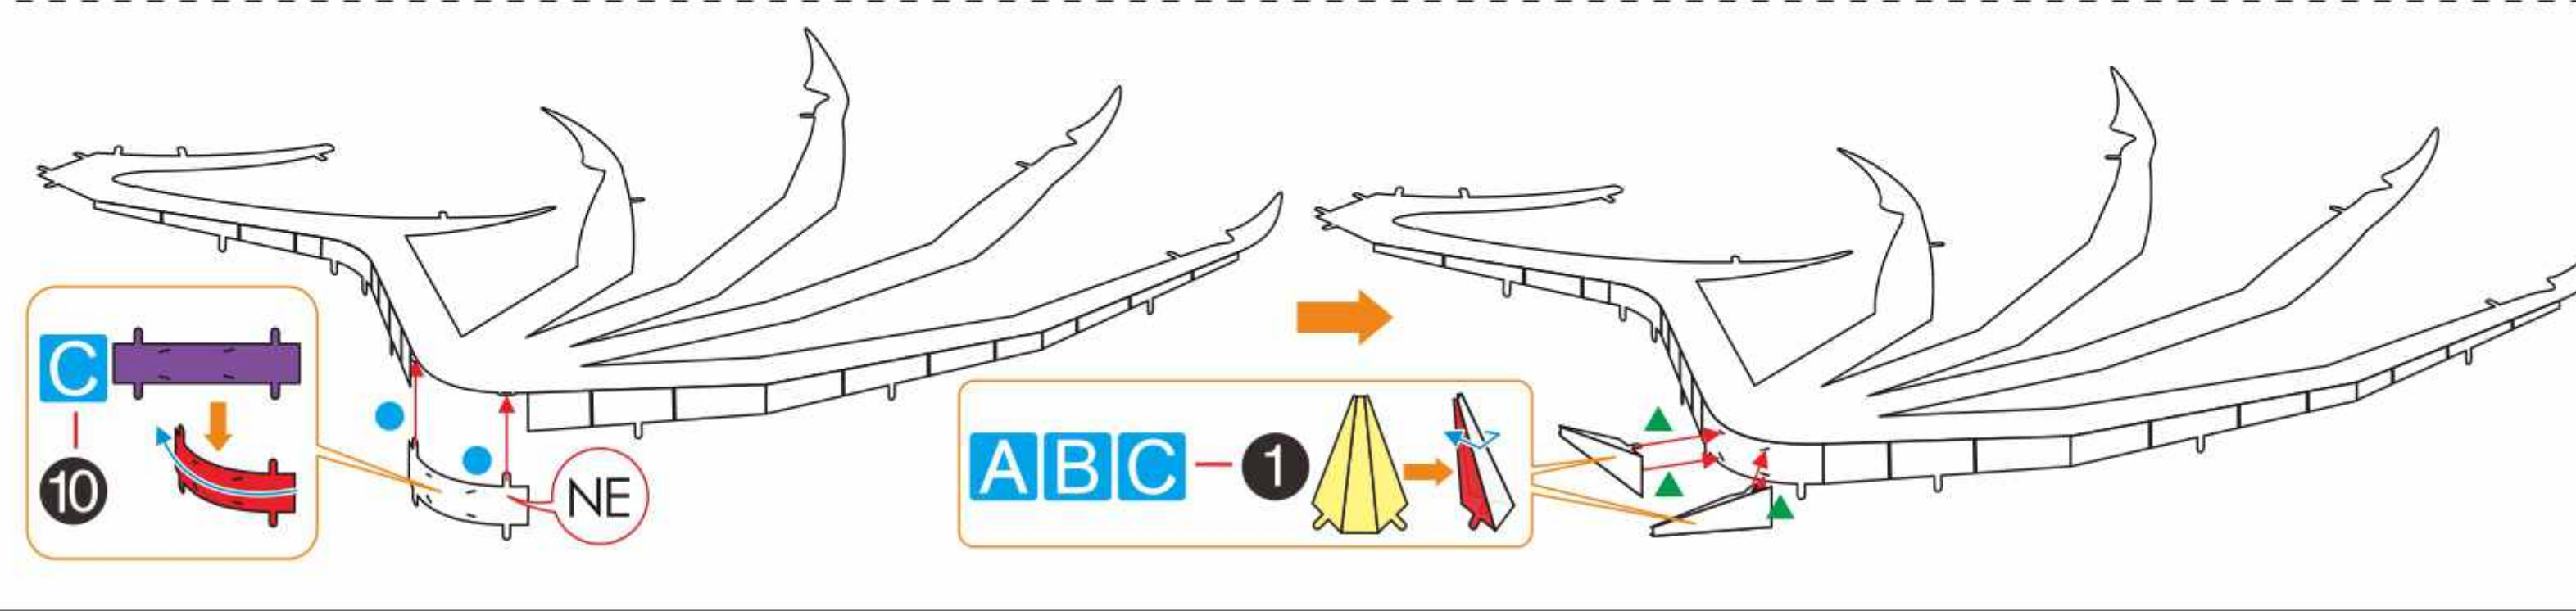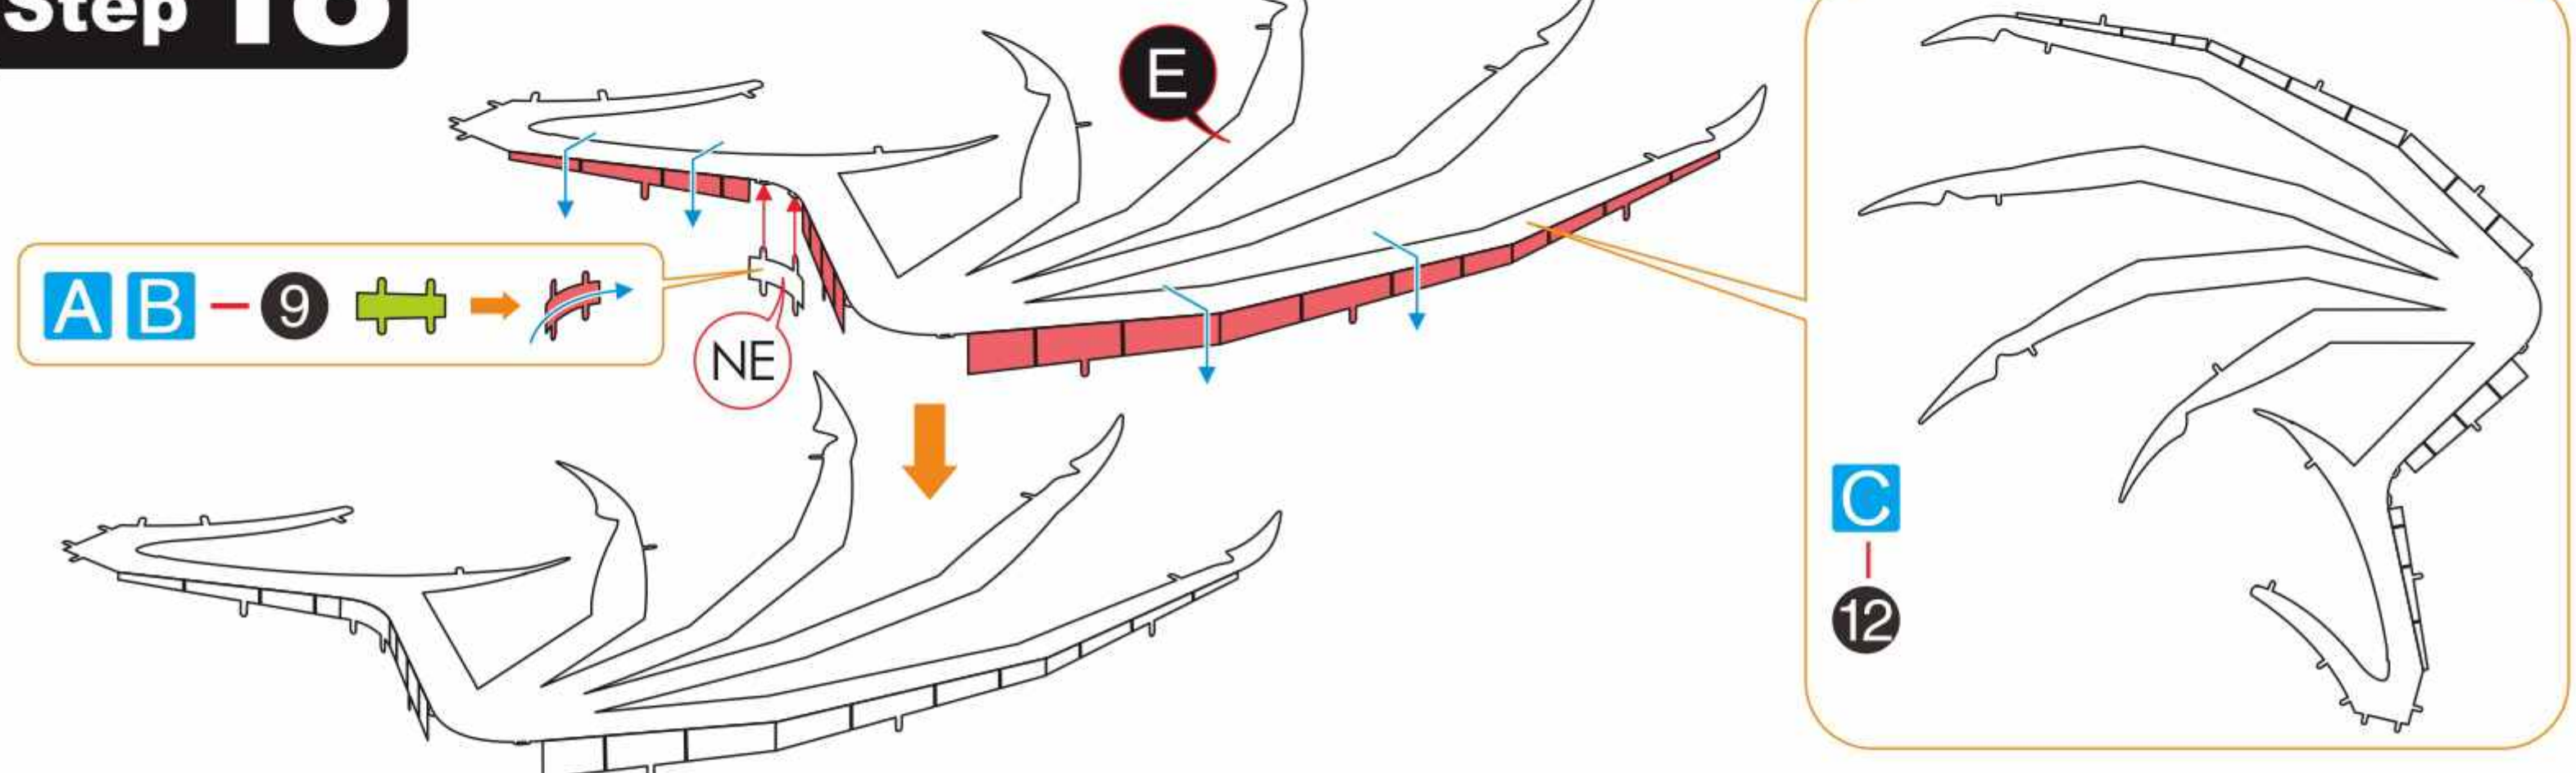


5 6
7 8




Step 19

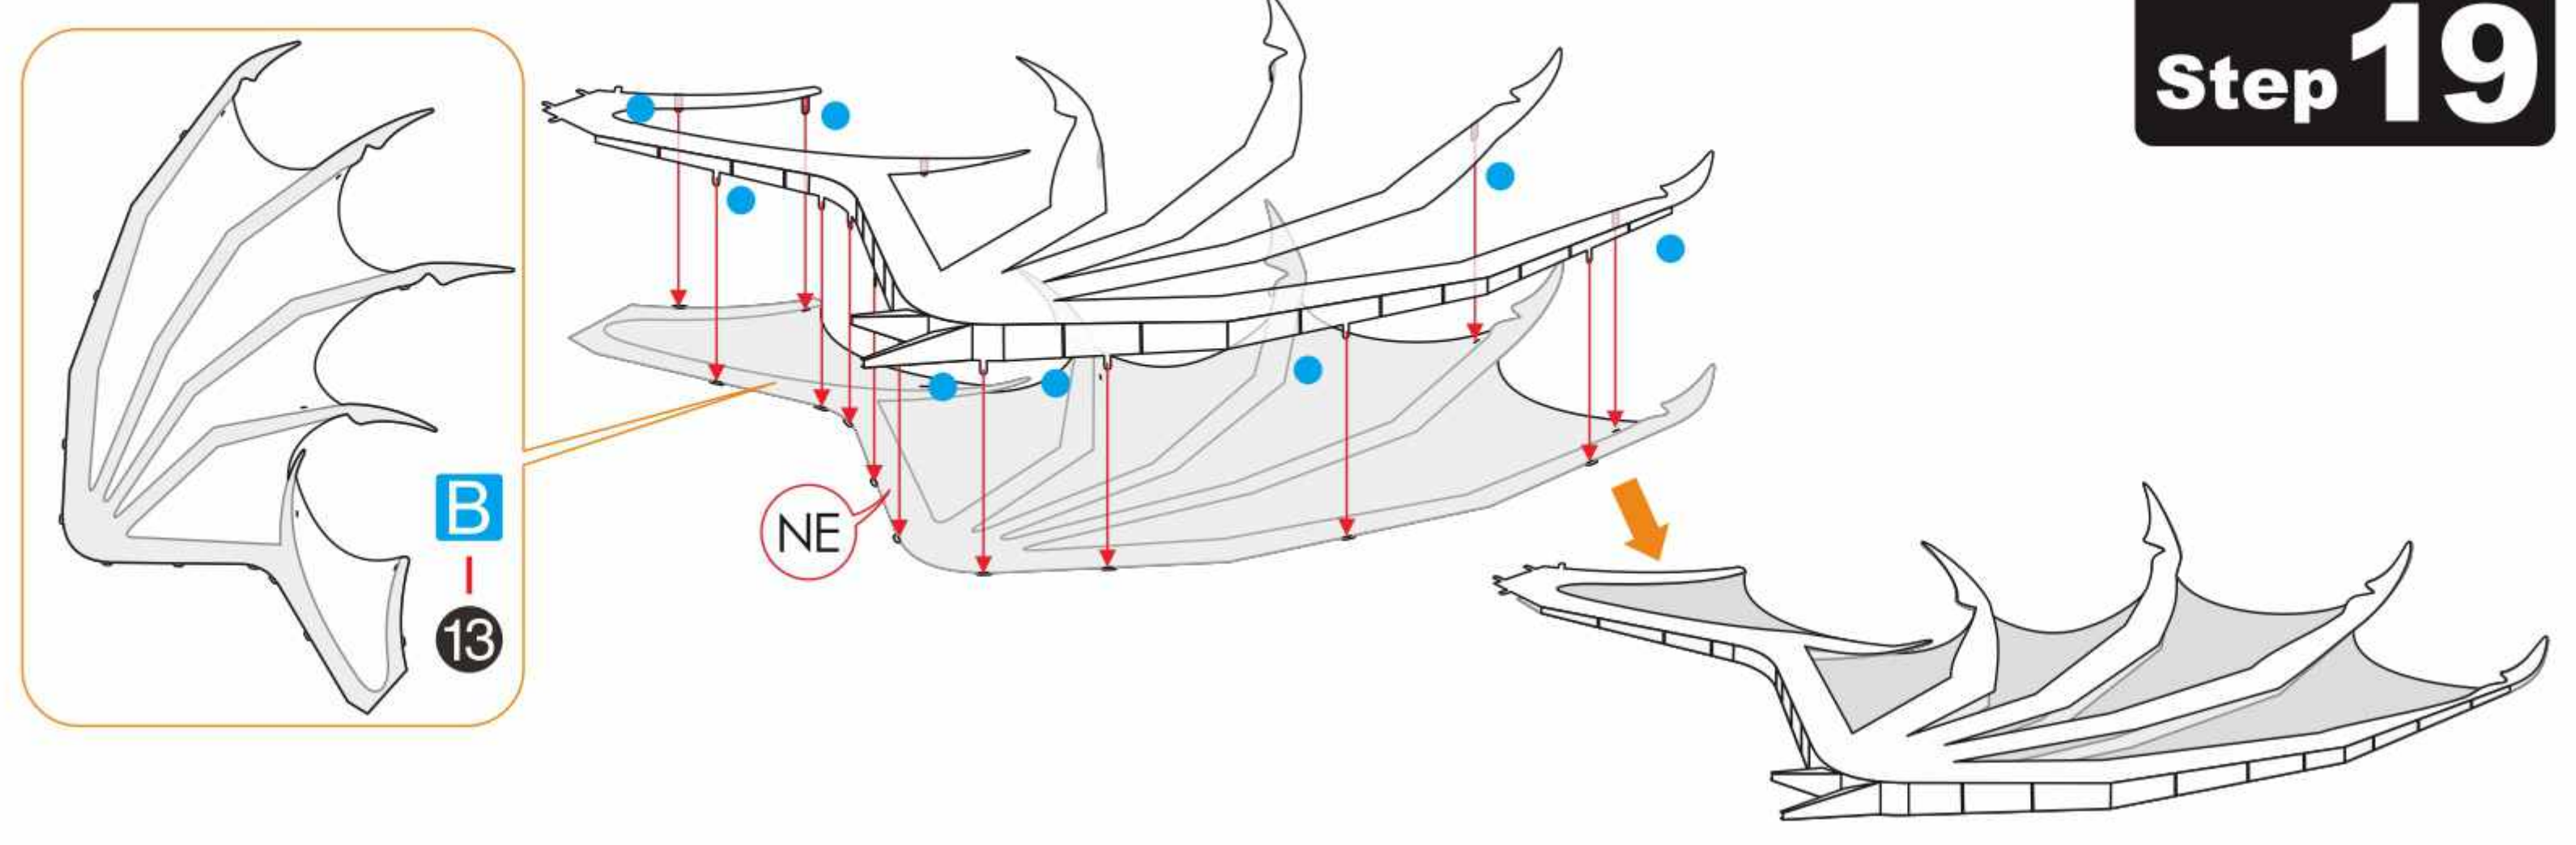


Step 20

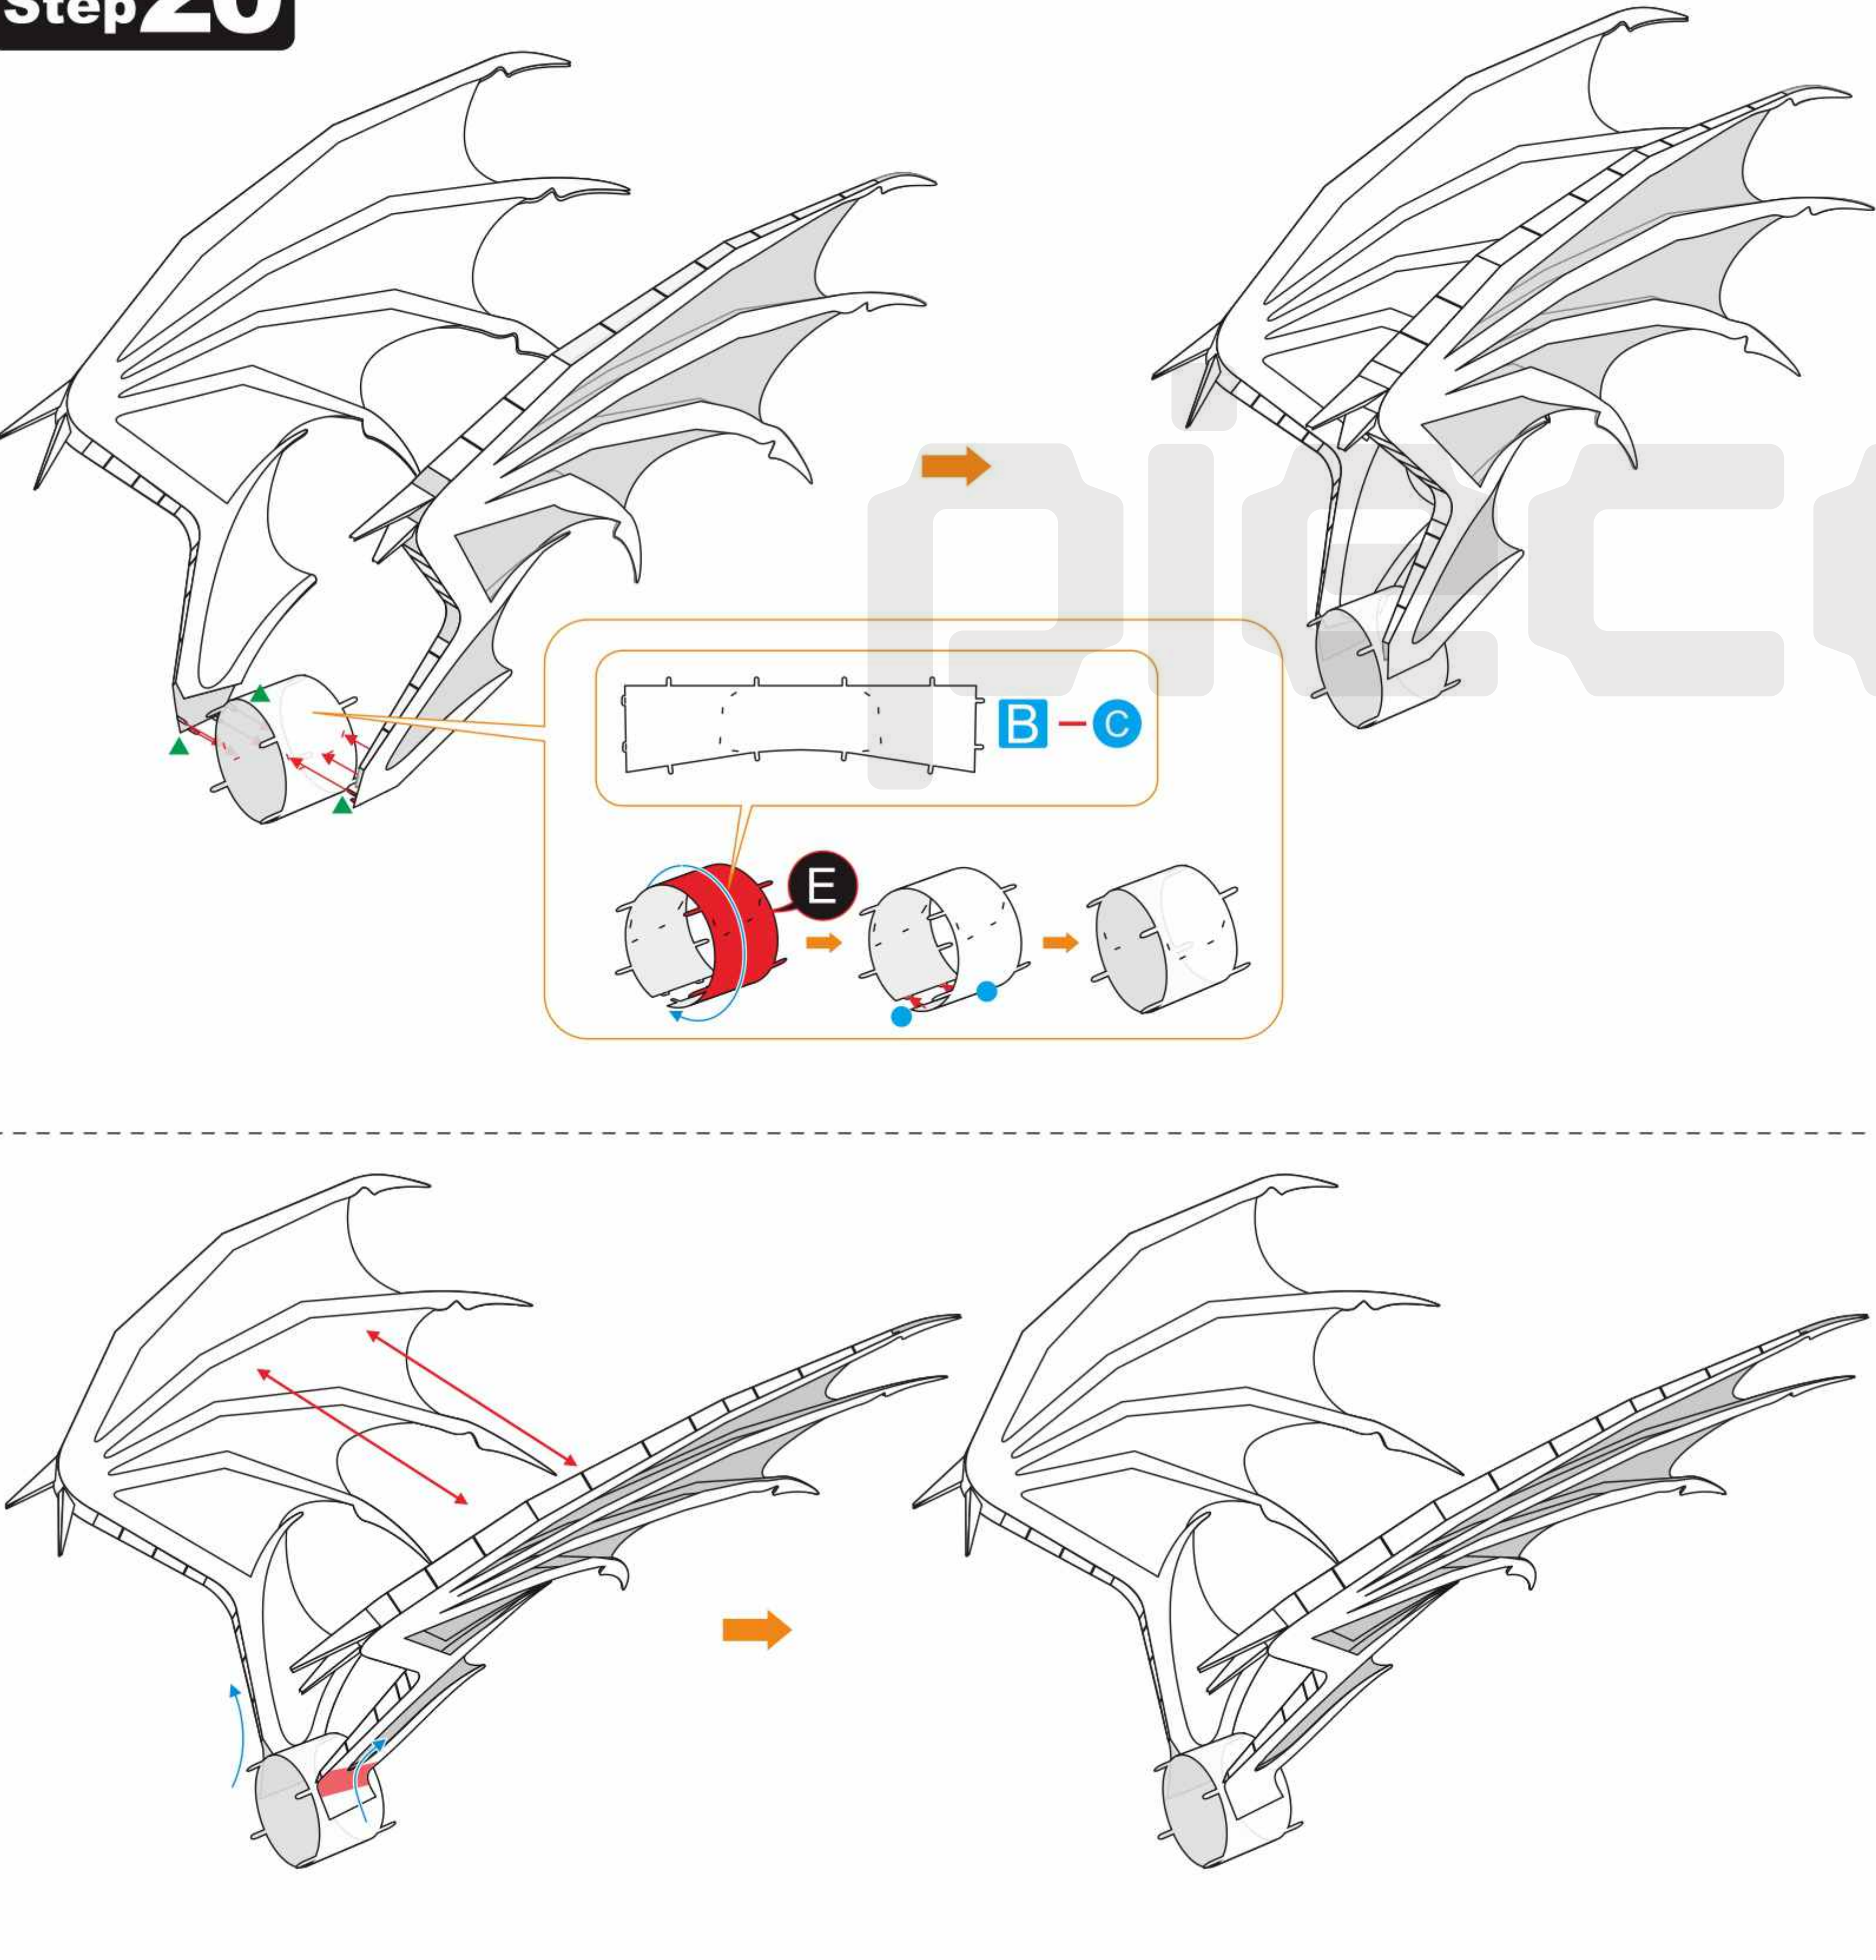


Step 21

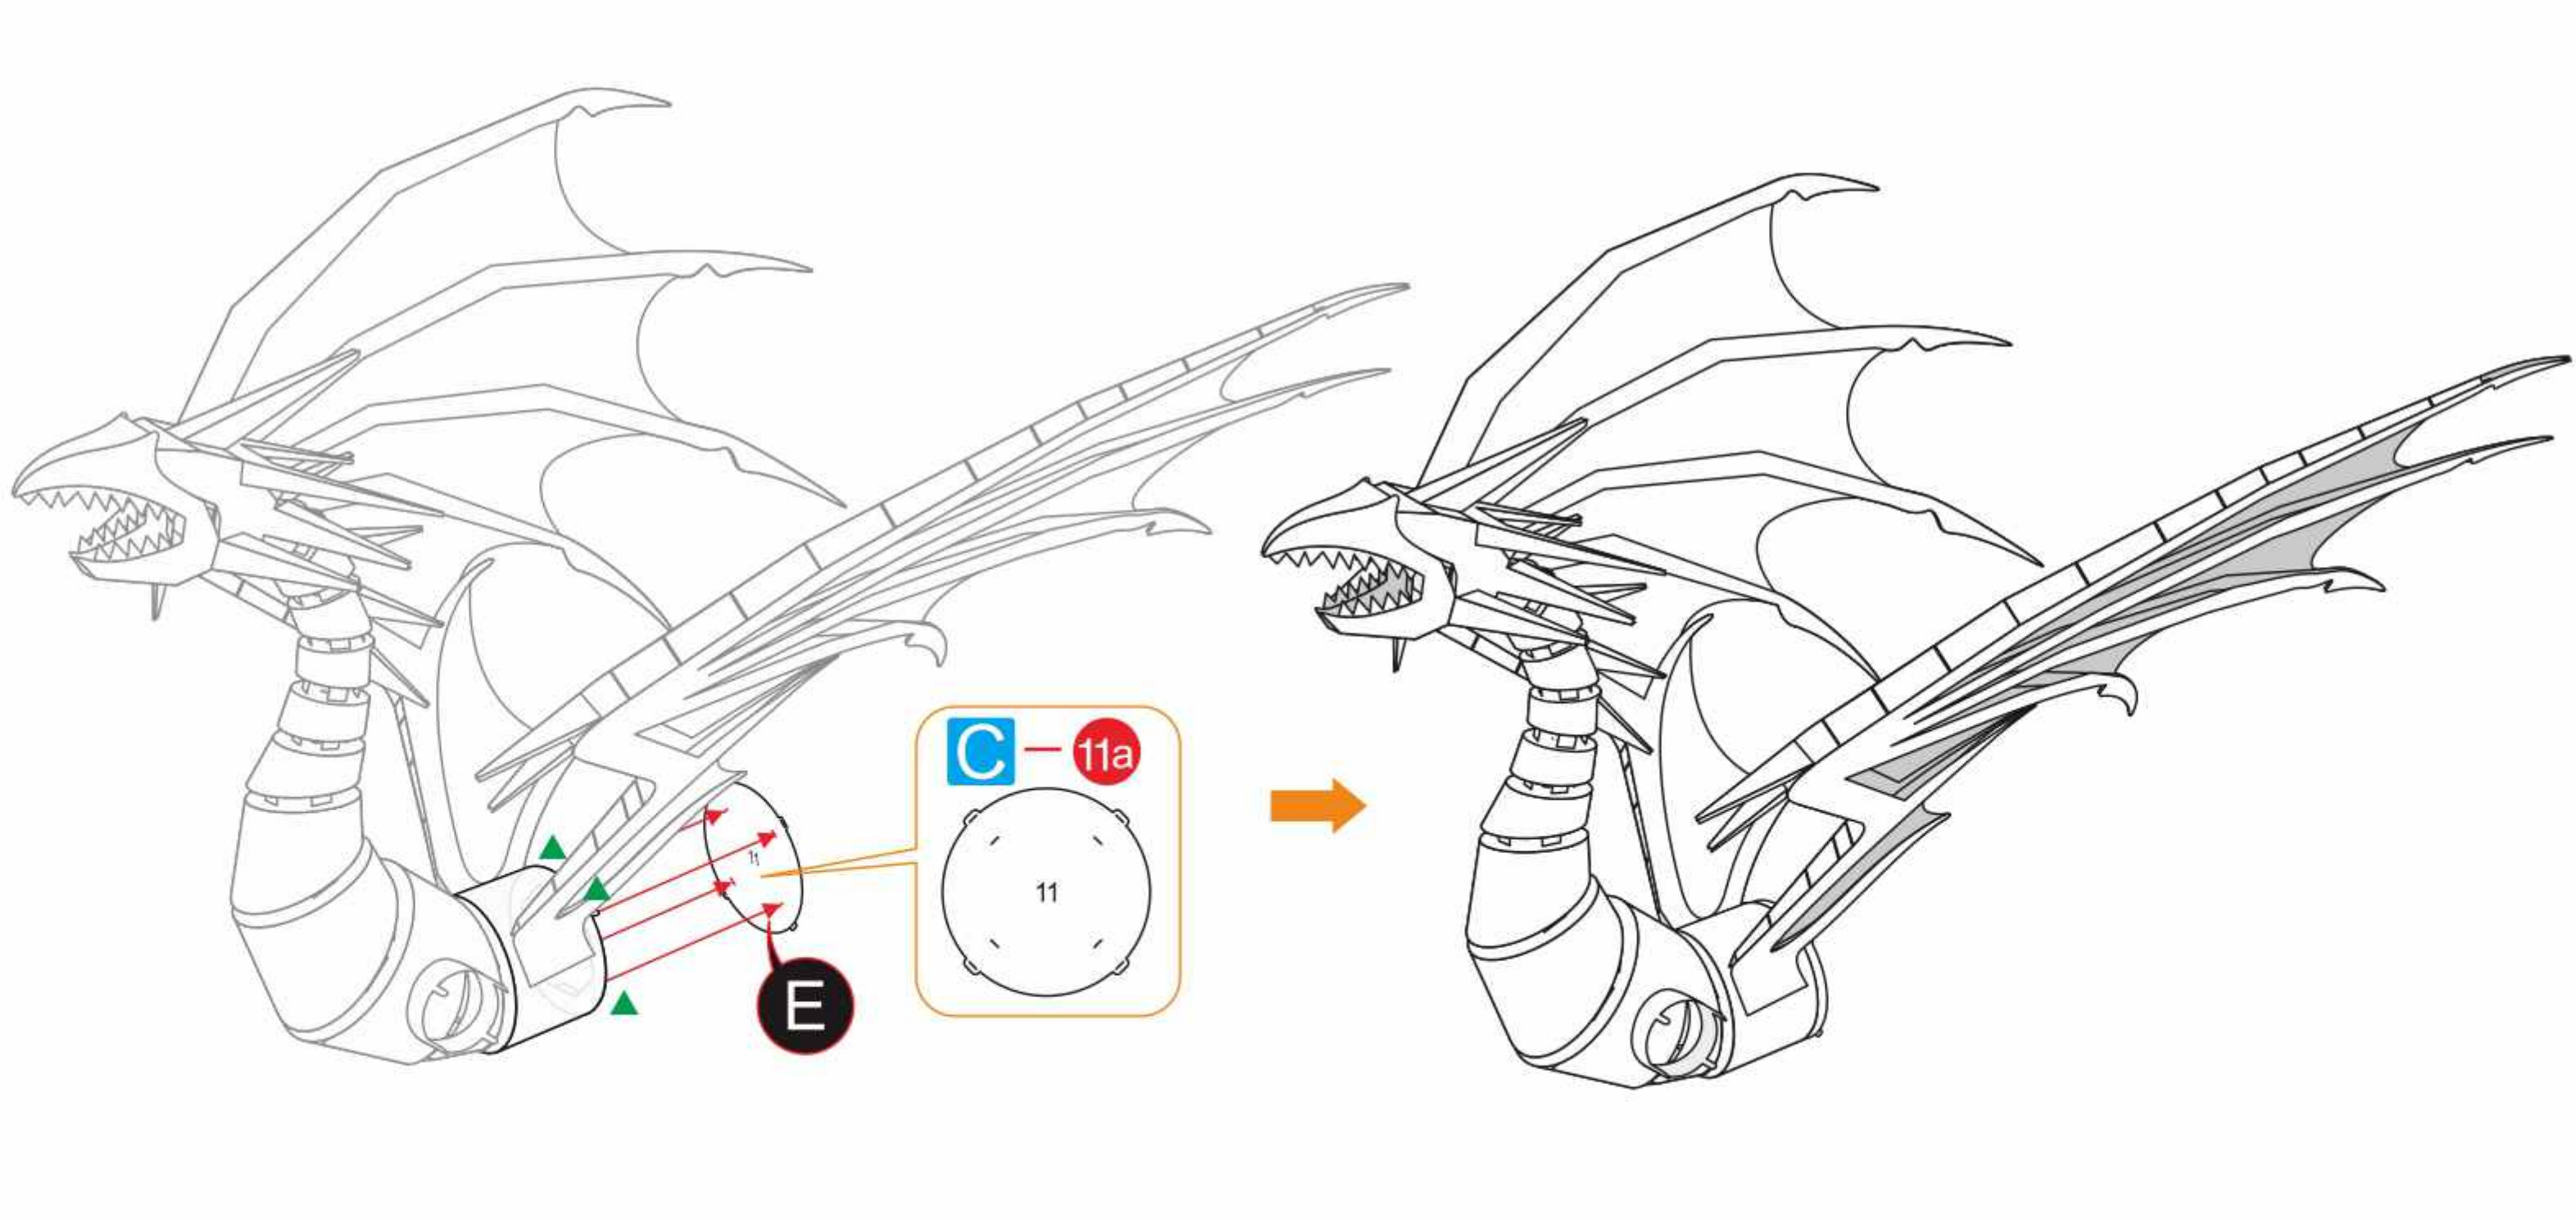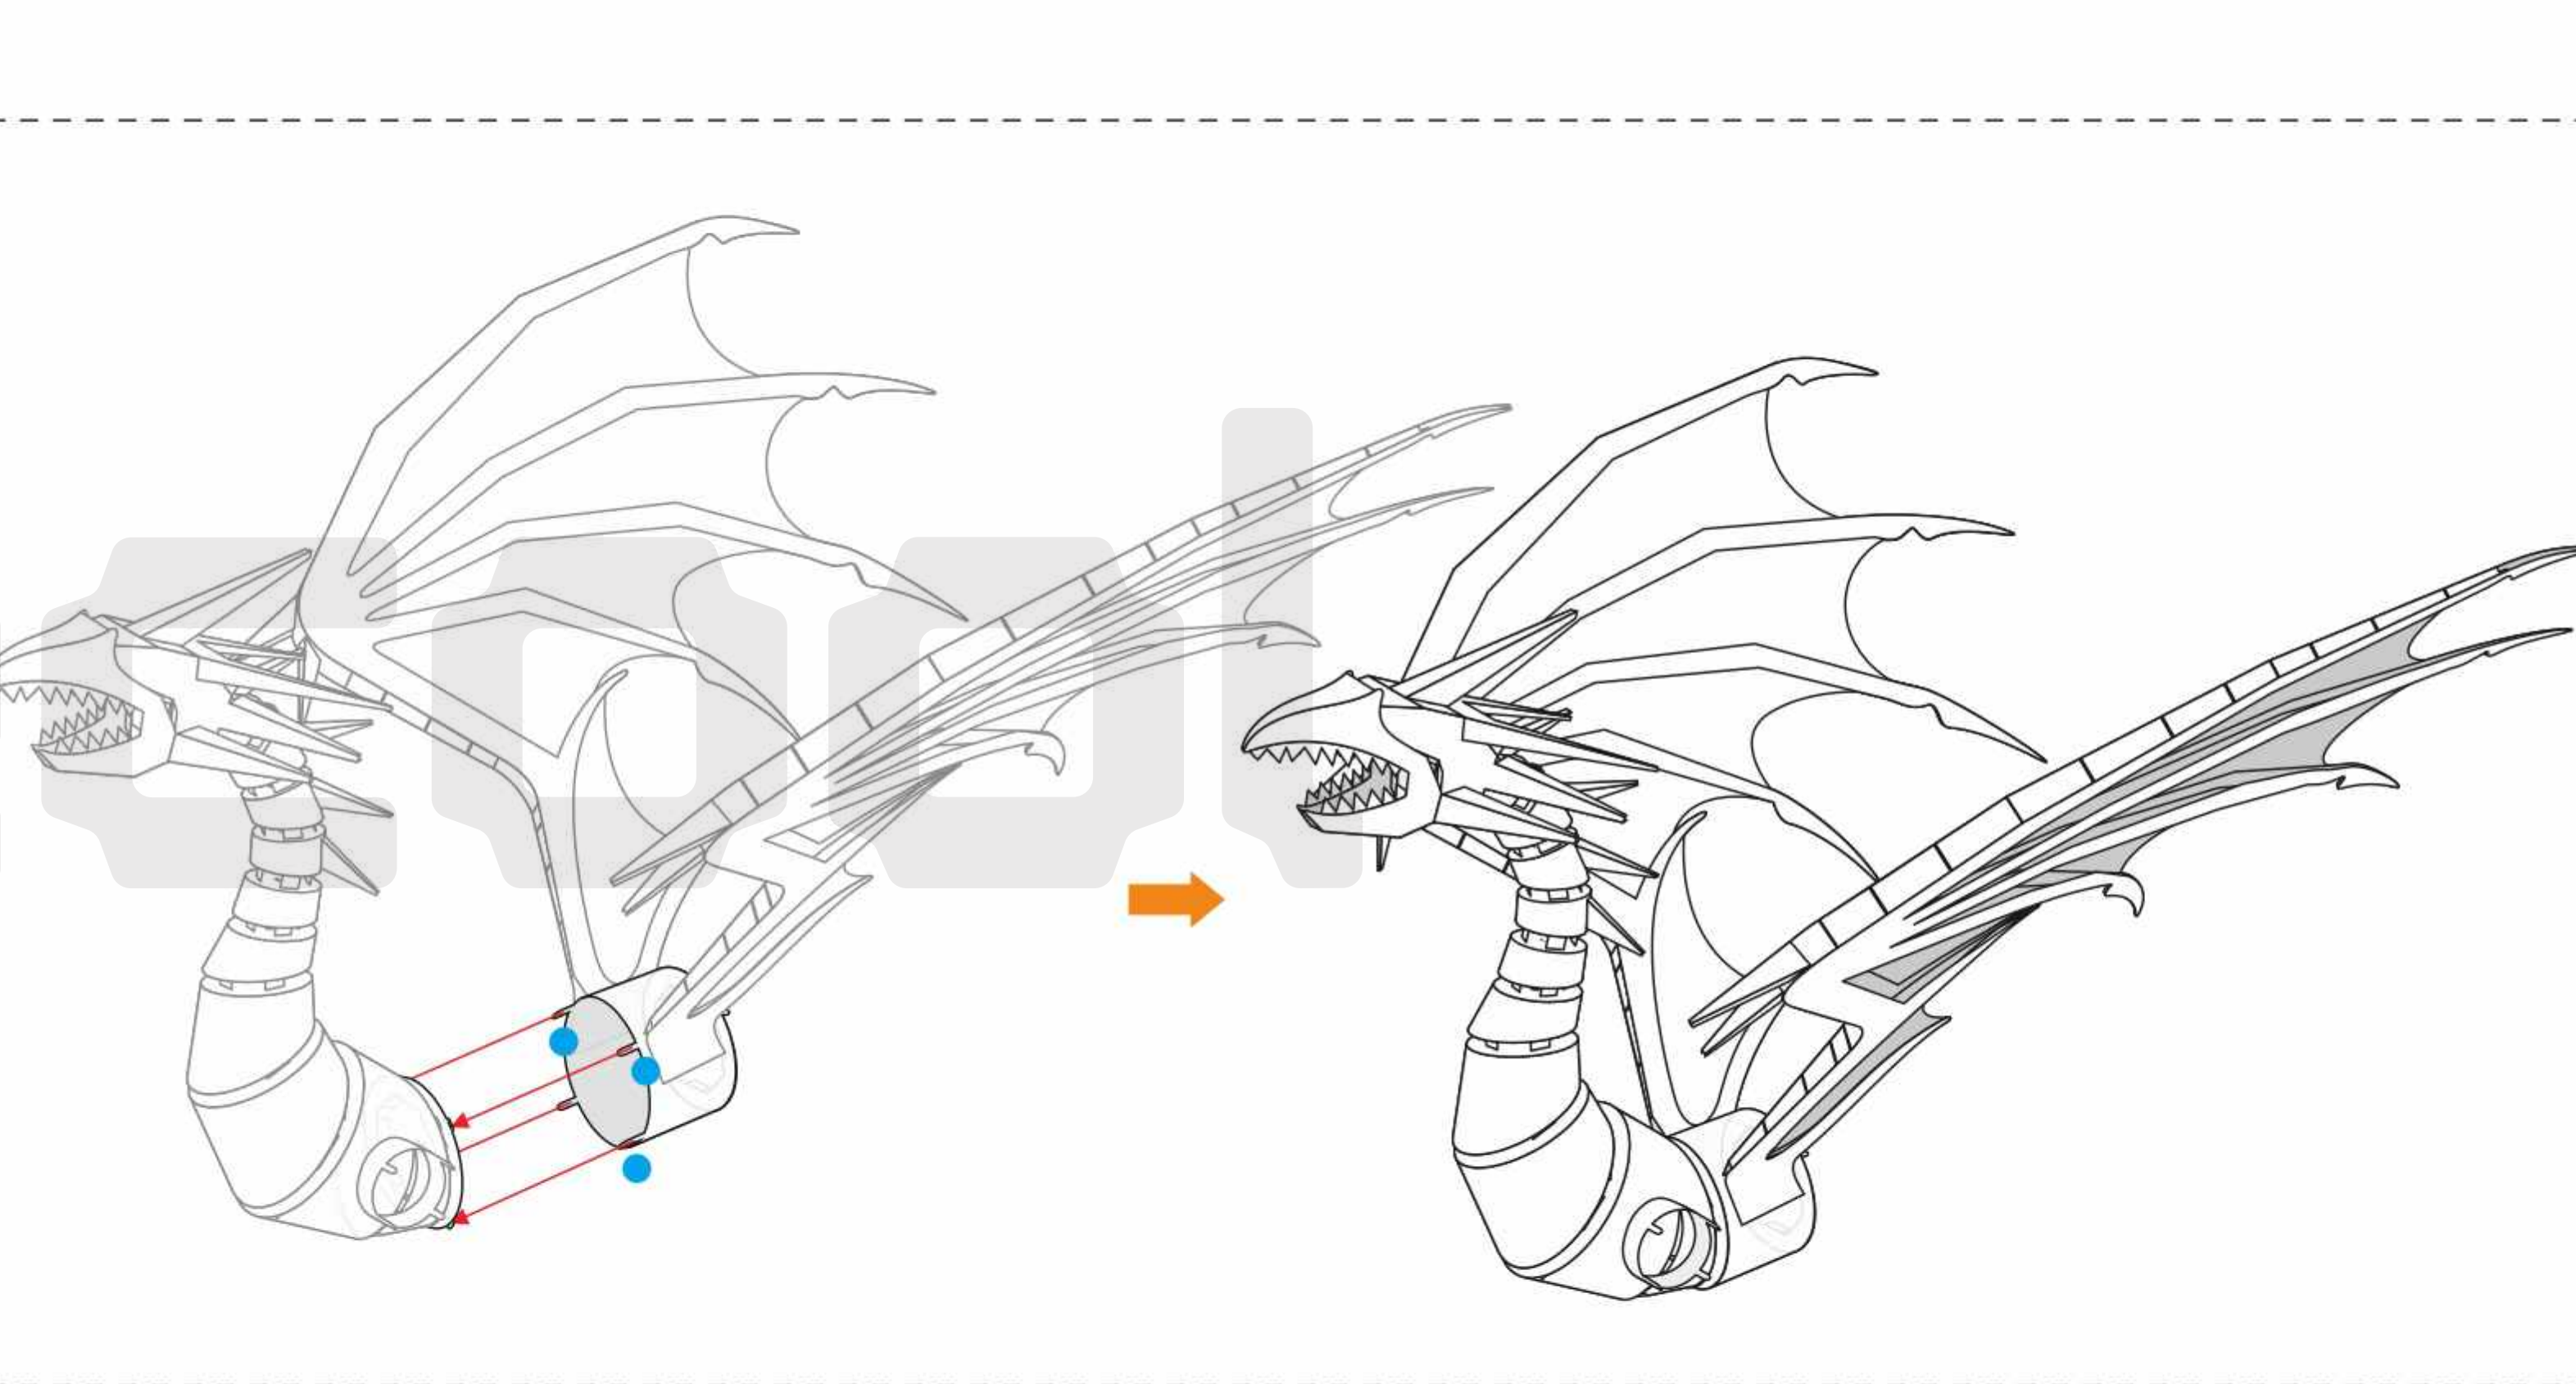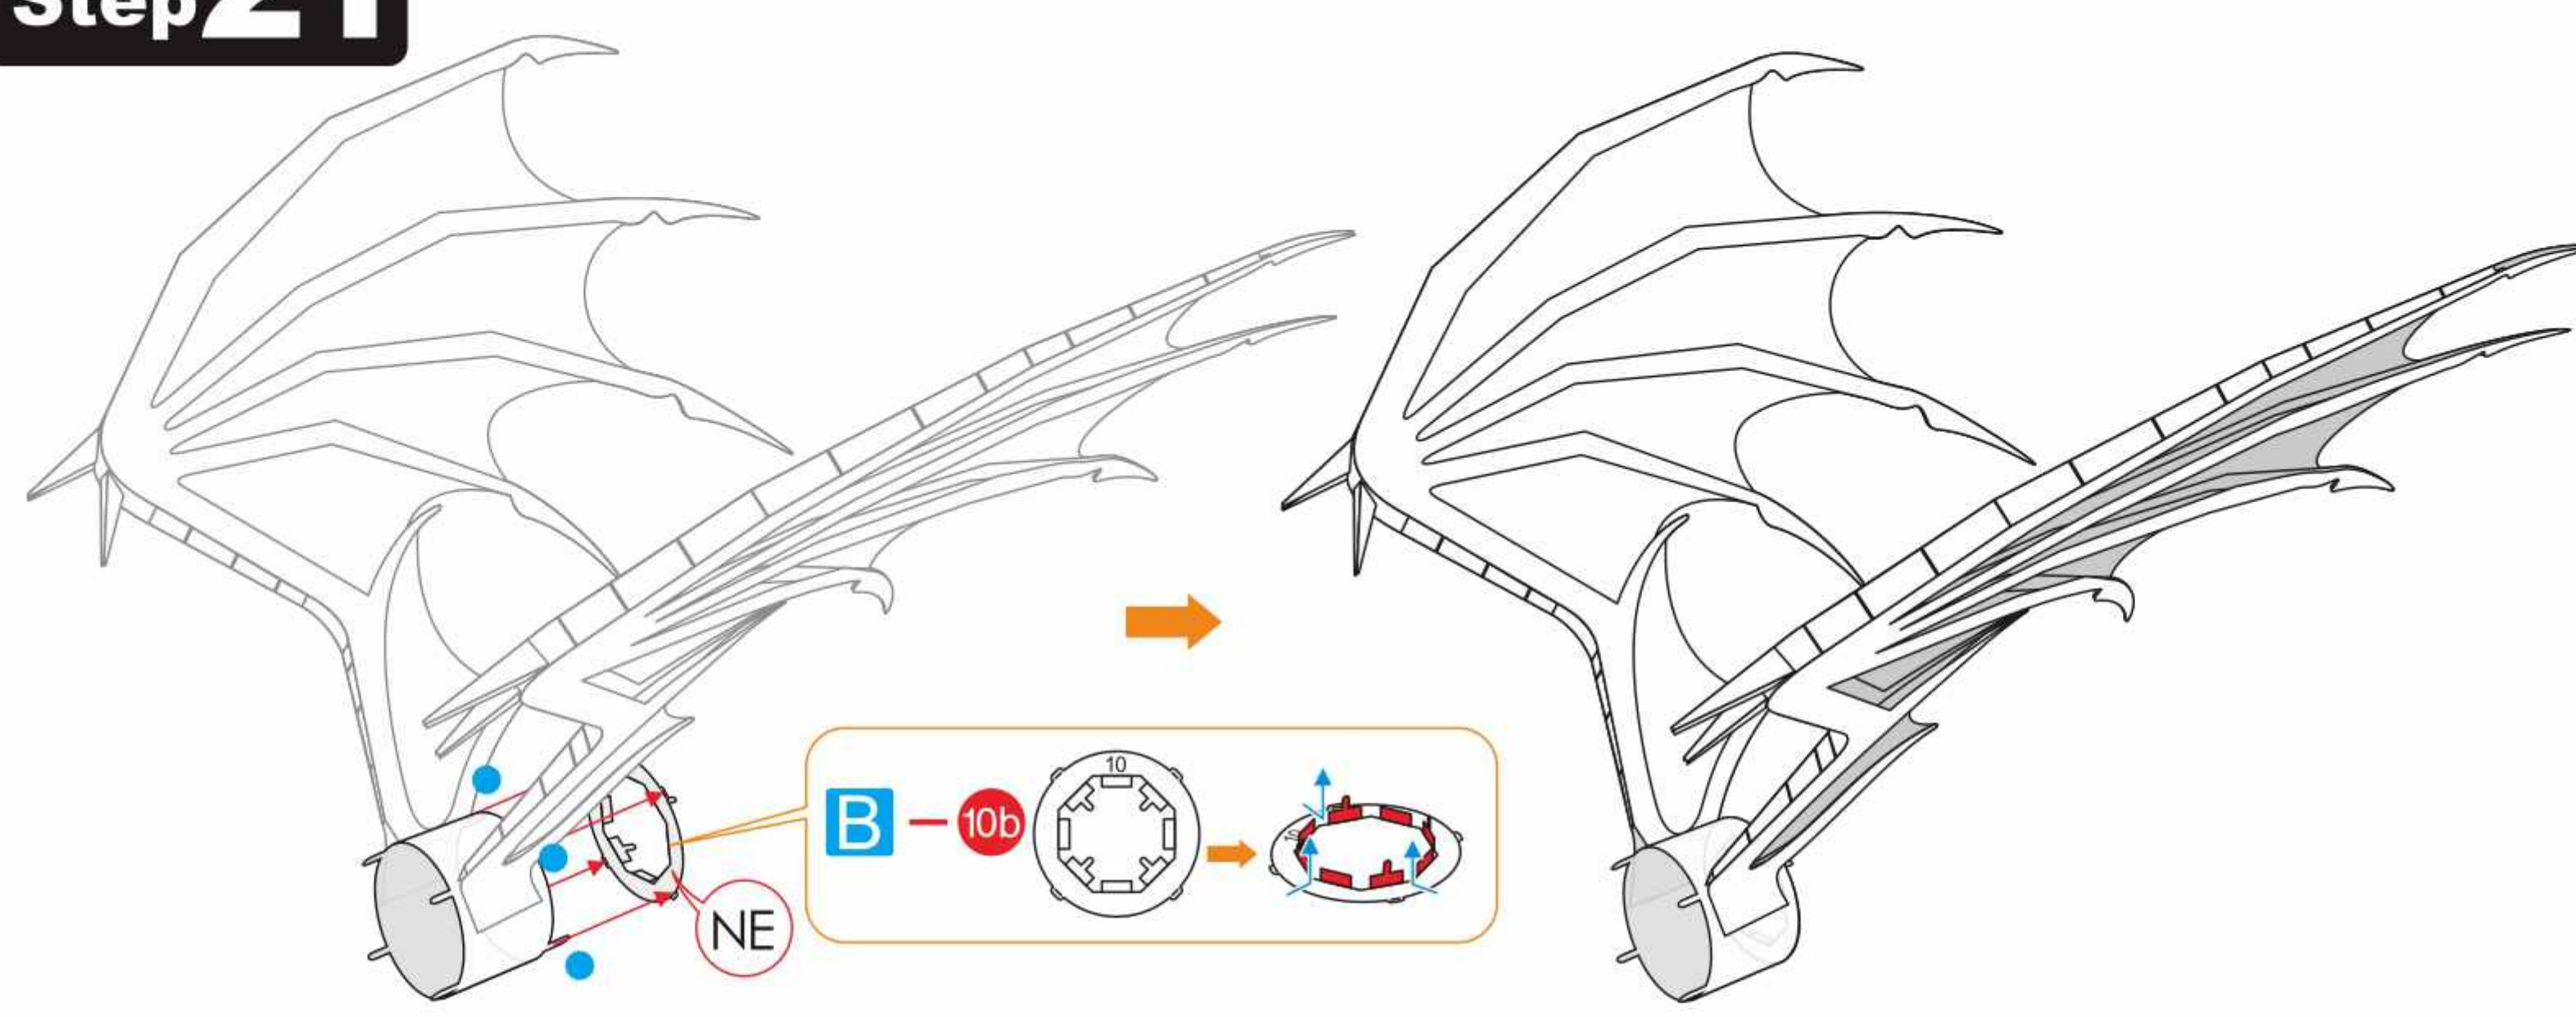


Step 22

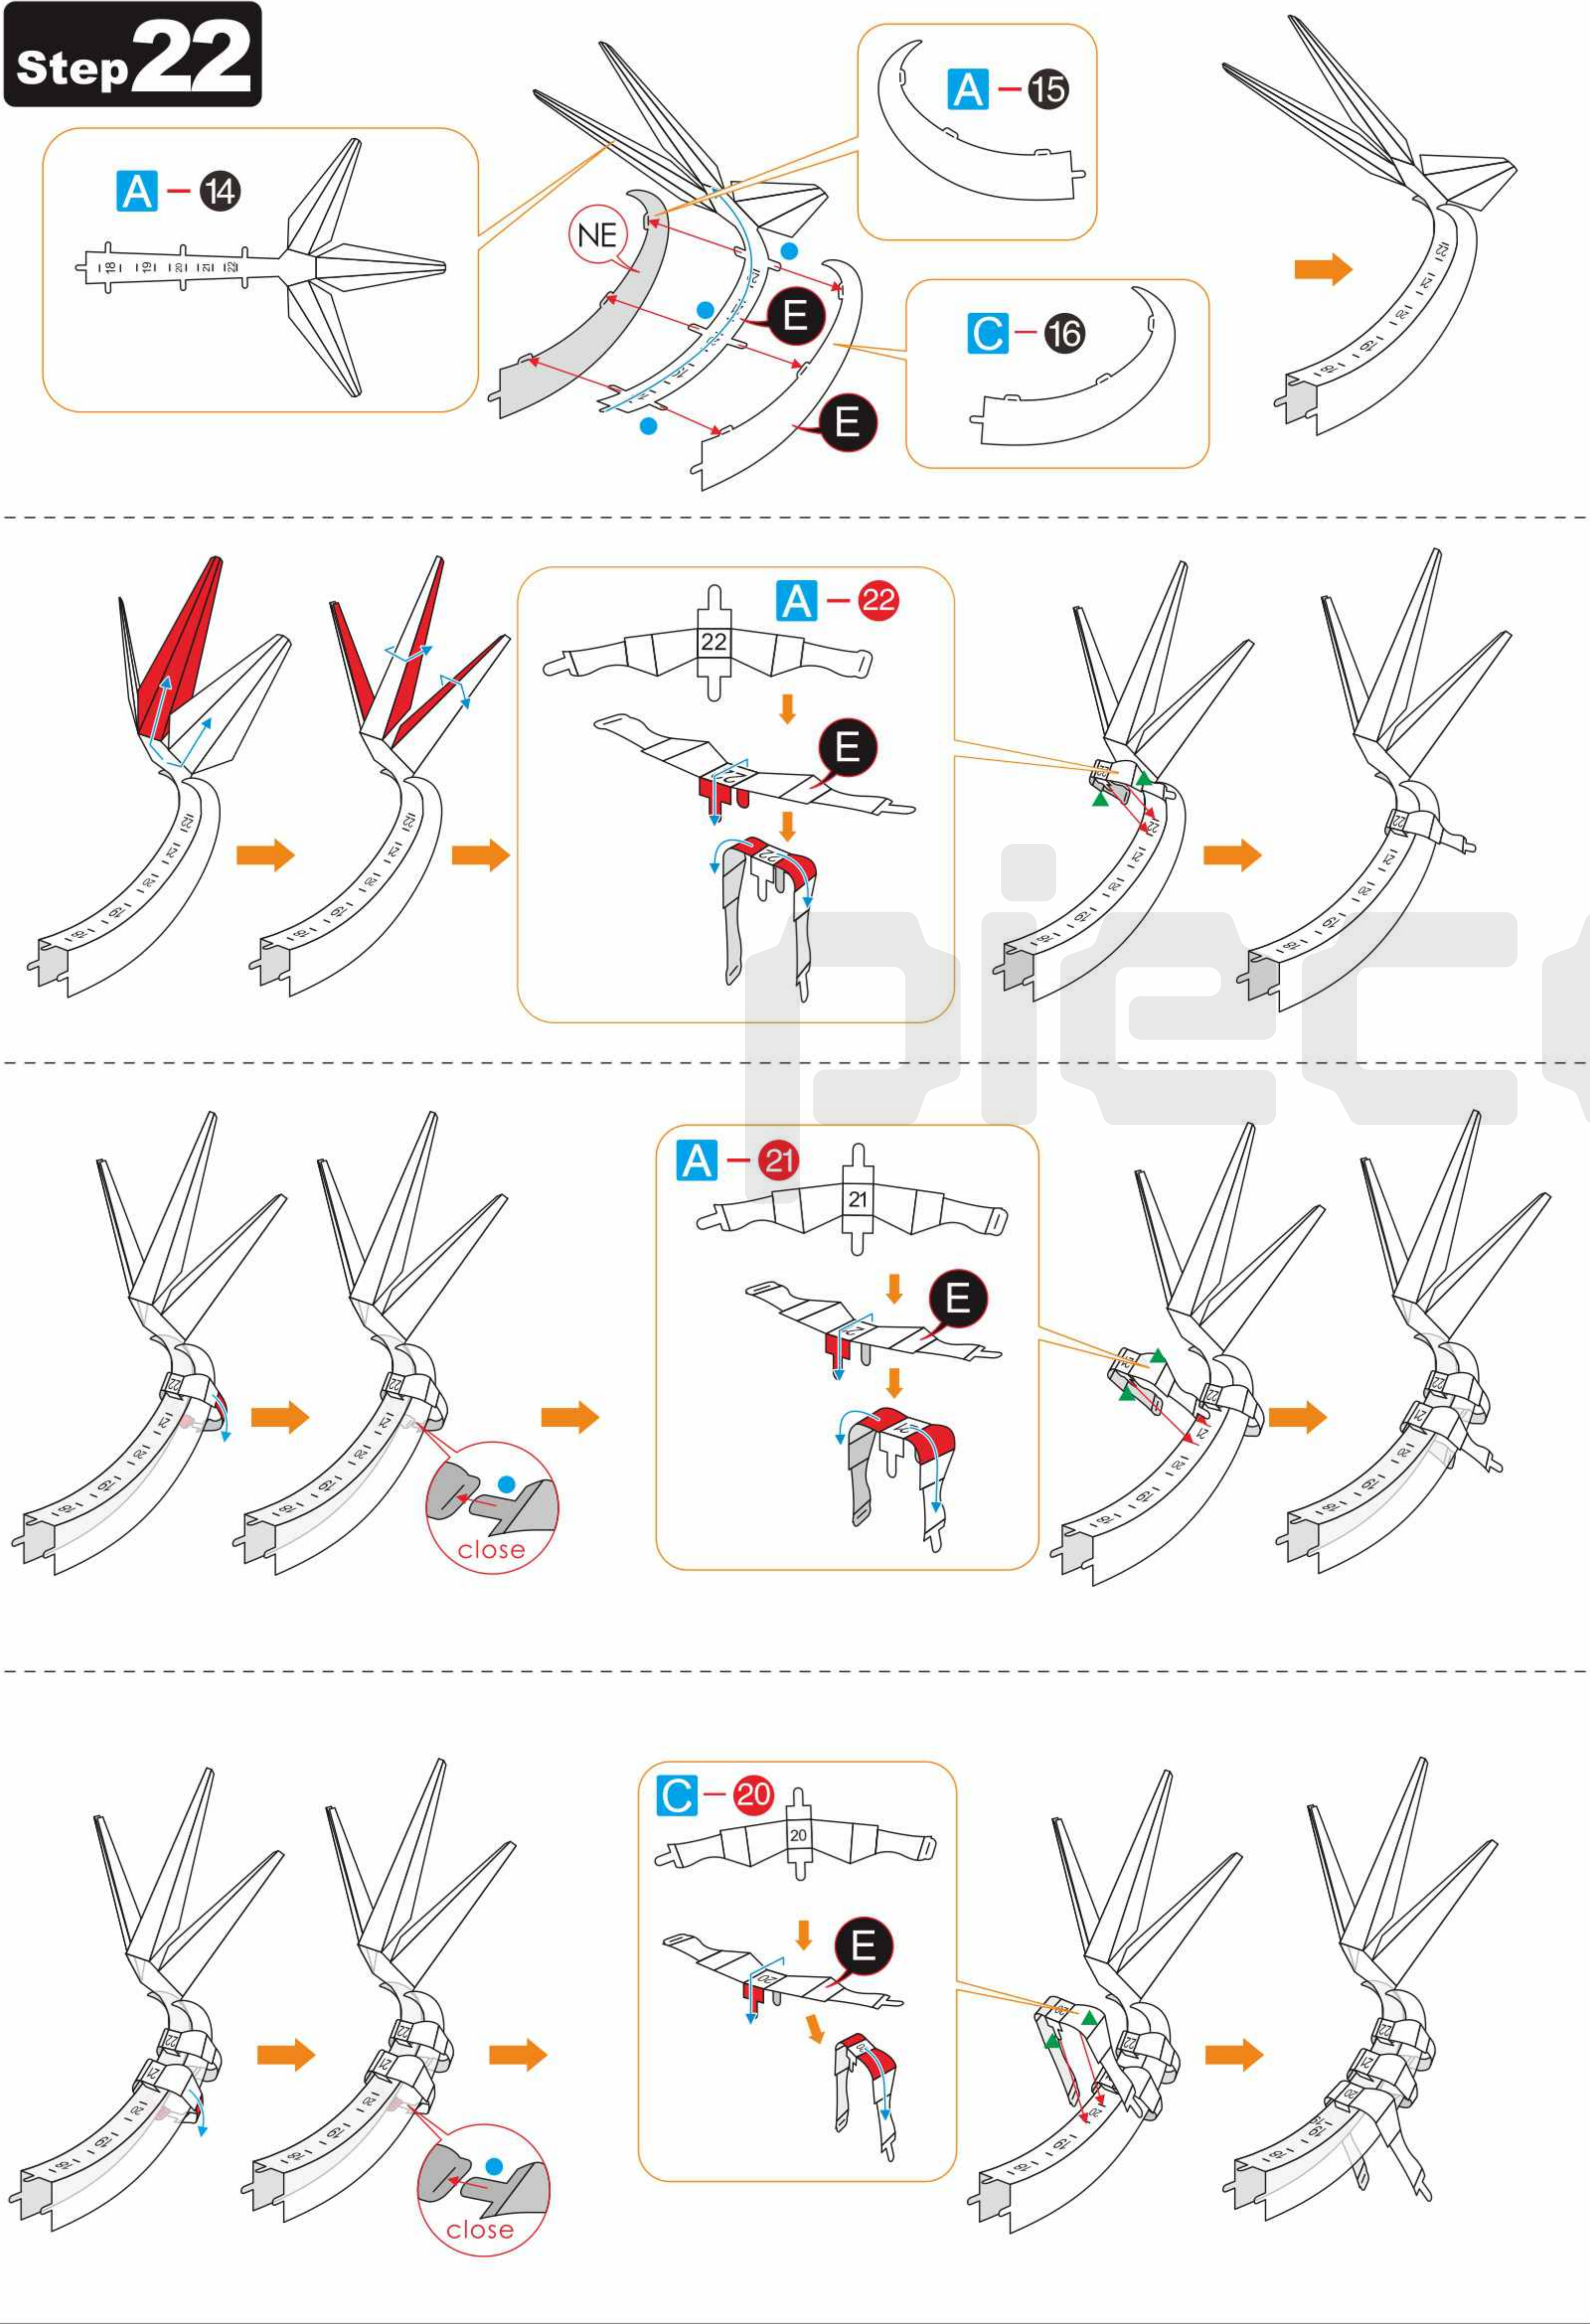


Step 23

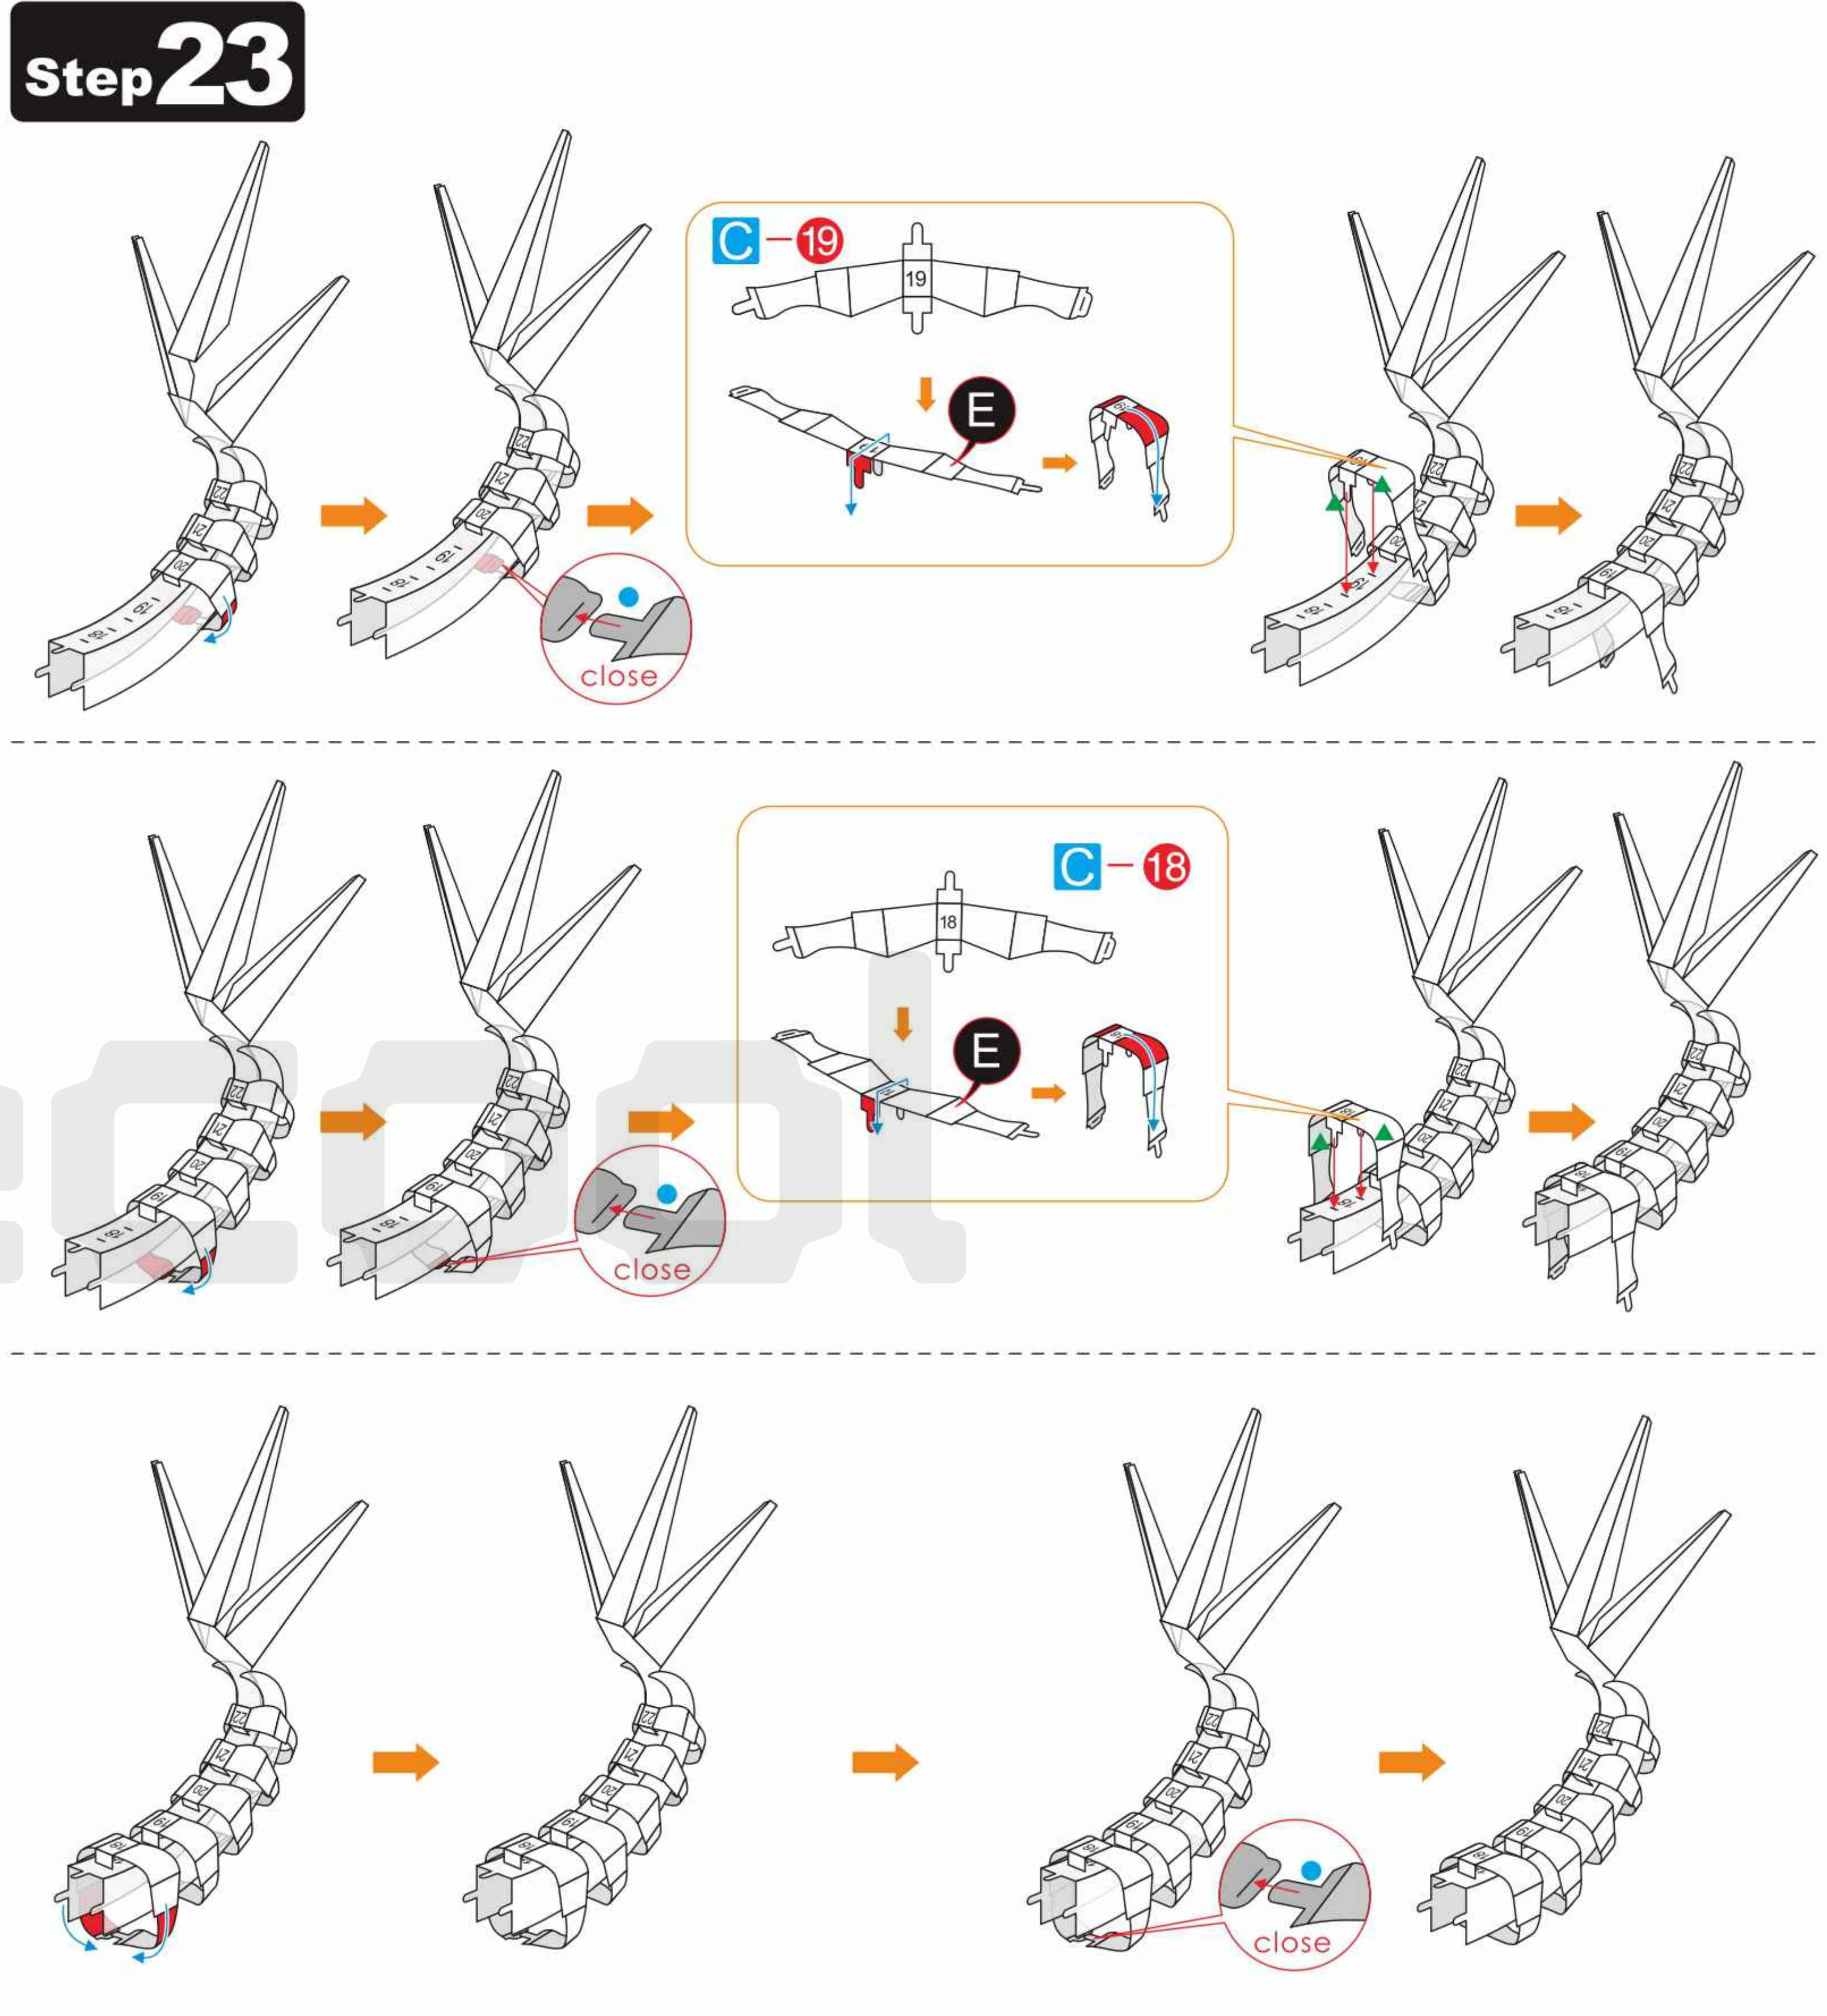


Step 24

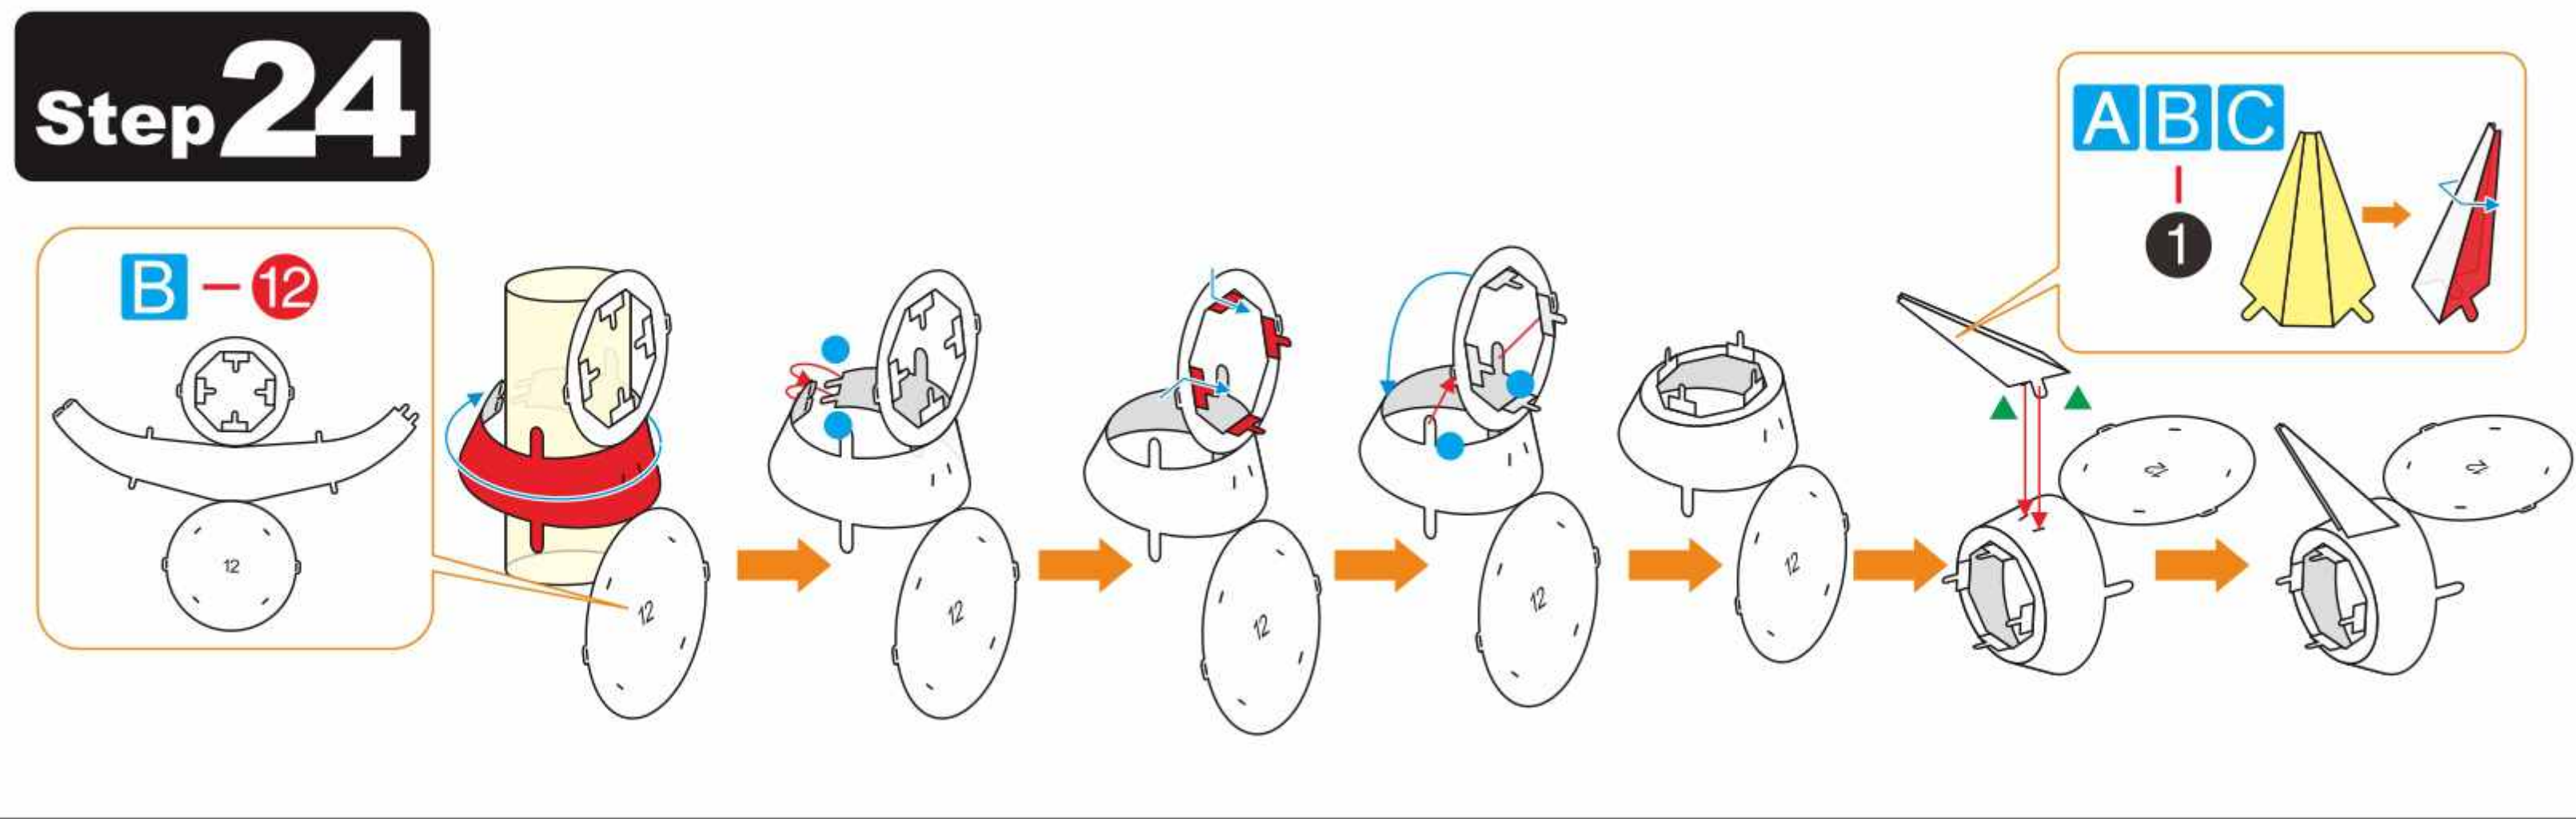


Step 25

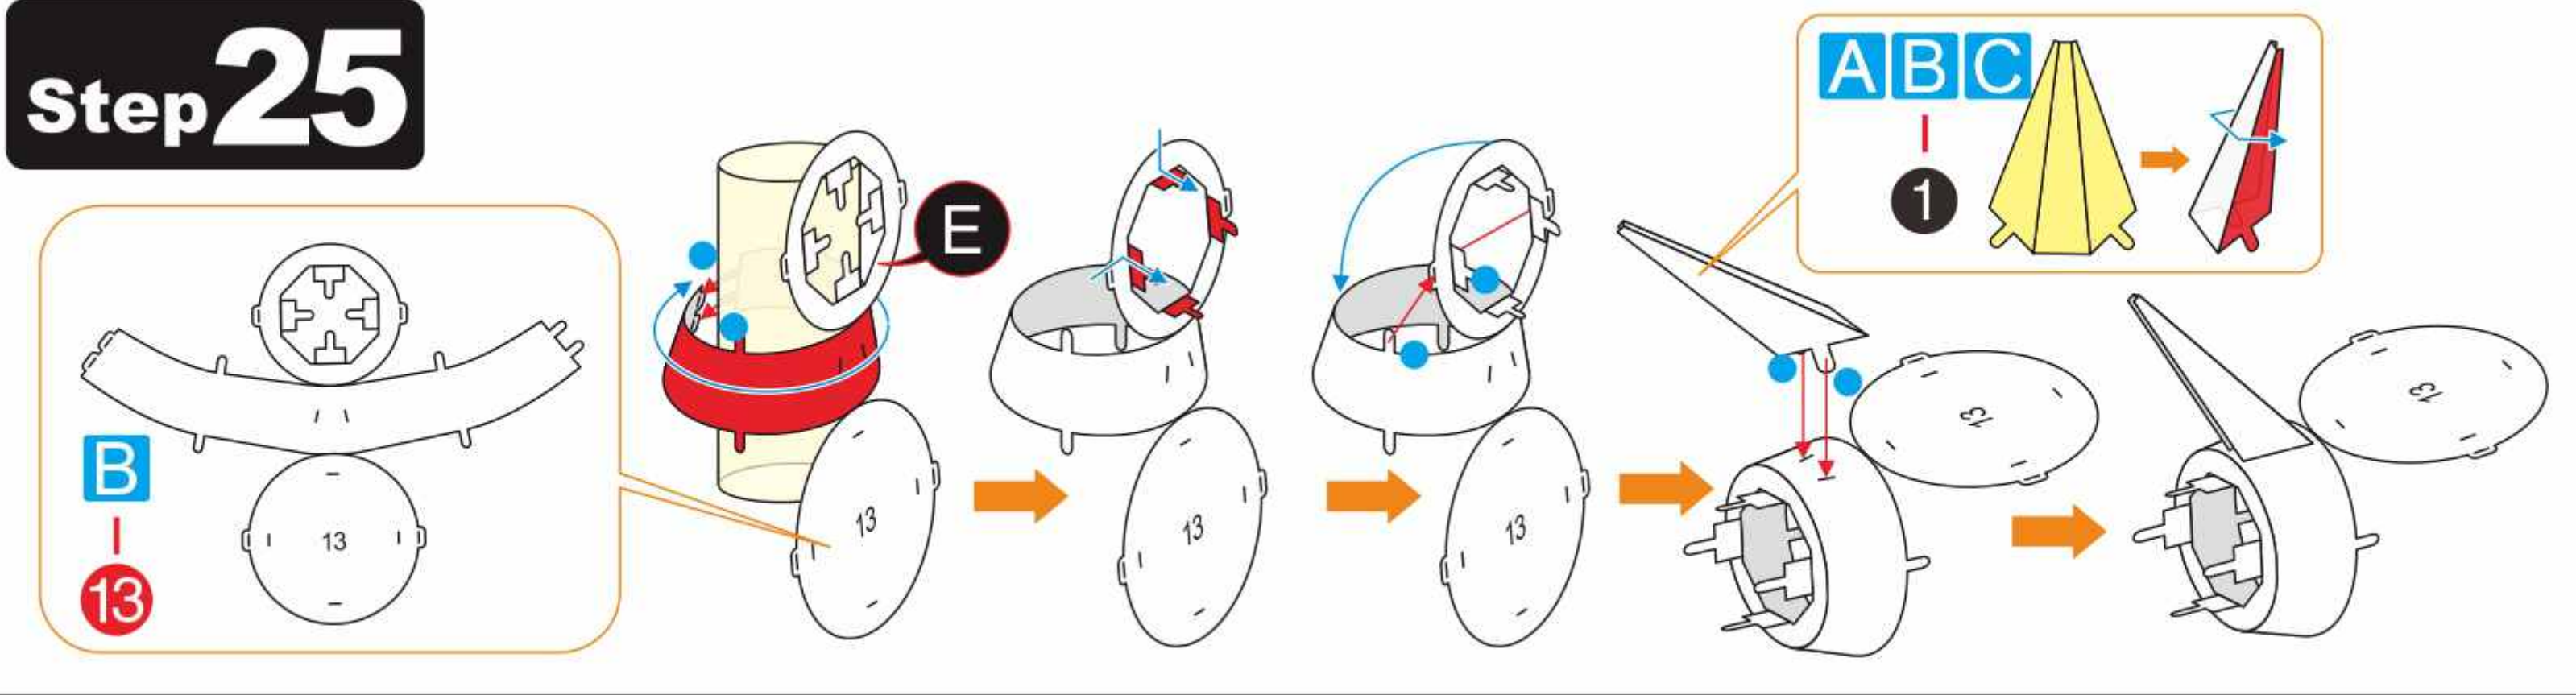


Step 26

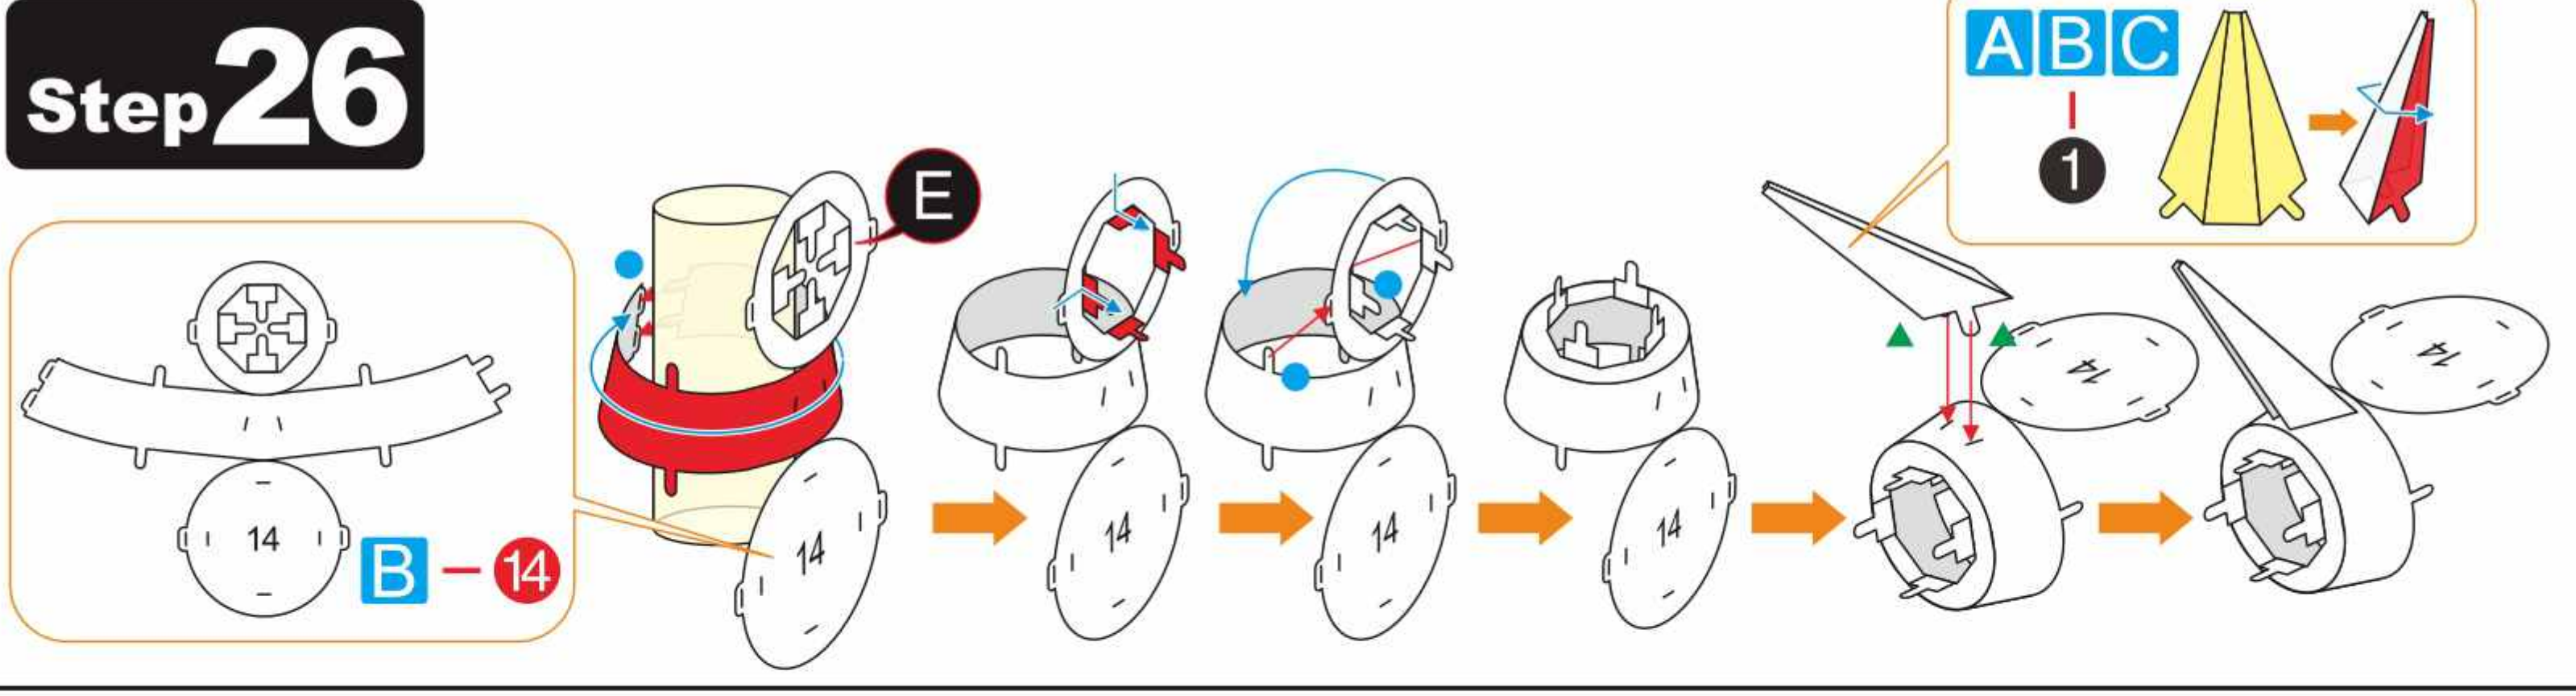


Step 27

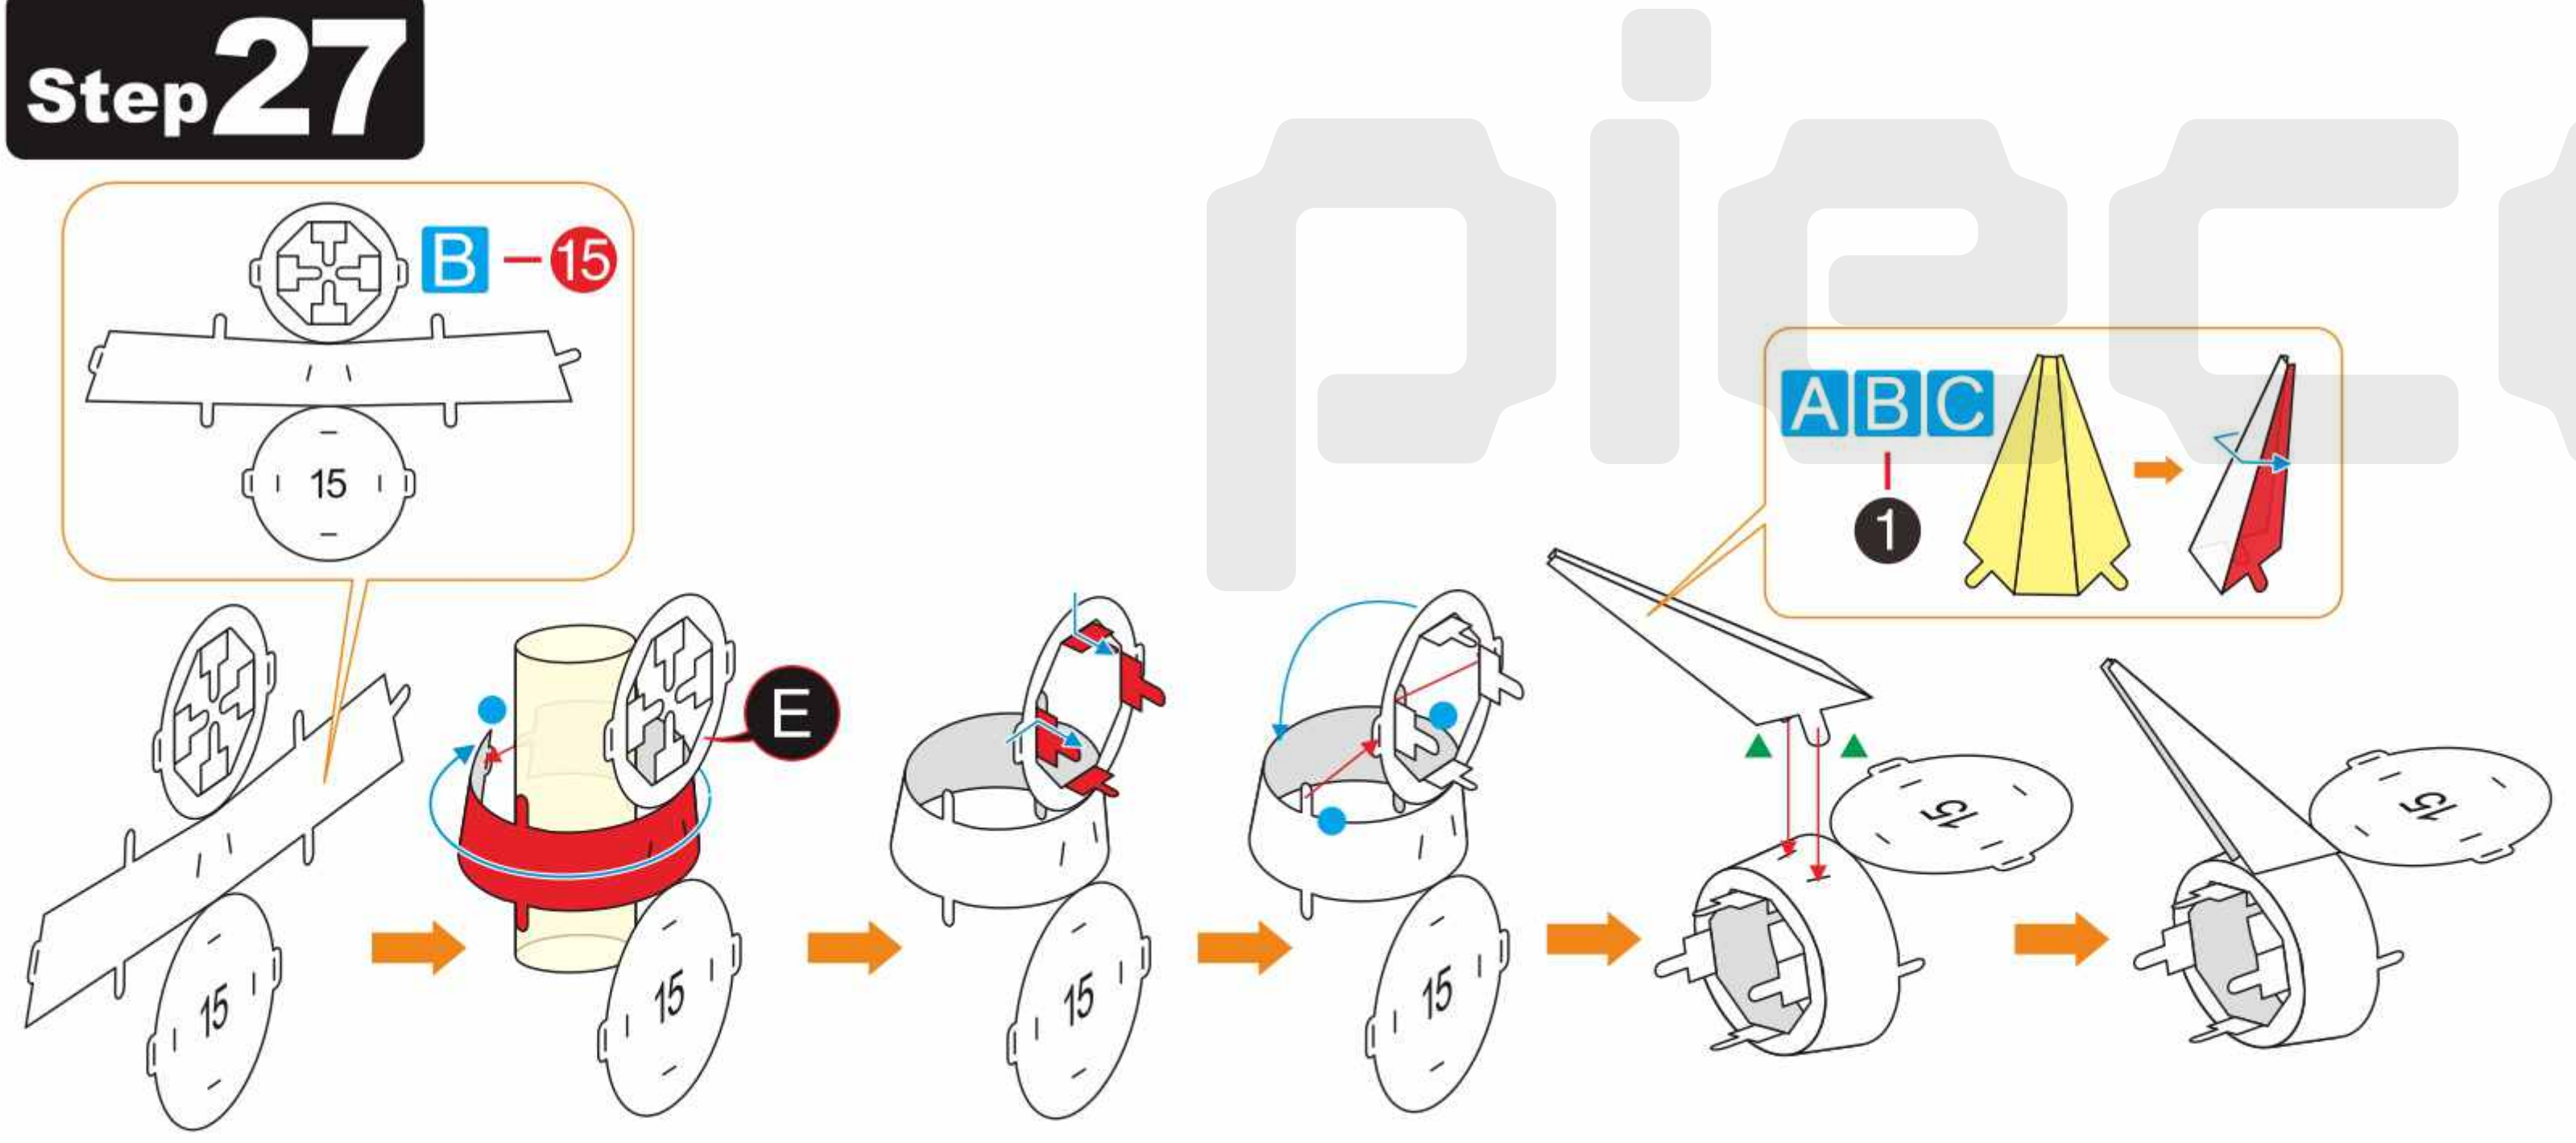


Step 28

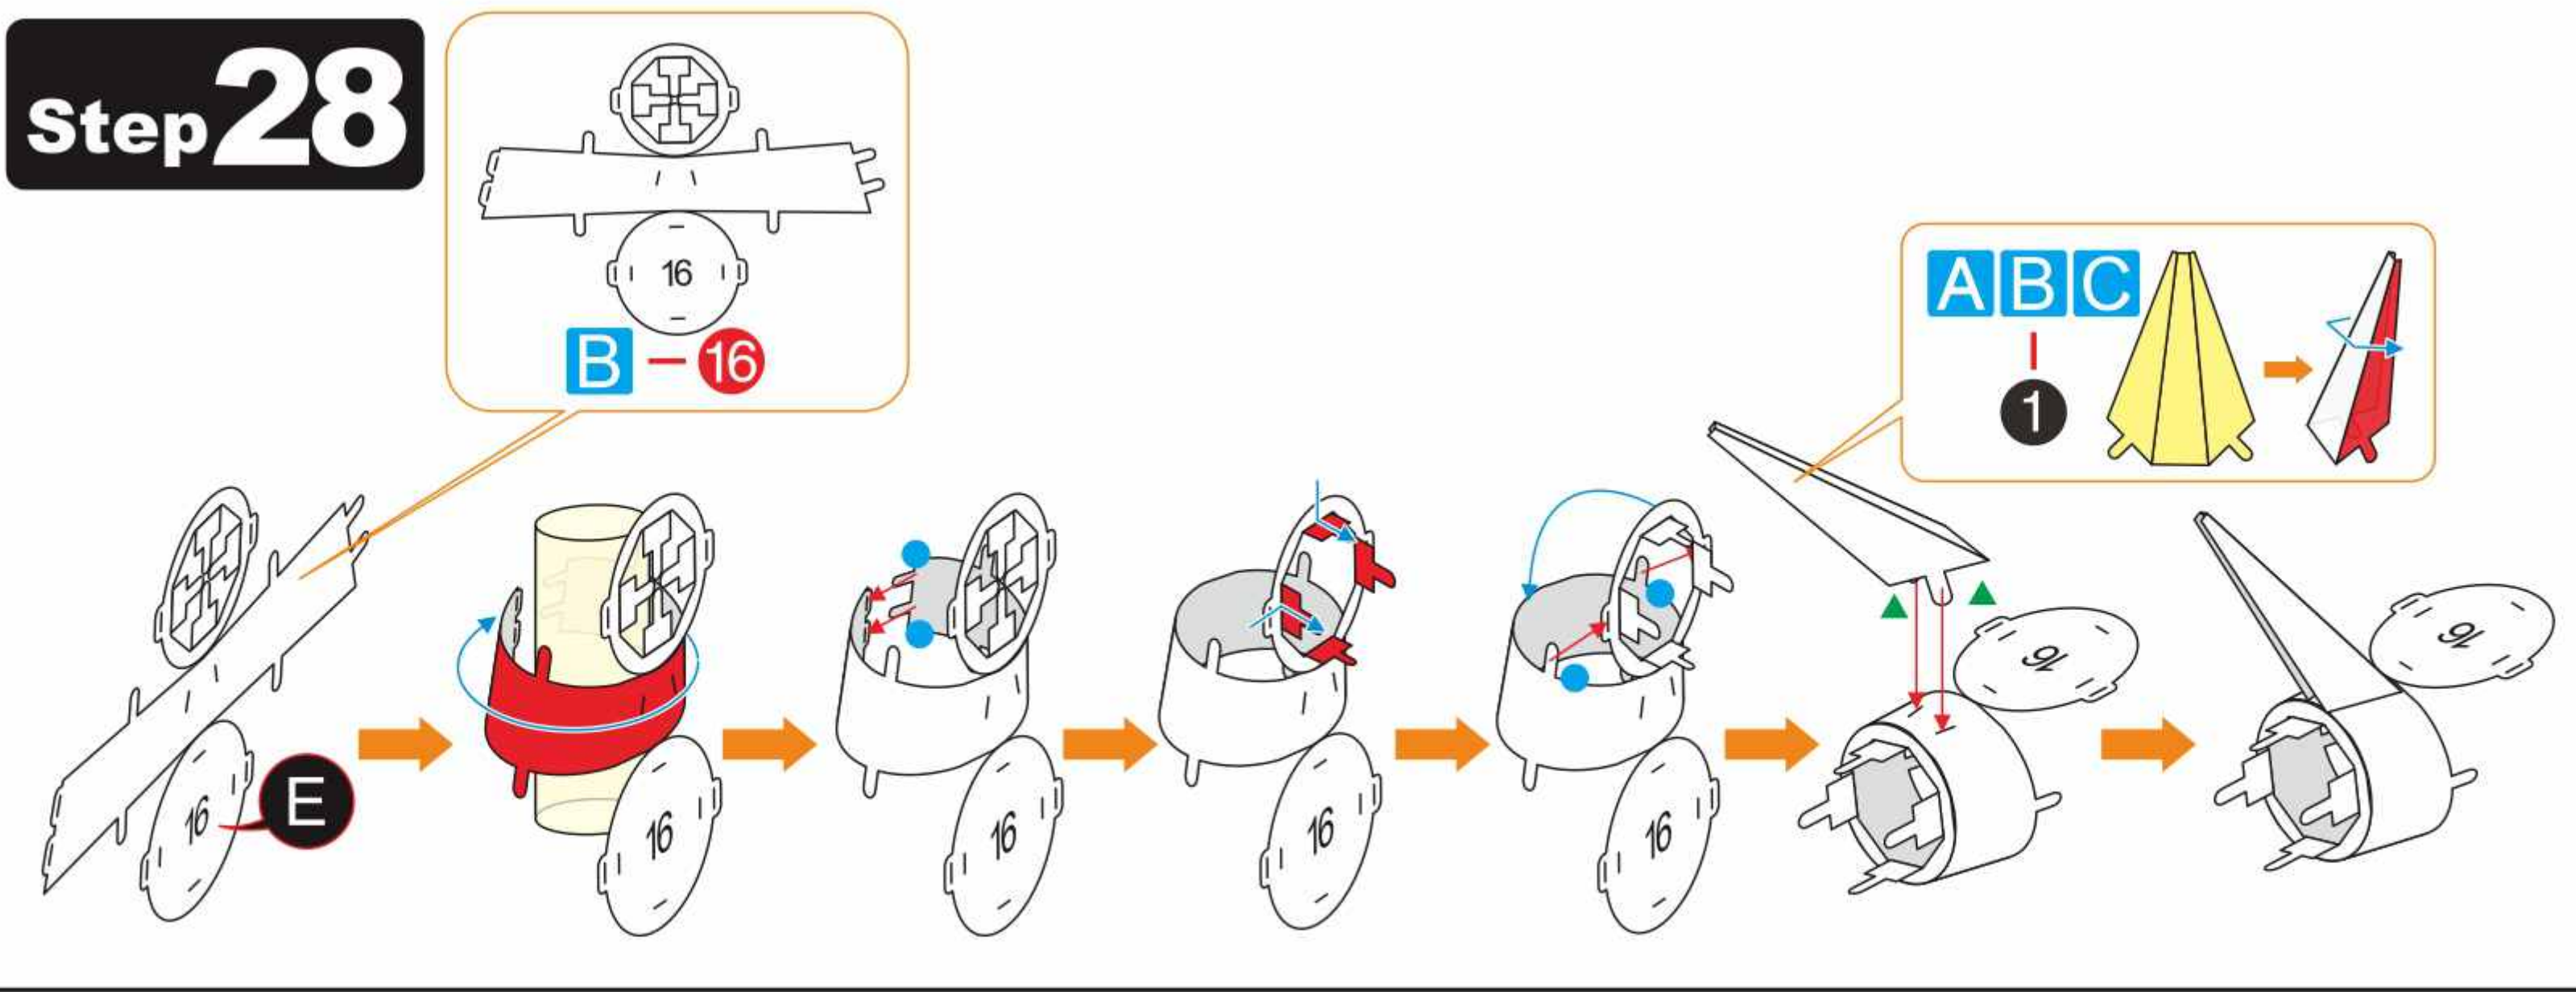




Step 29

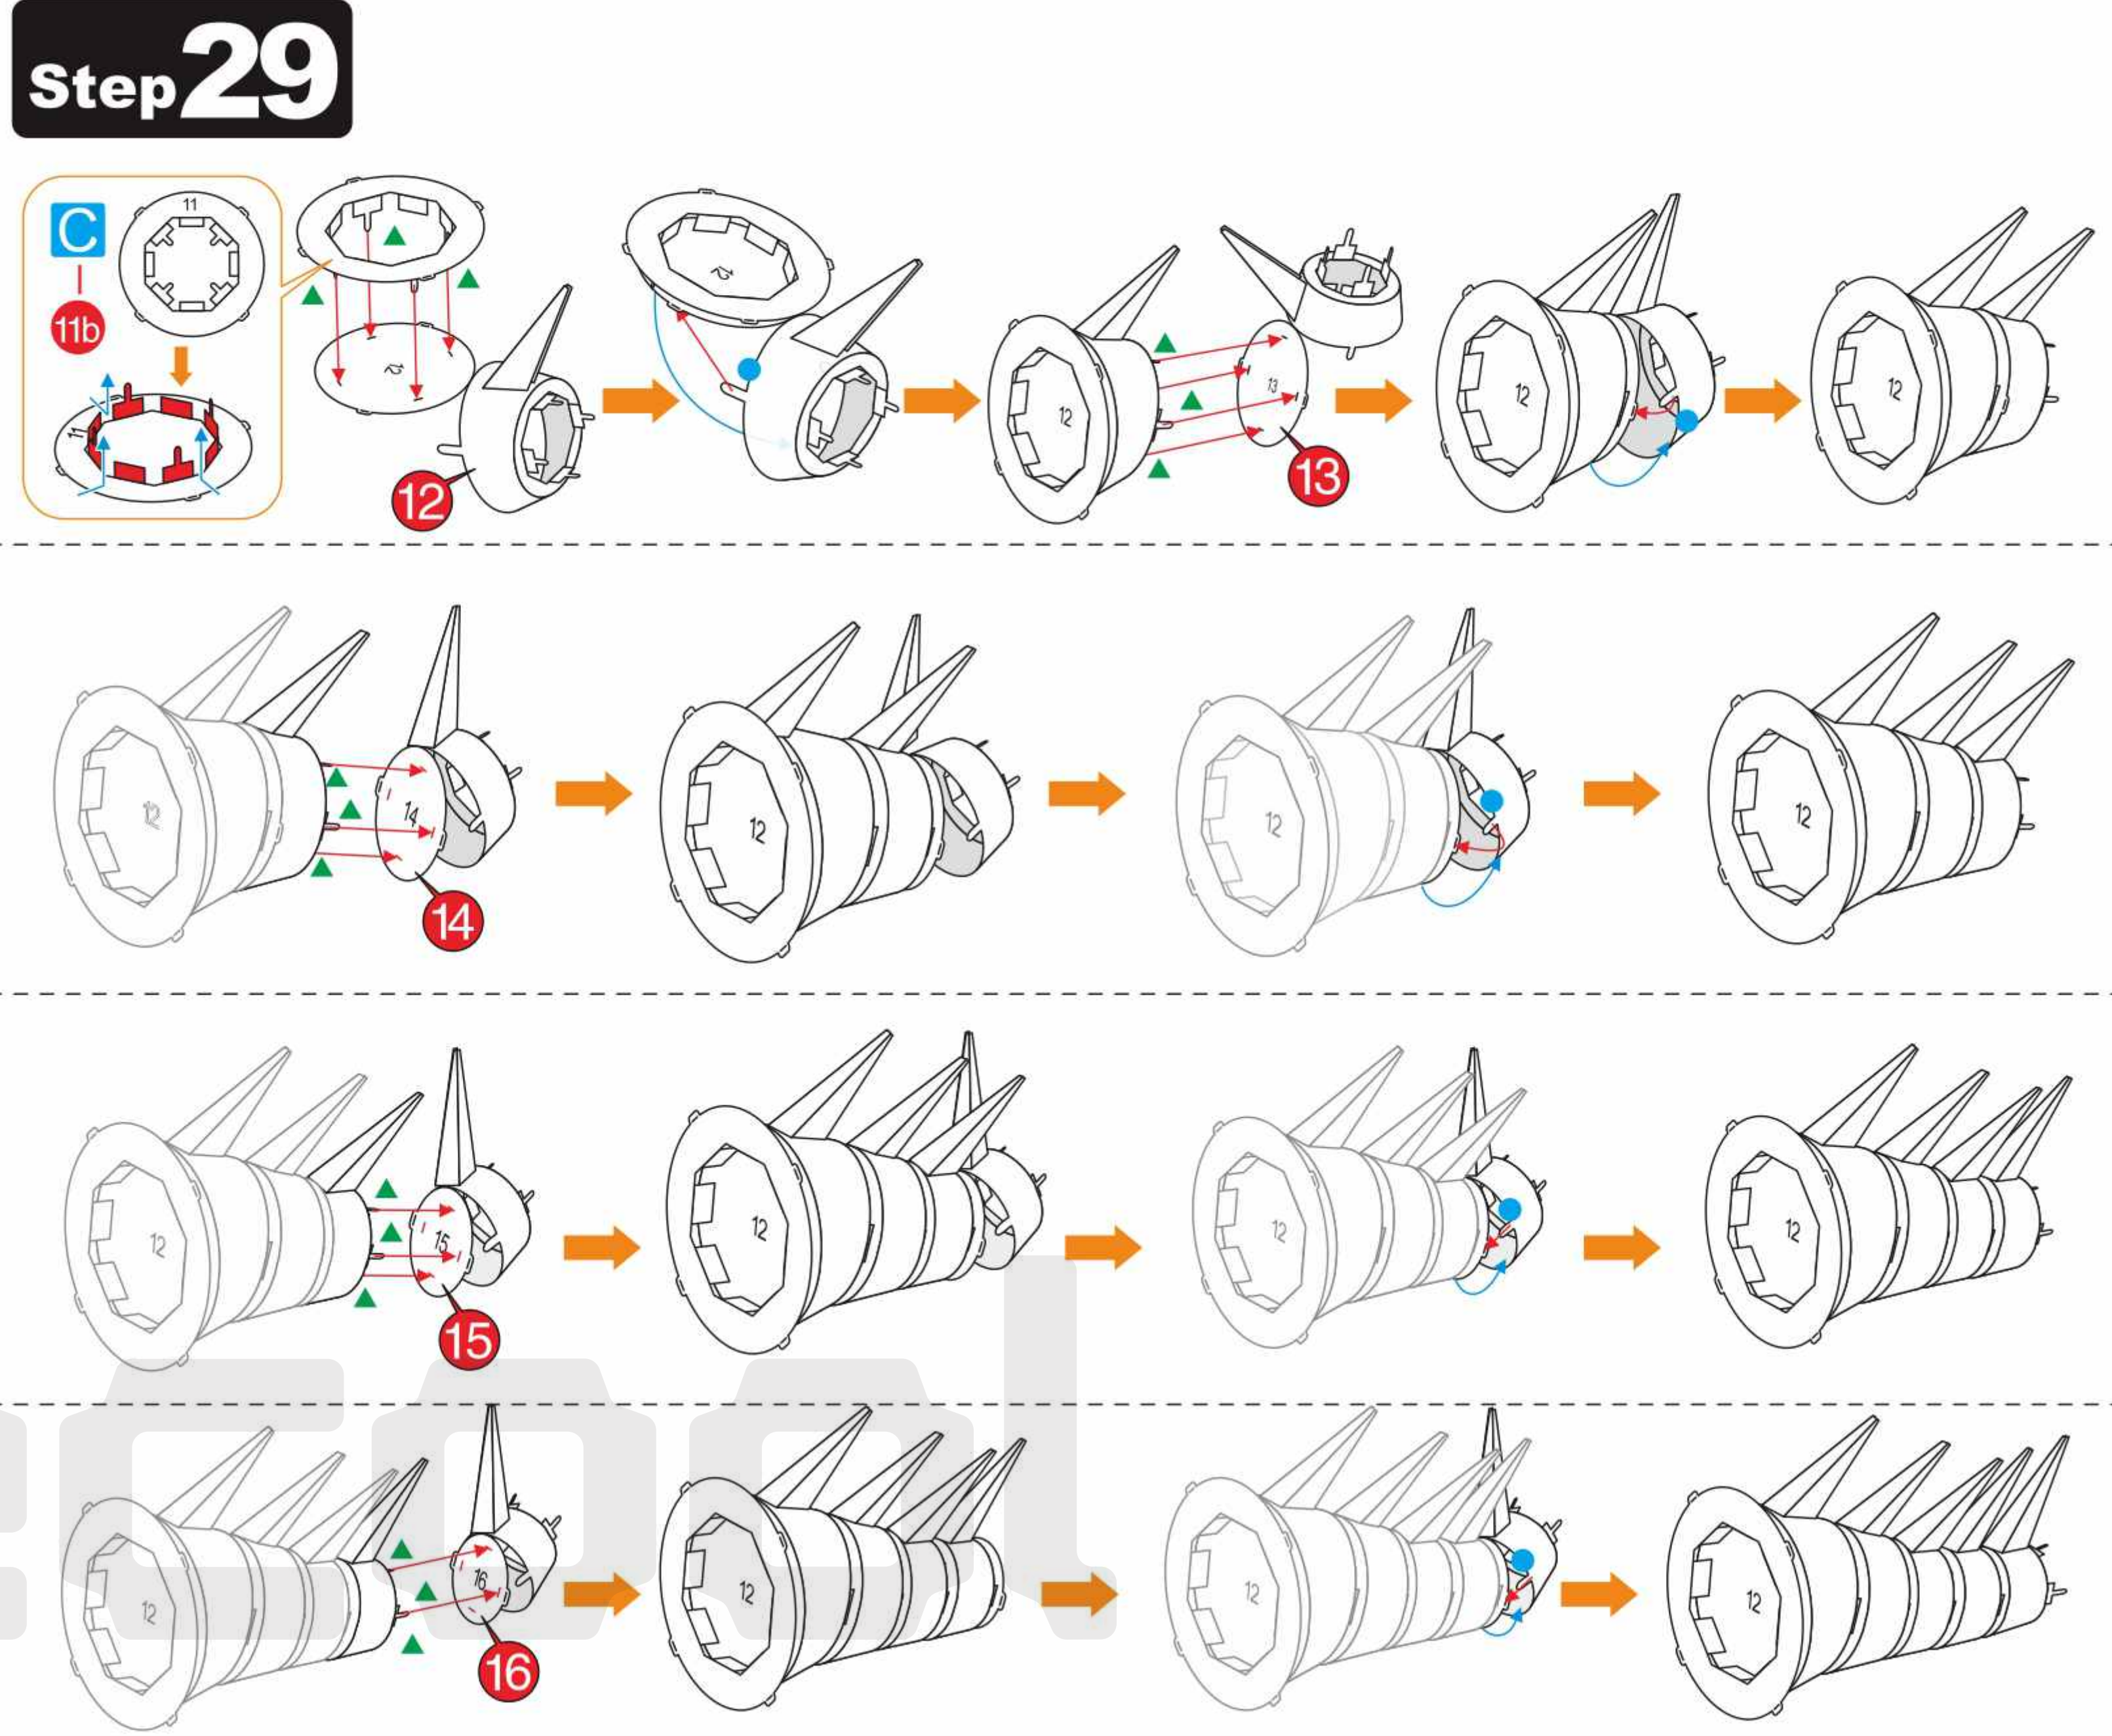

Step 30

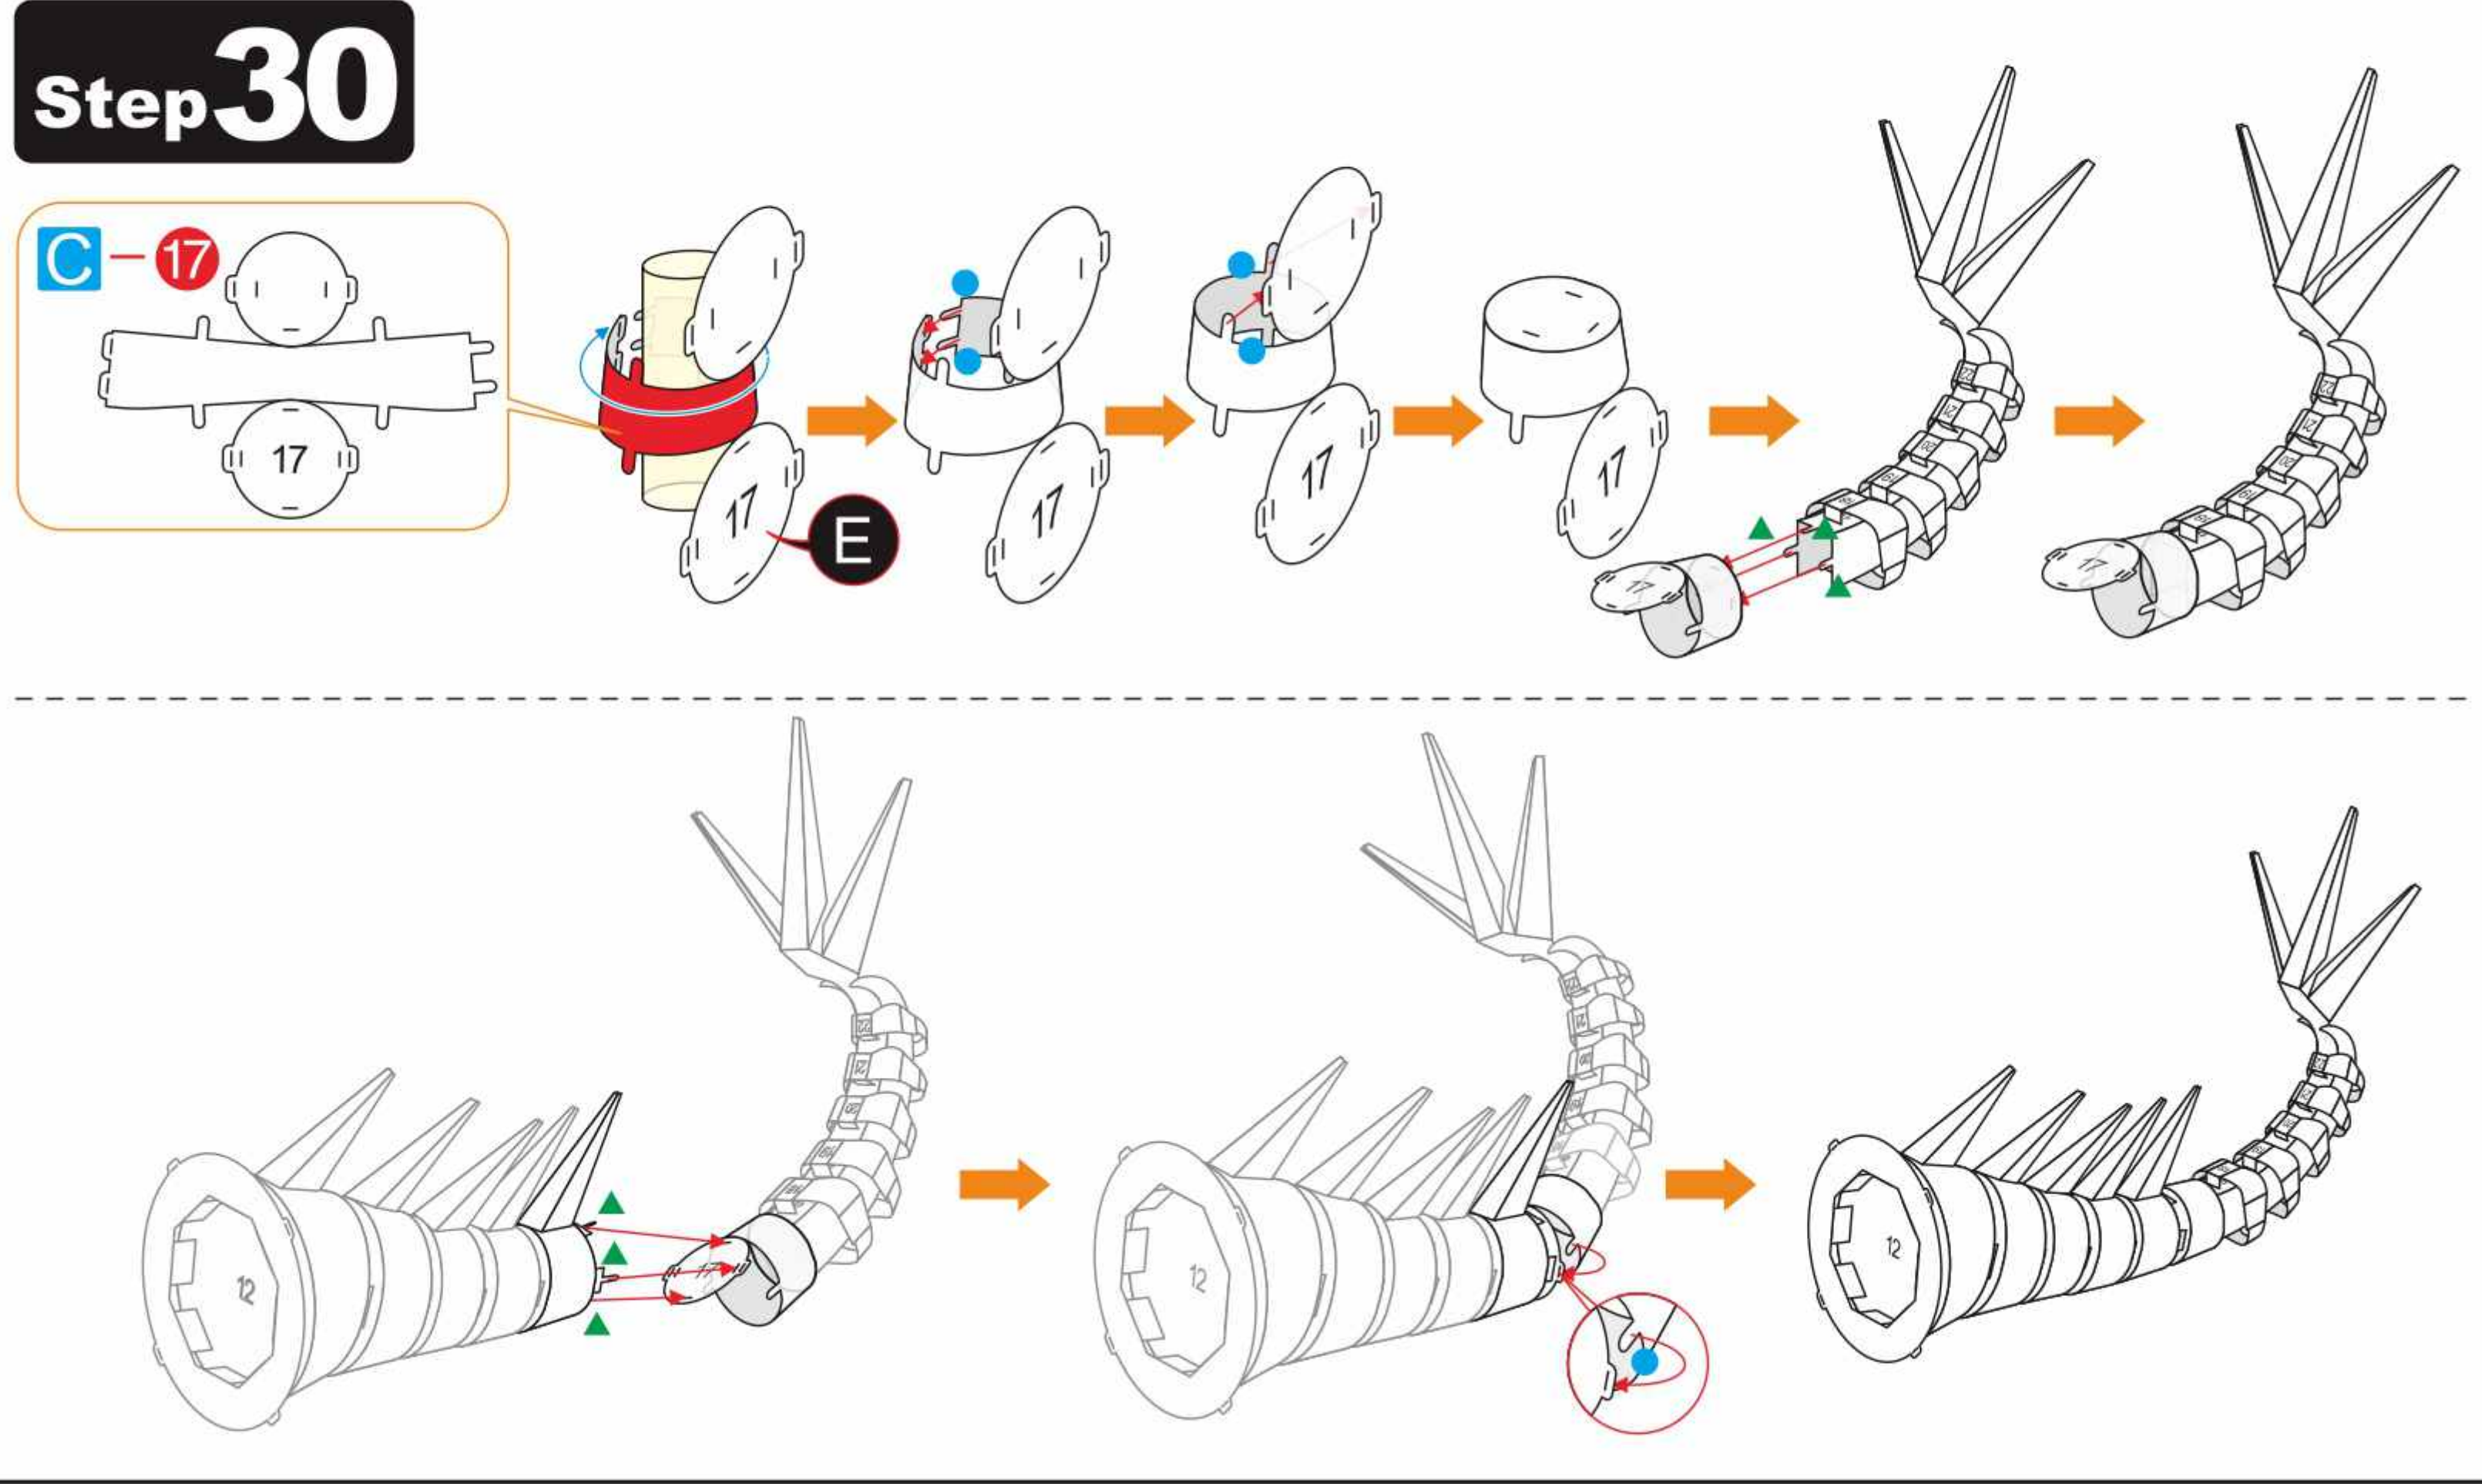

Step 31

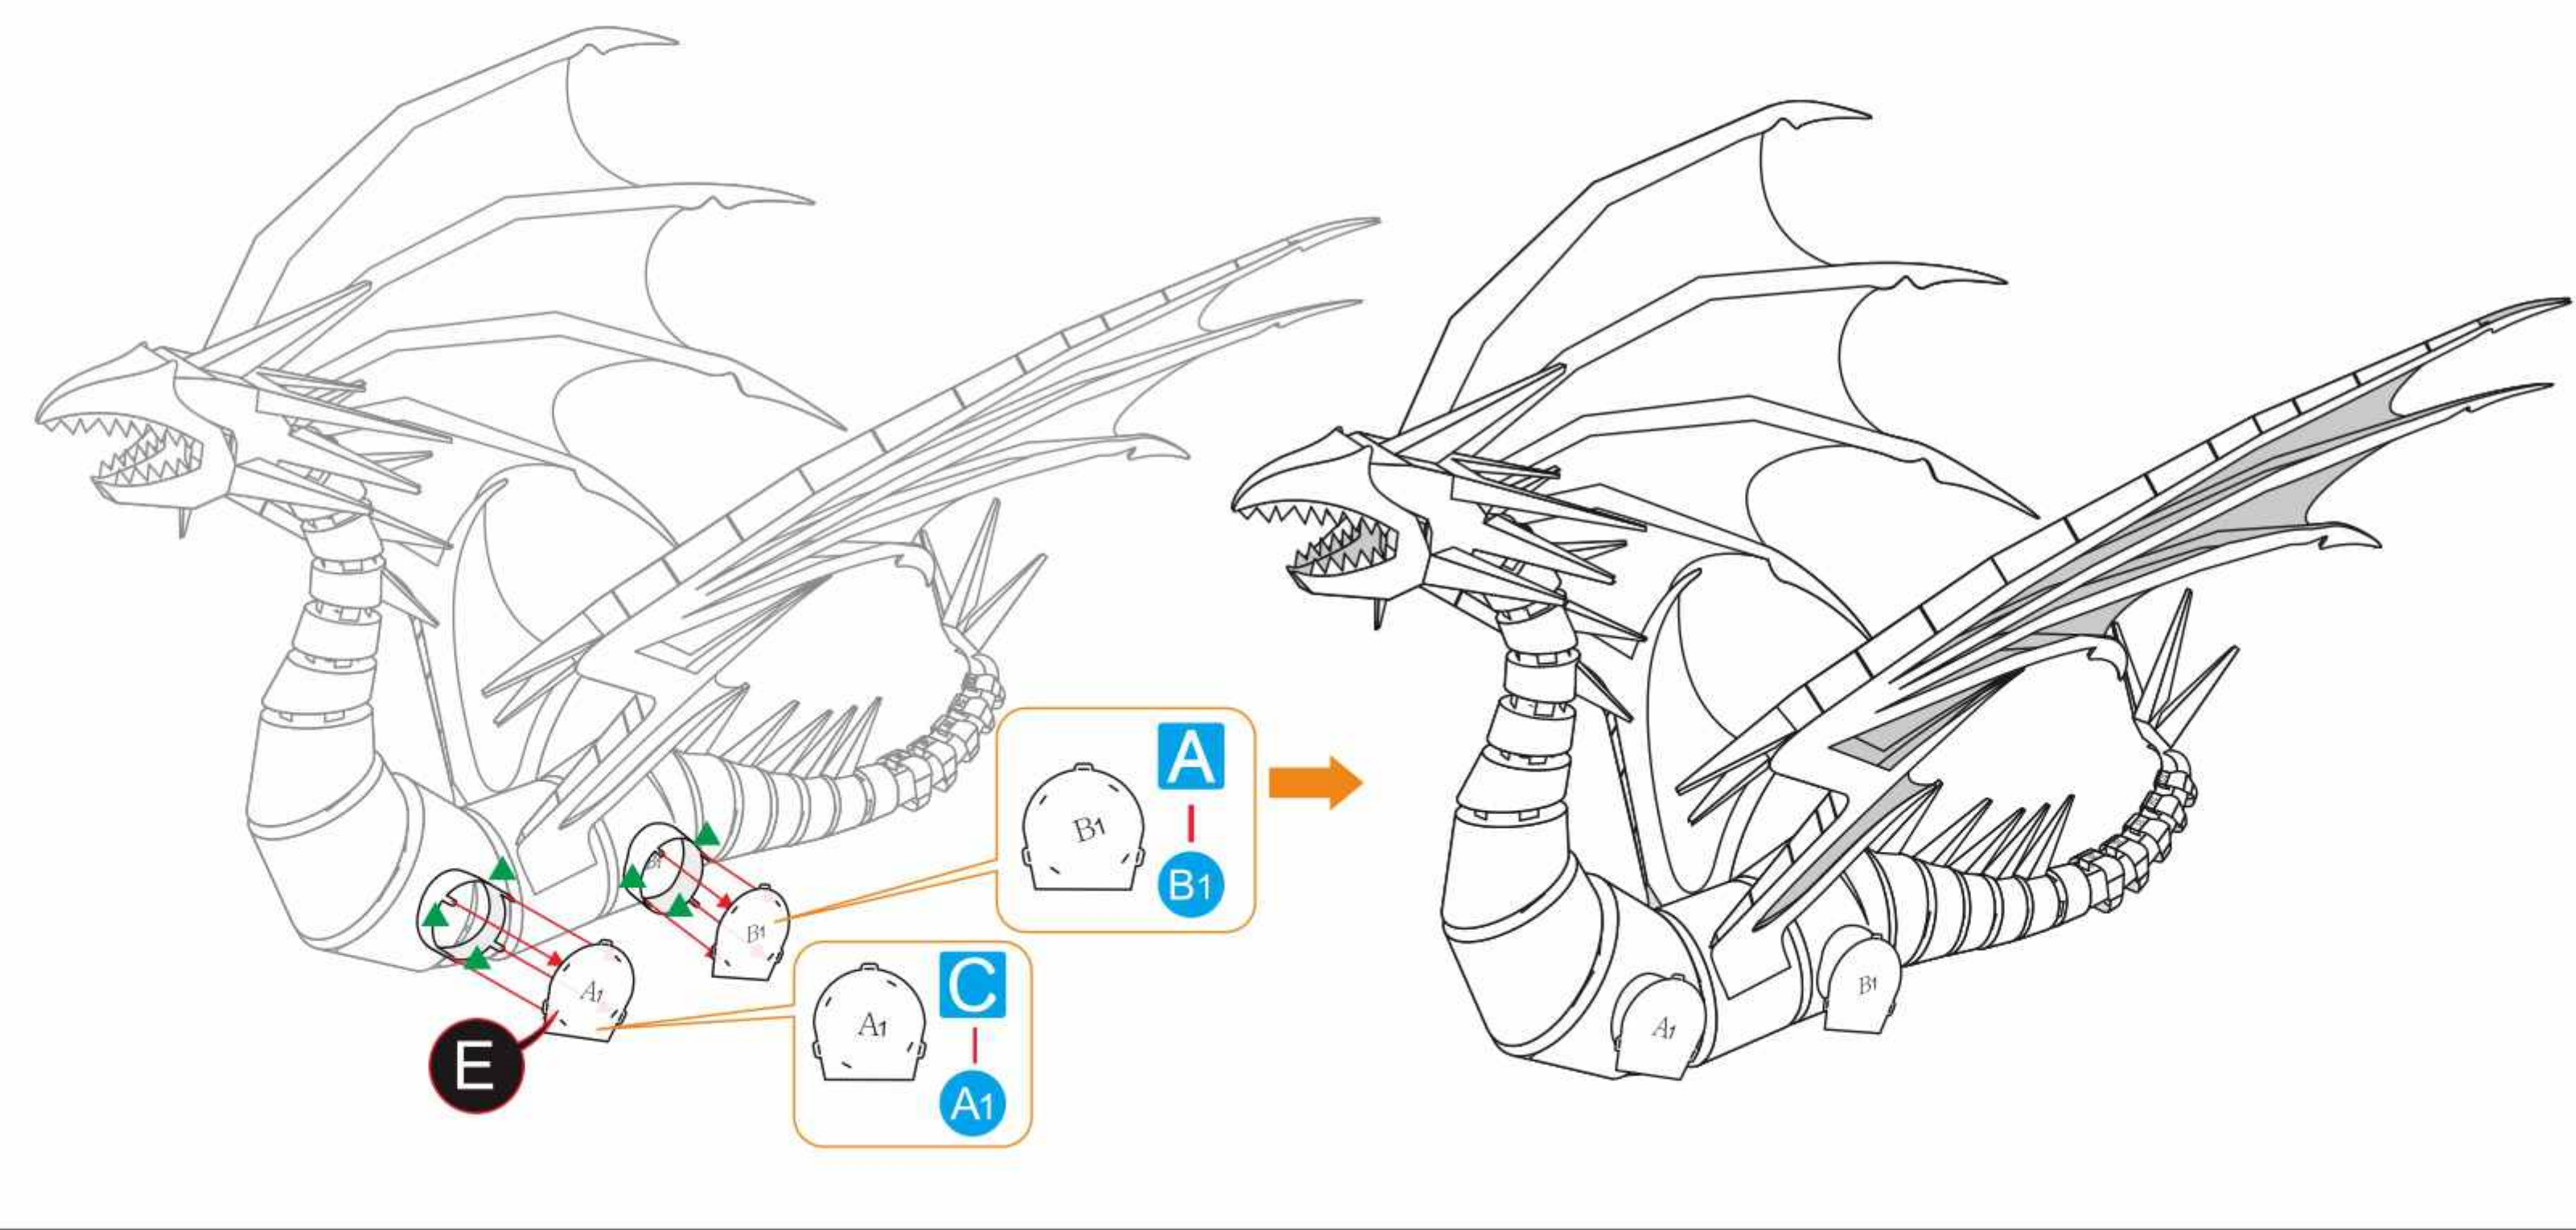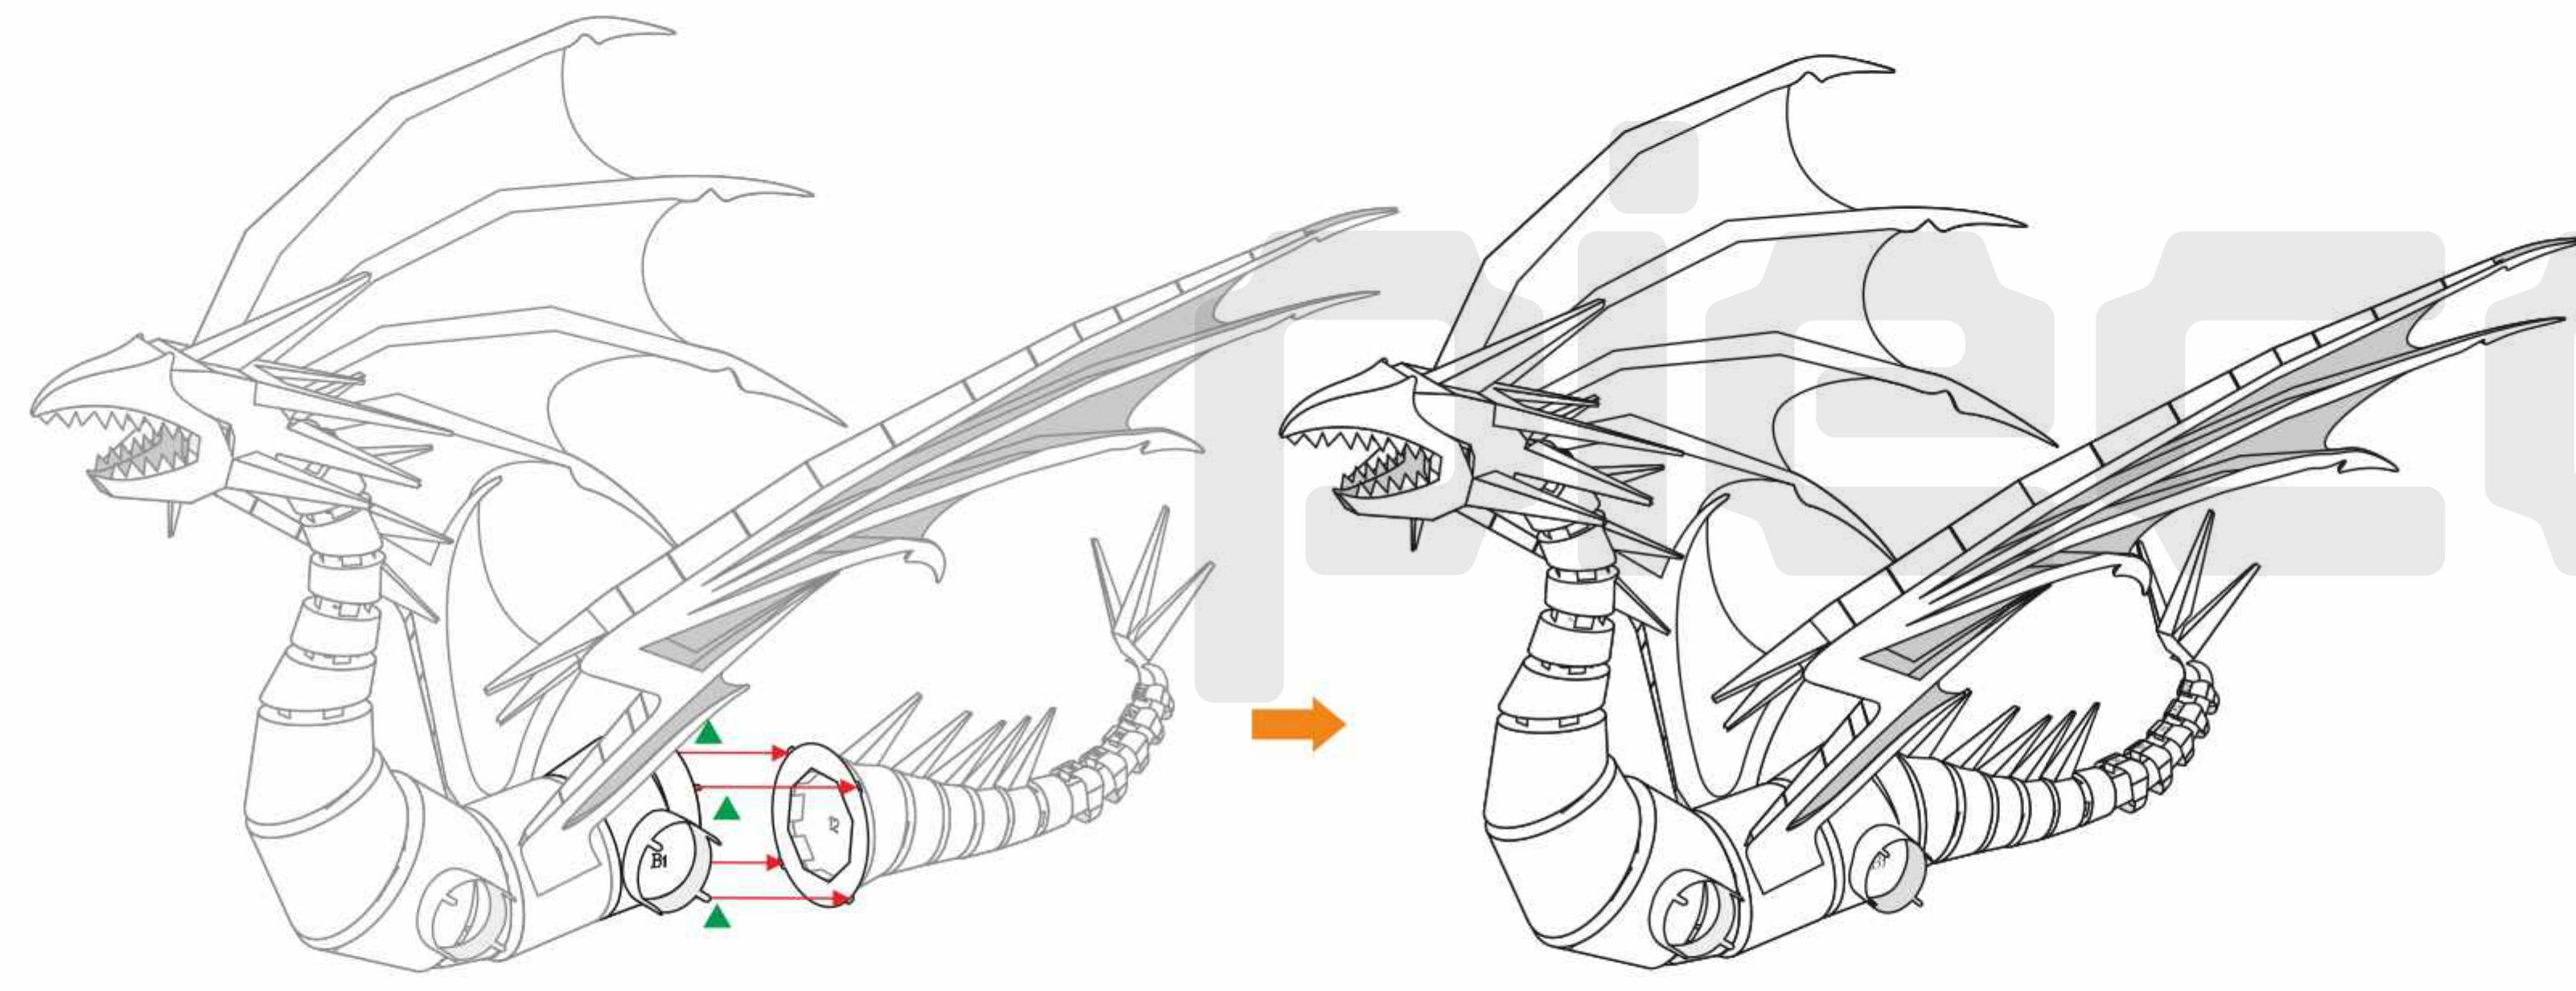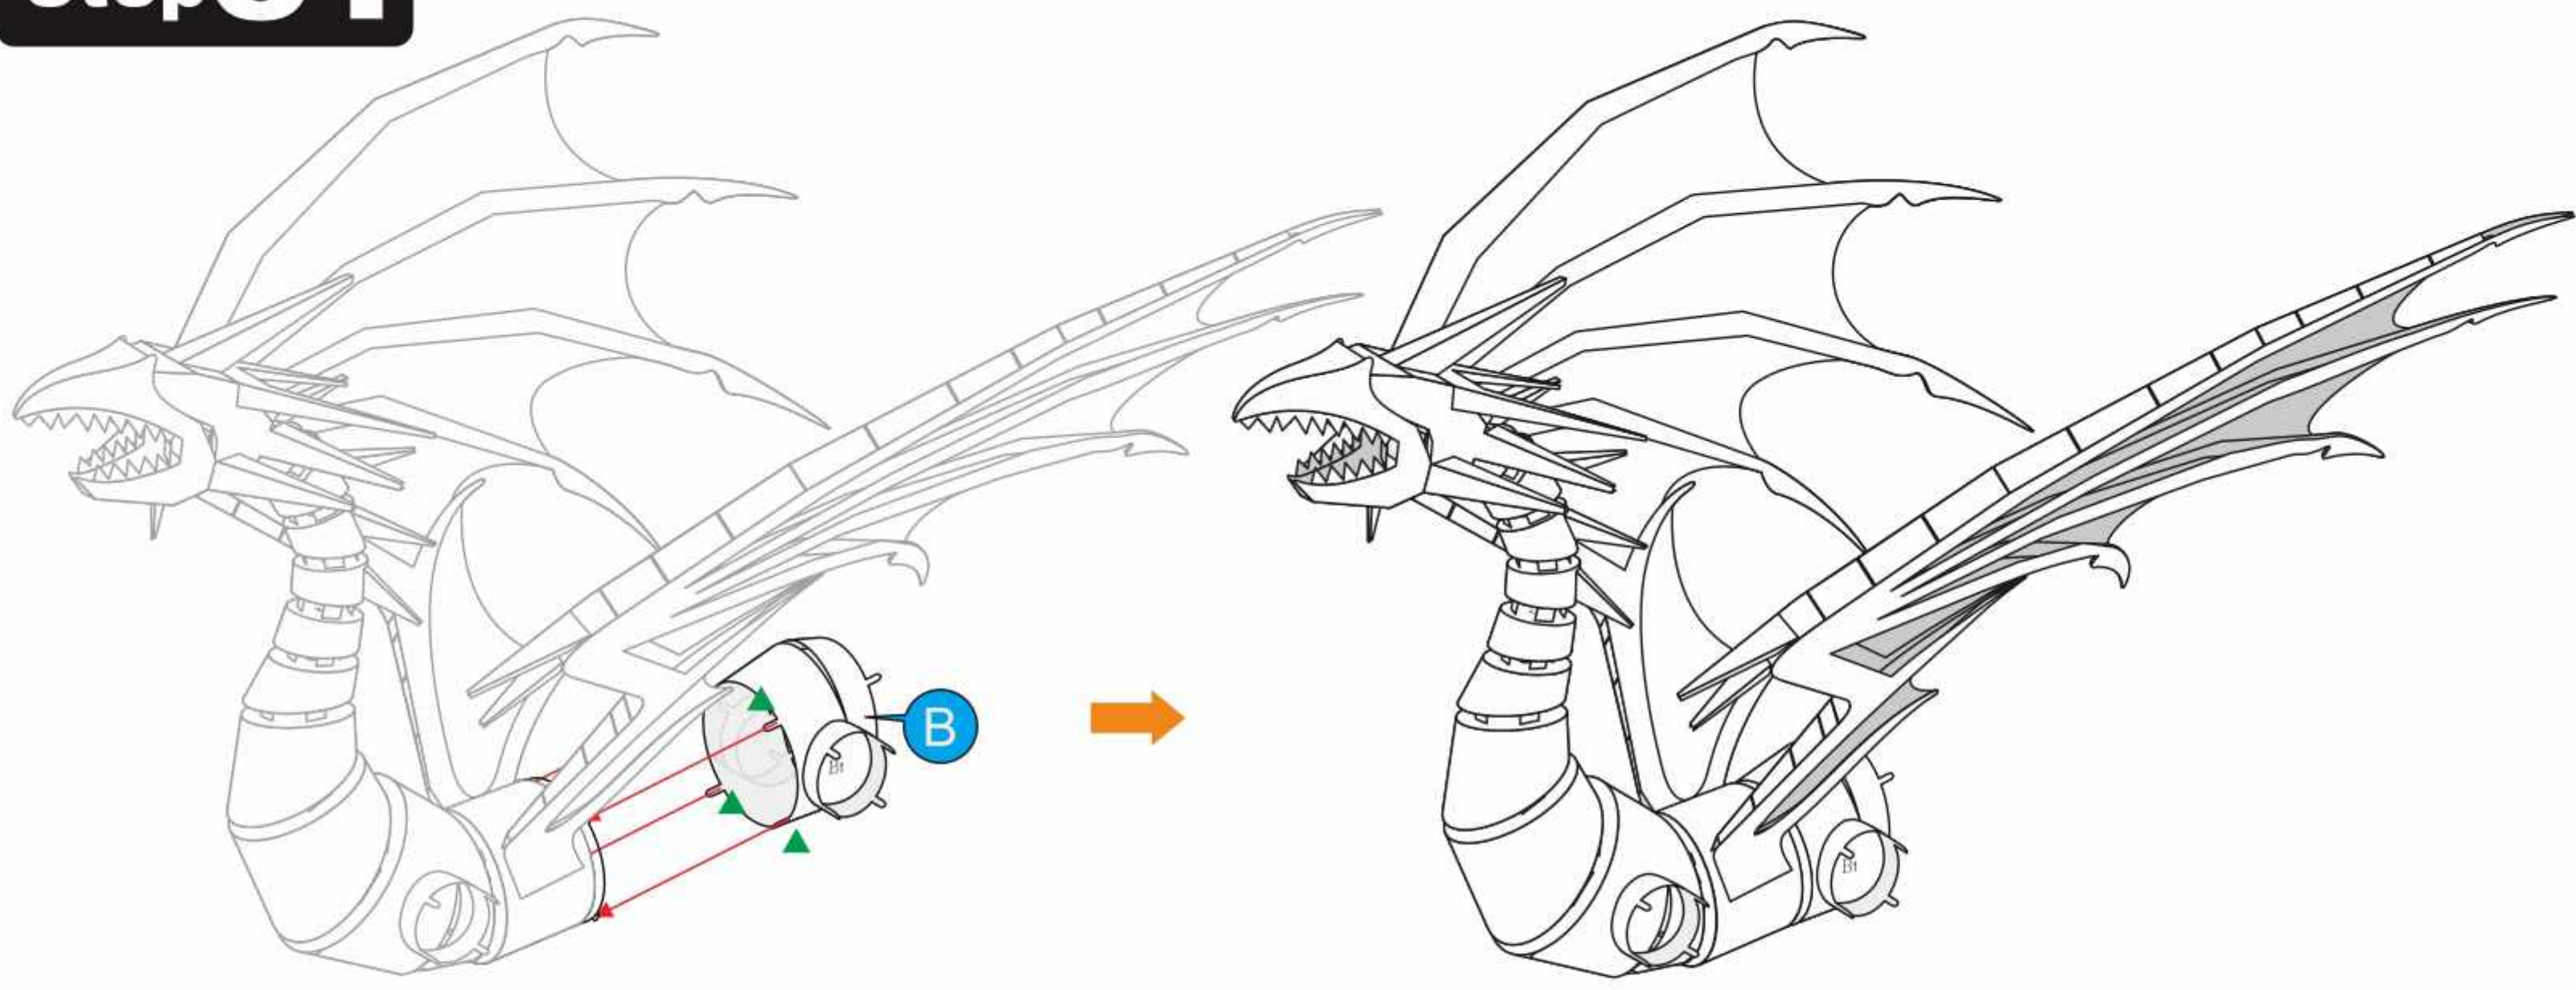

Implement bending and forming operation with the long nose plier in accordance with the blue line.

Step 32 AC-18 E a x2

Step 33 BC-19 ABC-21 E B-22 E b x2

Step 34 AC-23 E BC-24 E a B1

Step 35 AC-25 E BC-24 E a B2

Implement bending and forming operation with the long nose plier in accordance with the blue line.

Step 36 A-17 B-26 E

Step 37 C-27 ABC-21 E AB-29 C x2

13 14
15 16

Step 38 AC-23 E BC-24 E A1

Implement bending and forming operation with the long nose plier in accordance with the blue line.

Step 39 A-30 B-26 E

Step 40 AC-25 E BC-24 C-31 NE A2

Step 41 B1

Step 42 A1

A-B2 C-A2 E

B2 A2

piececool

DRAGON FLAME HP071

Metal Sheet + Parts


Sketch Map

© WIST PLASTIC & METAL TECHNOLOGY LIMITED. ALL RIGHTS RESERVED.

CP-PART-HP071#-A1-2020.07.25

Metal Sheet

A

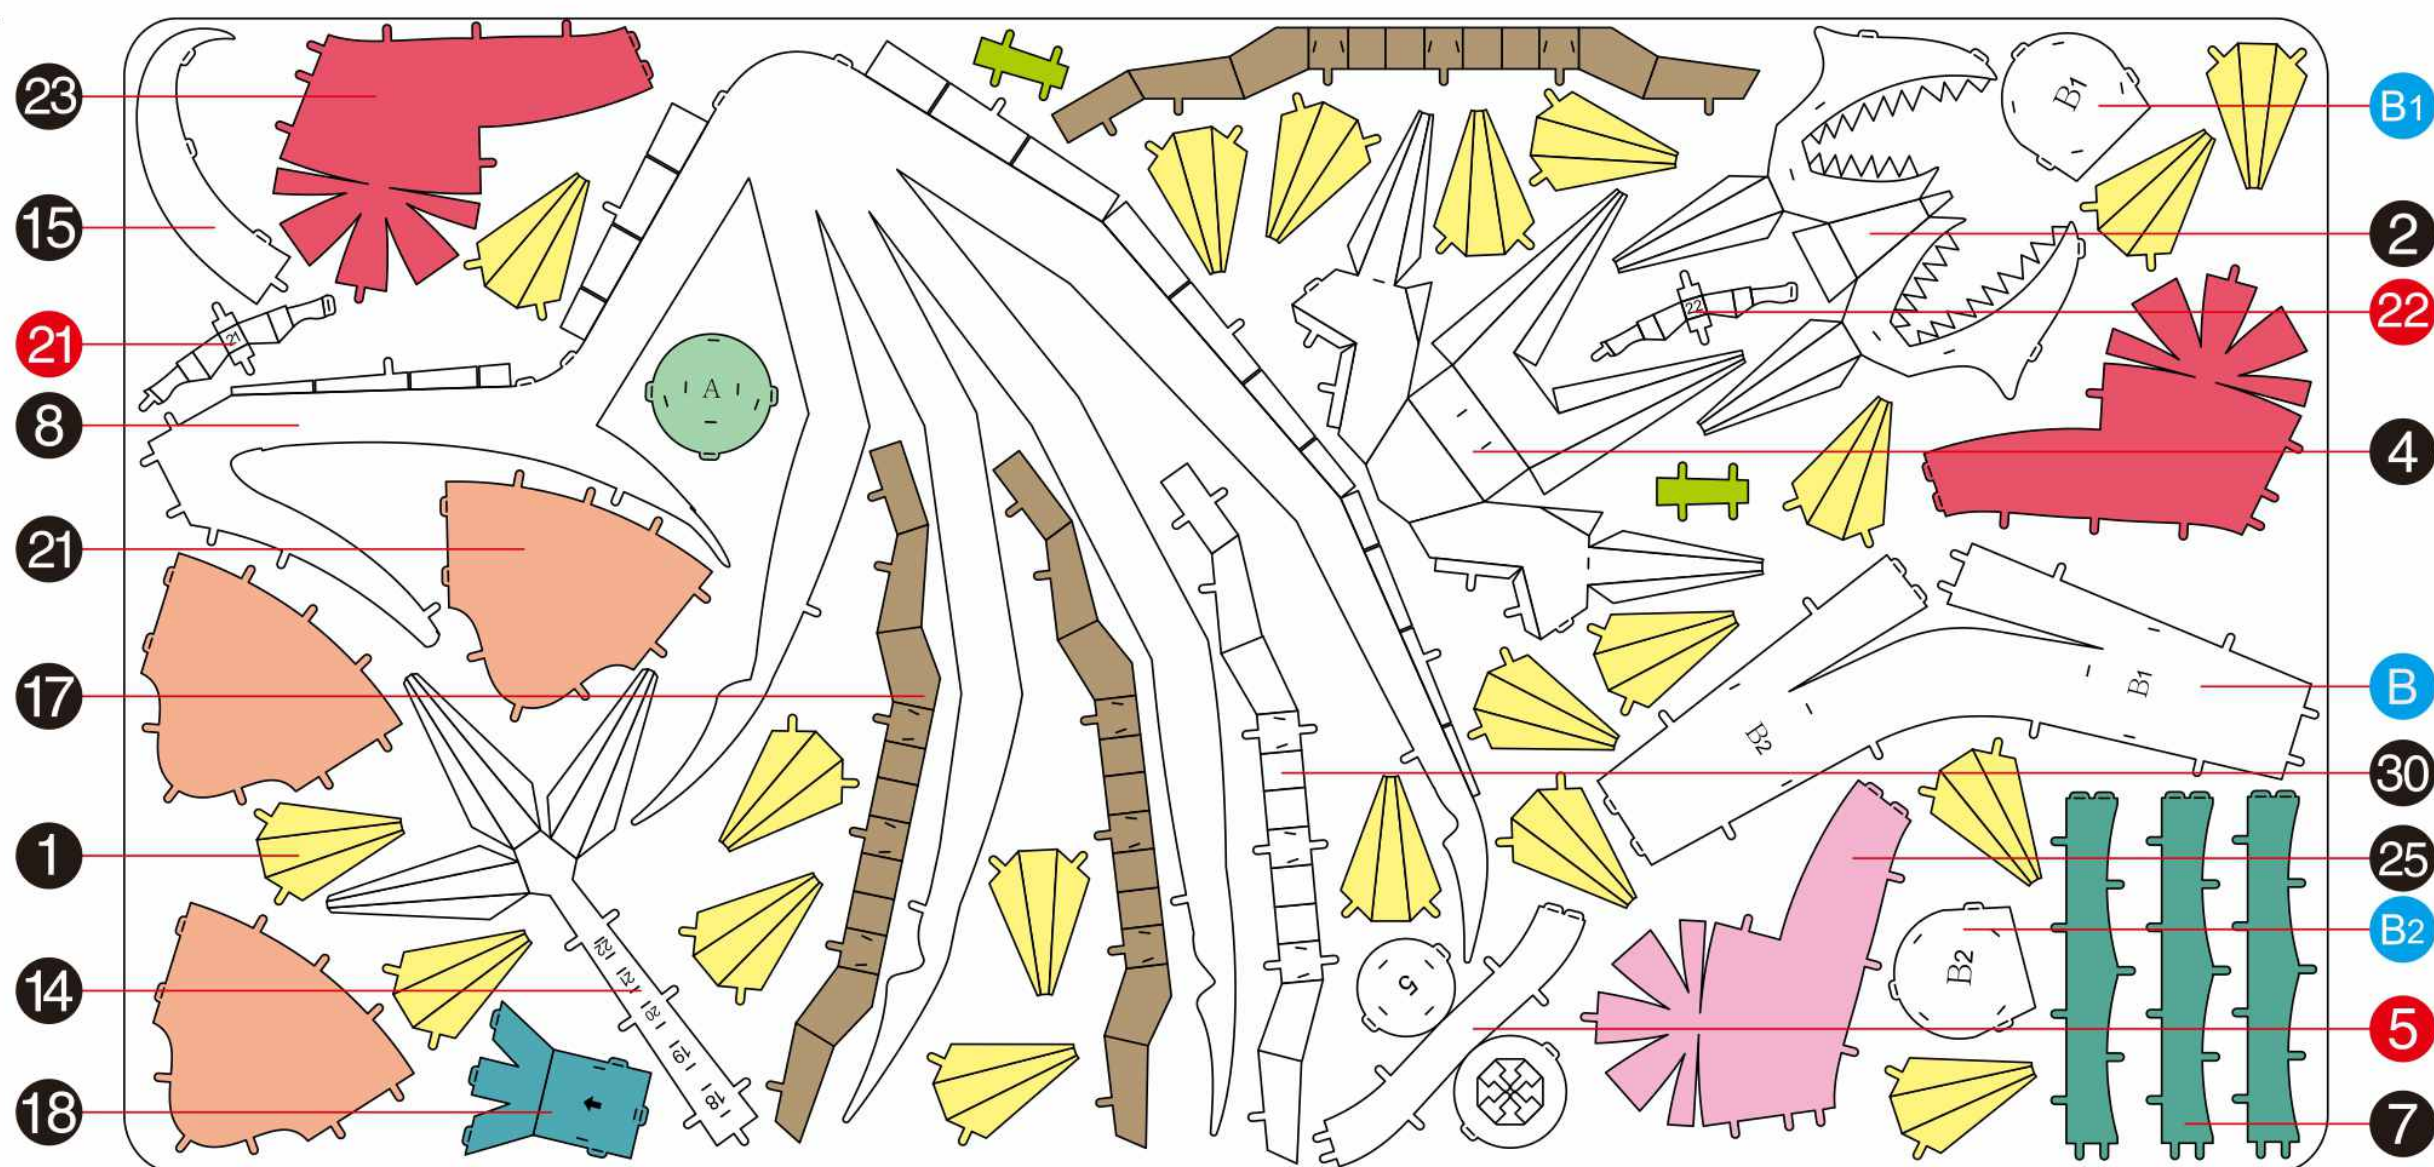

Metal Sheet

B

