piececool

SCARLET MACAW
HP118

CP-ASSY-HP118#-A1-20200725

Installation Reminder

Please handle the metal trim carefully to prevent scratches.

- Prepare tools:

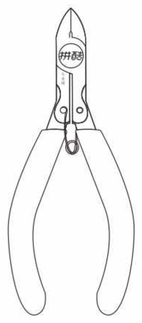

Clipper
Cut the parts off the sheets.

Needle nose pliers
Fold the cutting parts into models.

It is recommended to use piececool authentic assembly tools to build or fix the design. It is tailor made for the metal pieces and user friendly.

- Installation Method:

a. Remove the parts

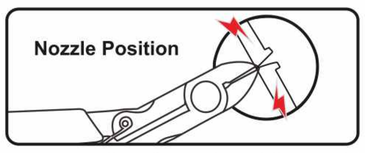

Please use the clipper to cut the nozzle position and remove the parts.

b. Identify the parts

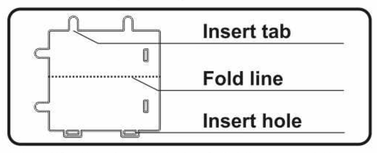

Identify the insert tab, fold line and the insert hole.

c. Folding the parts

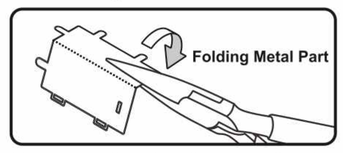

Please use the Needle nose pliers to fold the cutting parts into models.

d. Retaining the parts

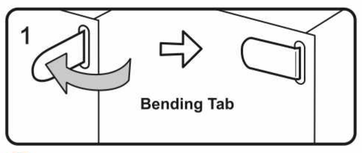

Insert the hole, bending tab with angle 90°

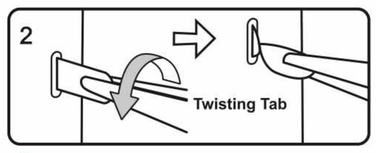

Insert the hole, twisting tab with angle 90°

- Attention :

E Engraved / Color side
NE Non-engraved / Silver side
! Attention Point
Keep the parts symmetrical

When cutting metal parts, please do not cut the "insert tab" as "nozzle position". Only cut the parts of the current step when cutting the parts. Do not cut all the parts at one time to avoid loss.

When encountering the parts of the folding line, please pay attention to the front and back of the metal sheet and the direction of the folding. According to the direction indicated in the instruction, cut lightly and fold slowly. It is best to fold it once. Do not fold it repeatedly to avoid damage to the parts.

Assembly Guide

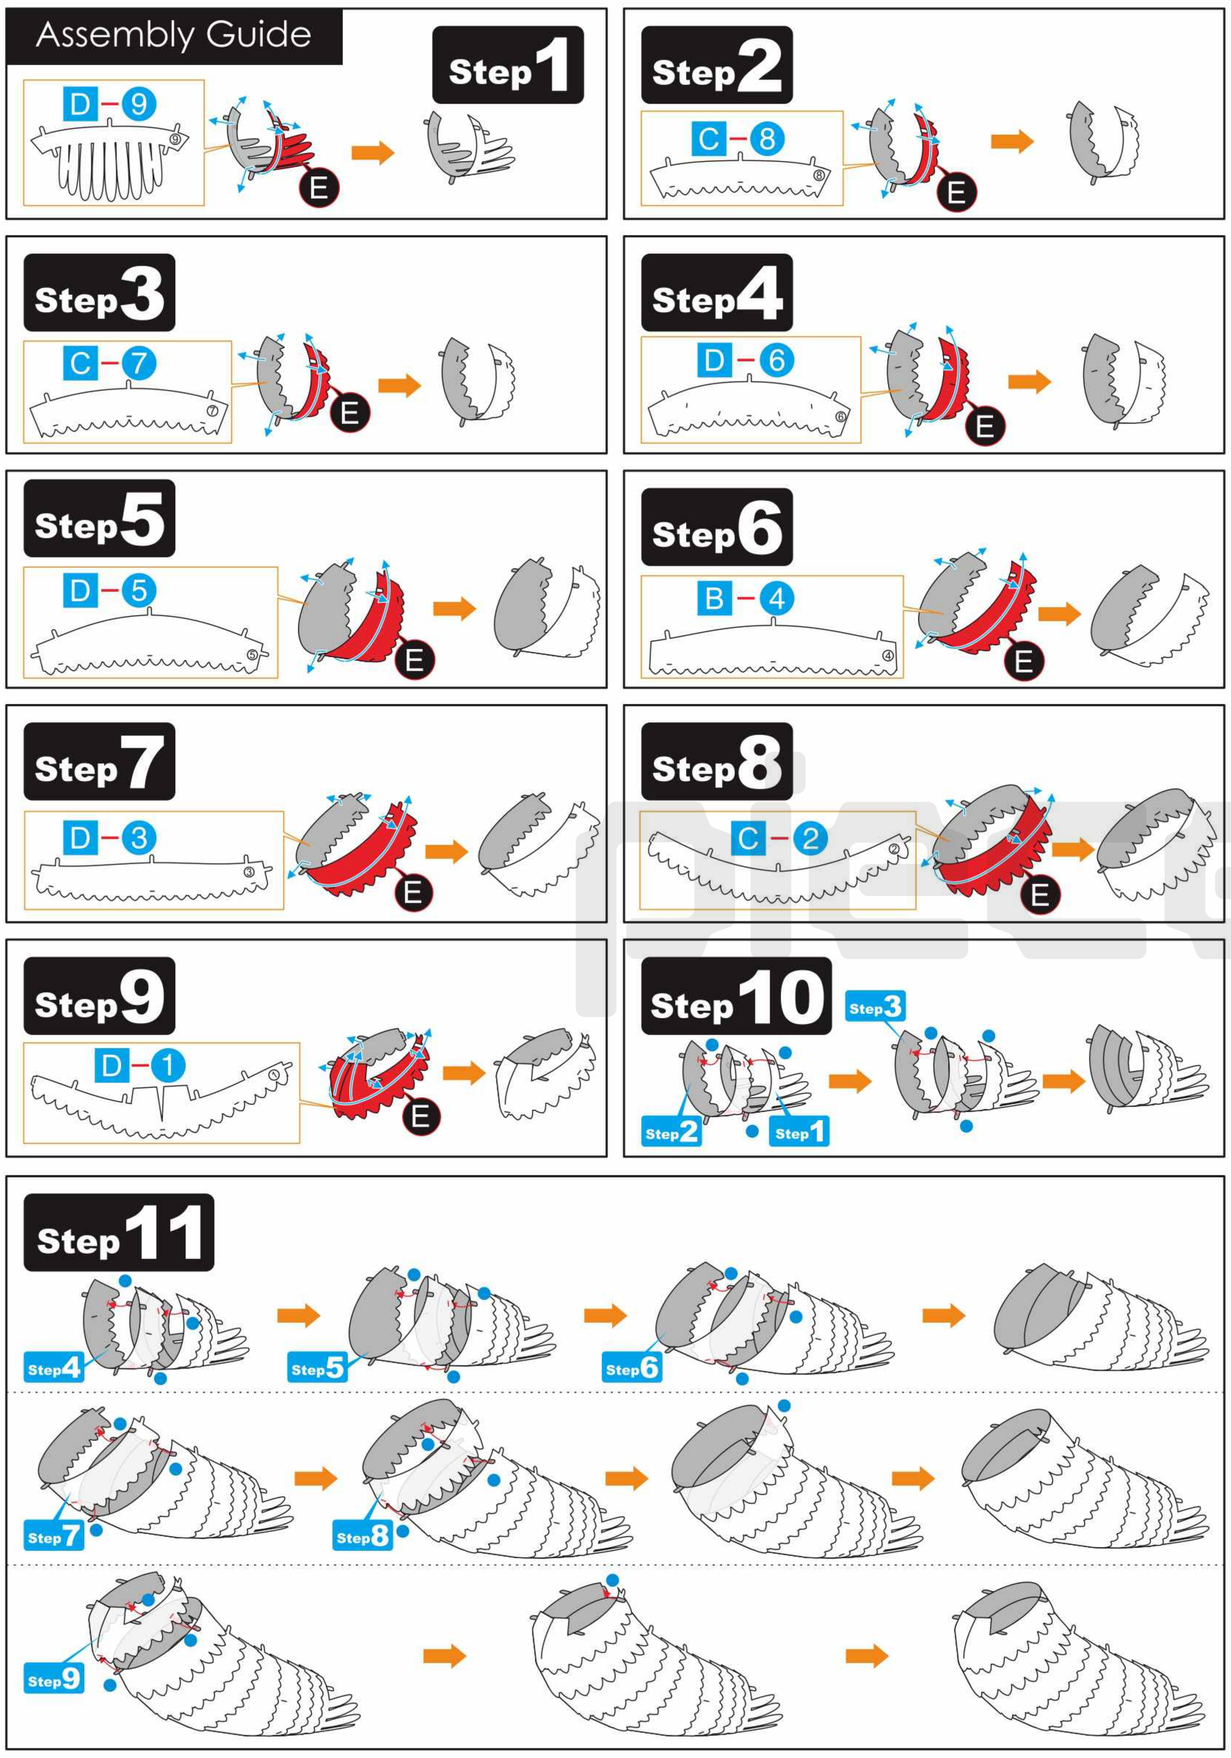

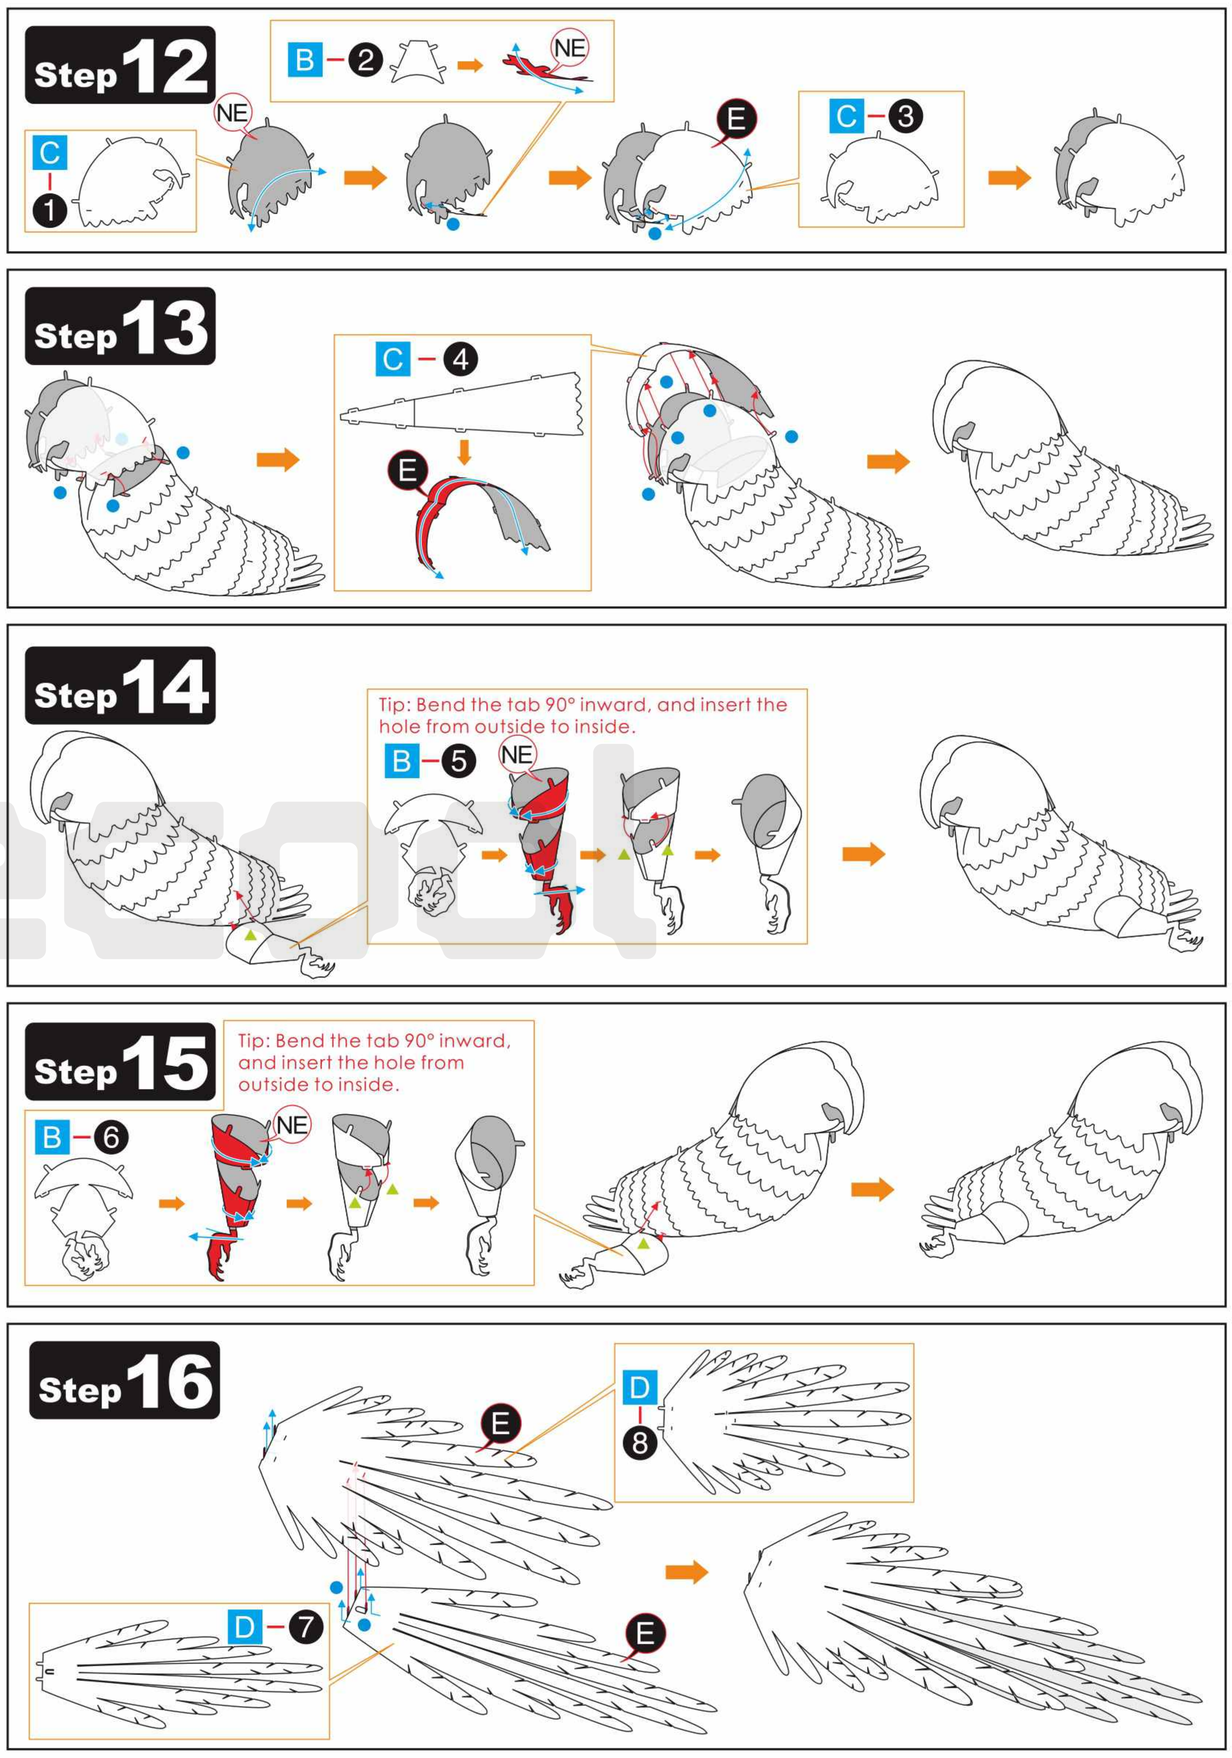

Step 17

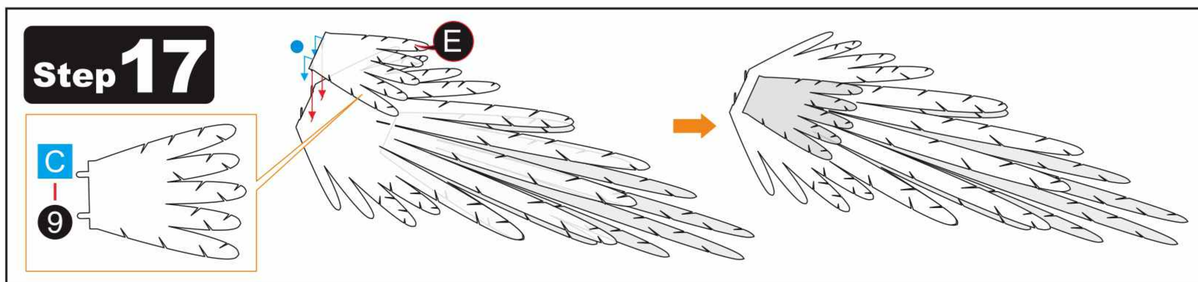

Step 18

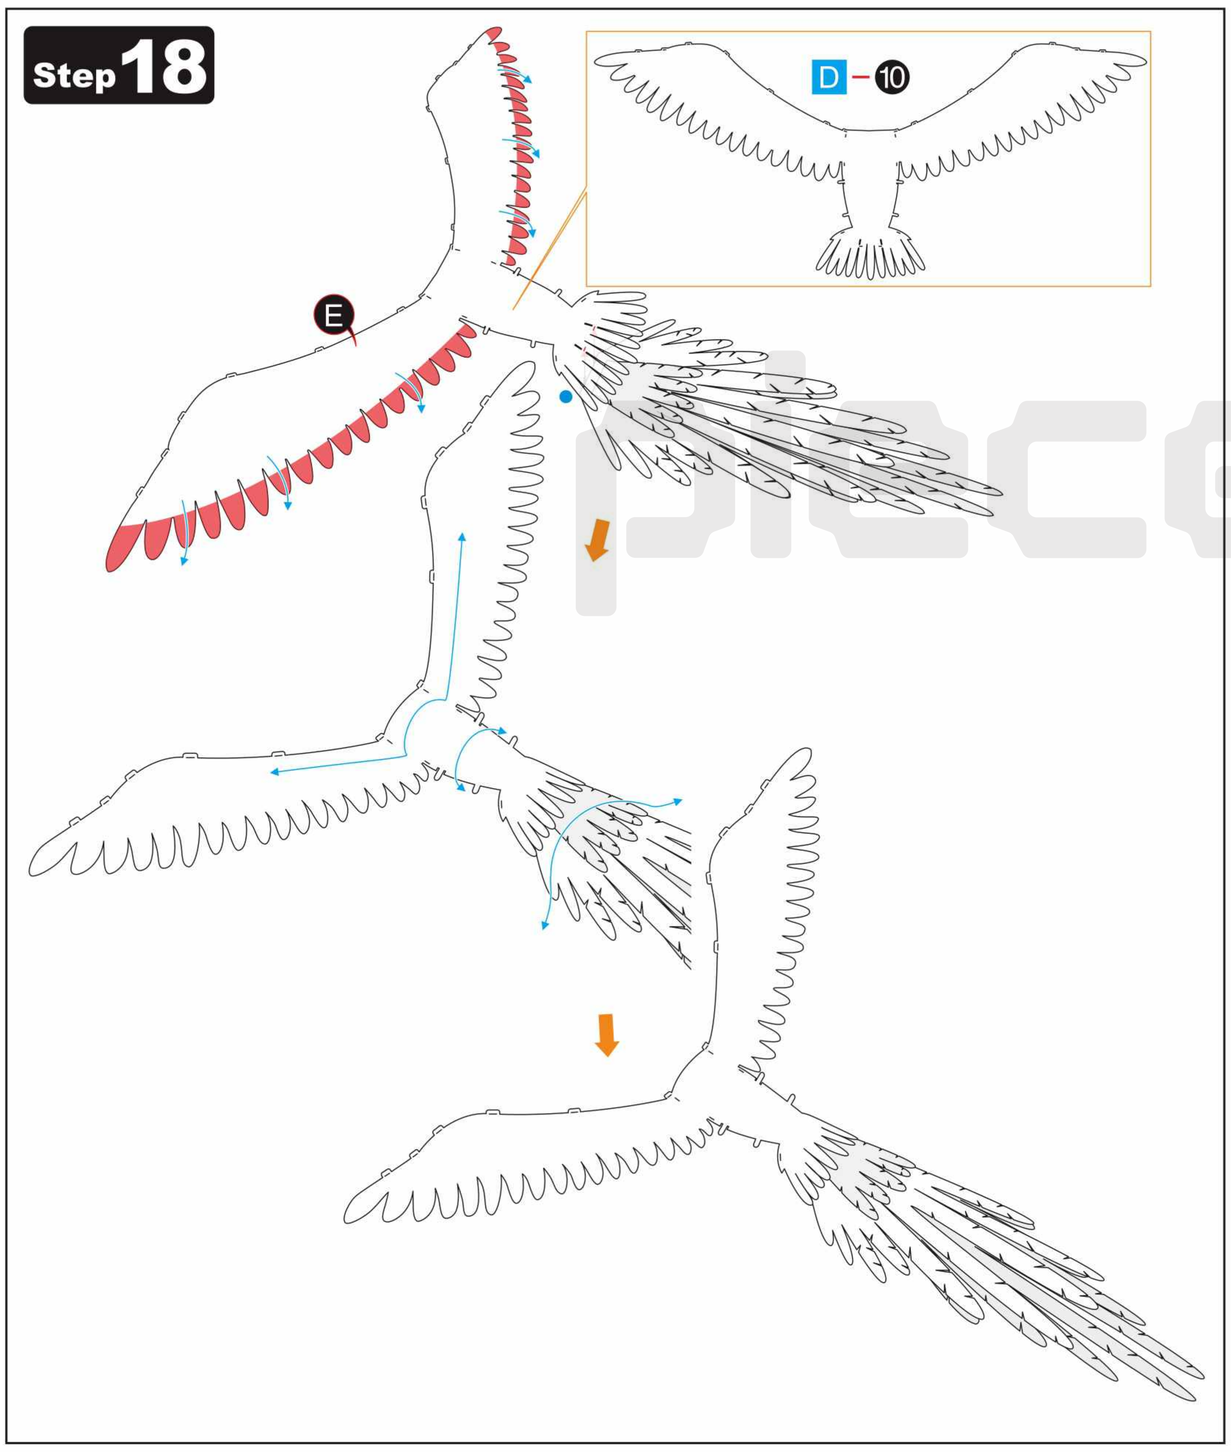

Step 19

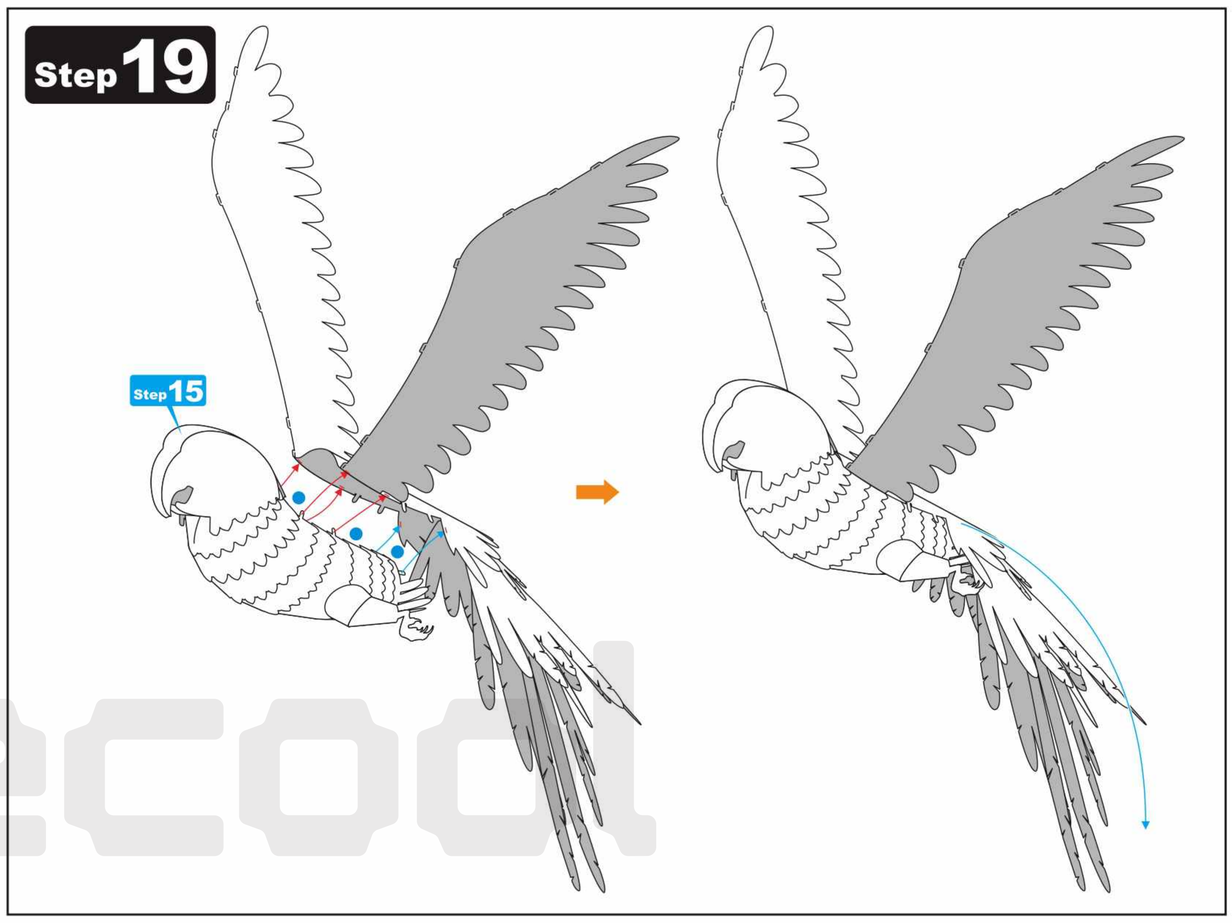

Step 20

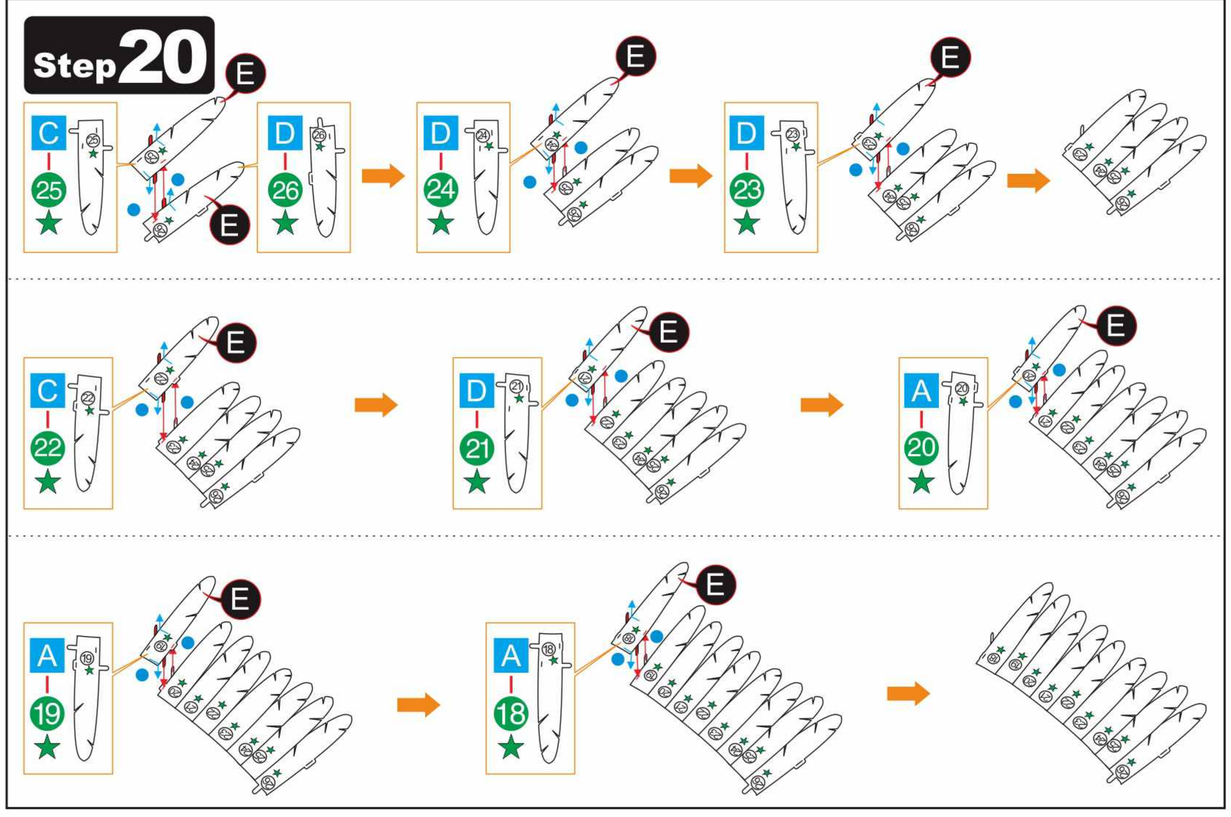

Step 21

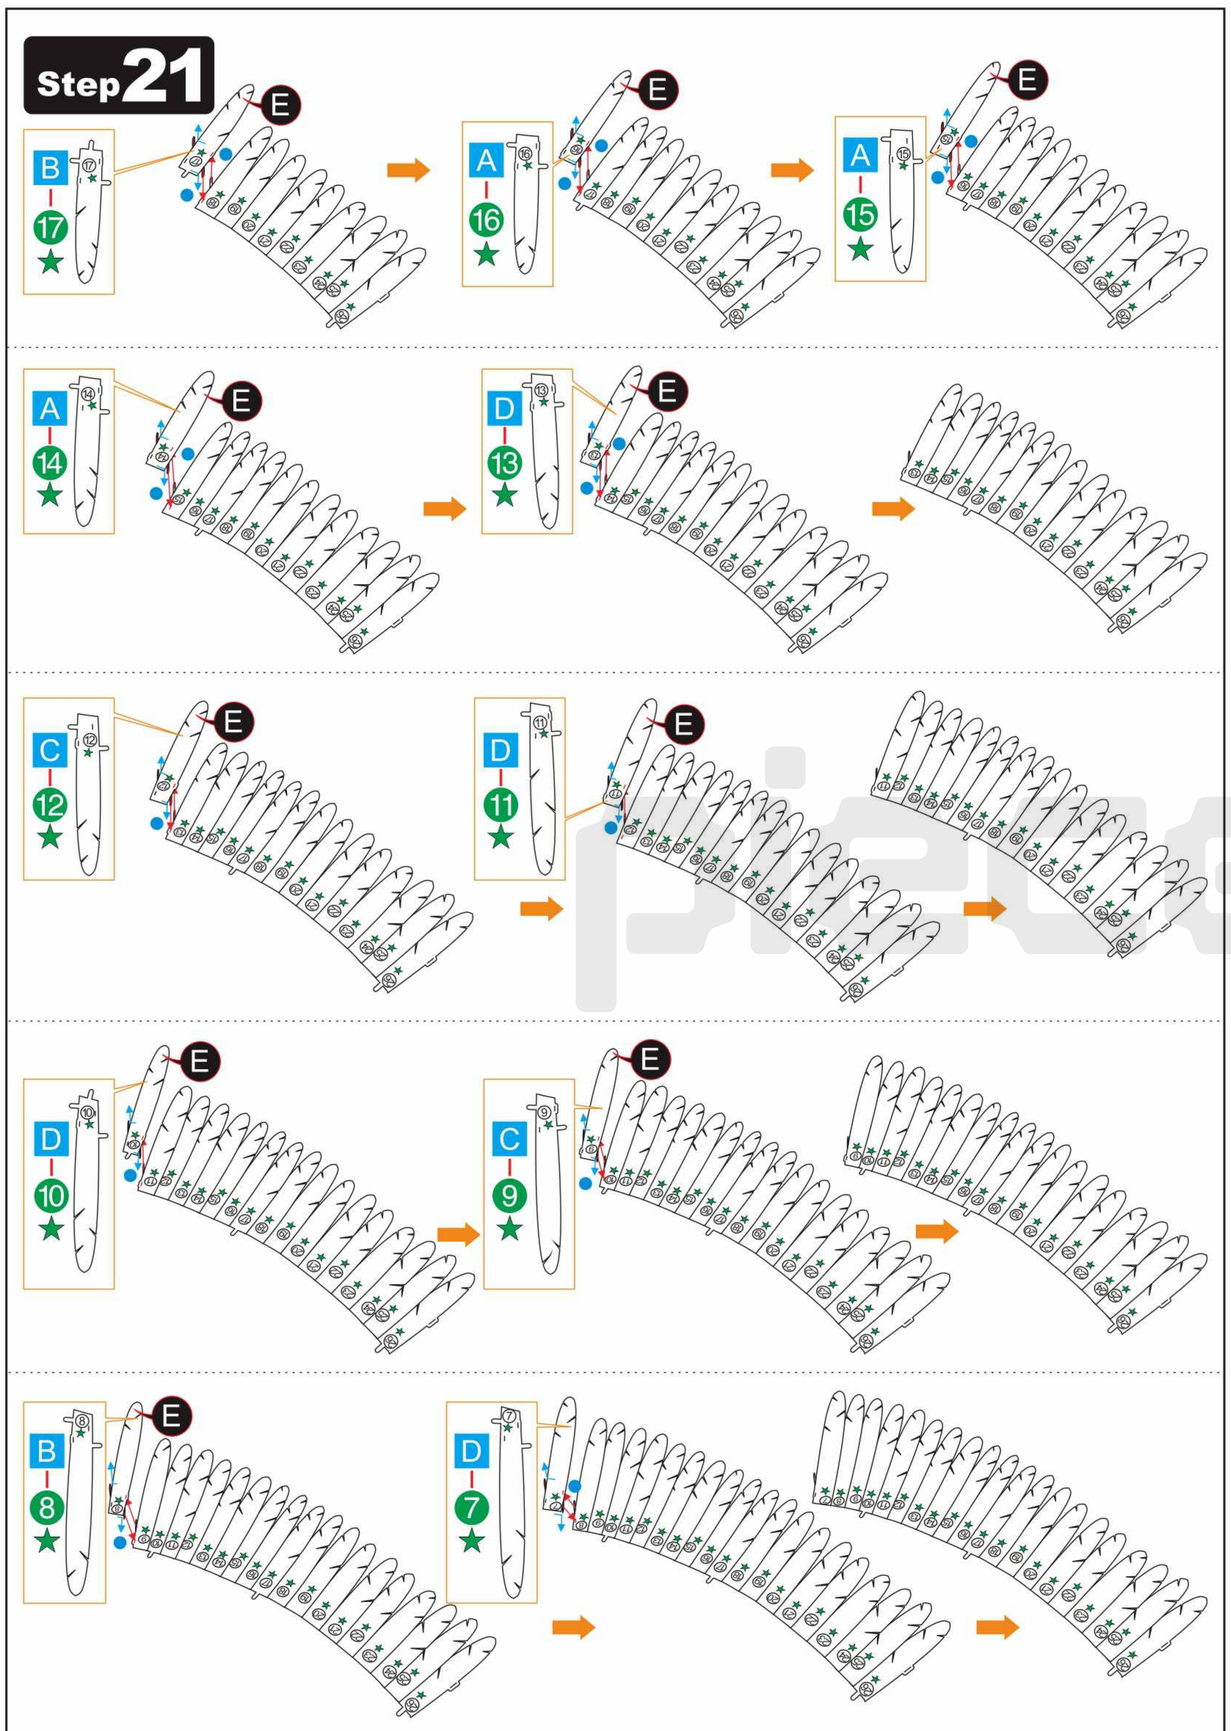

Step 22

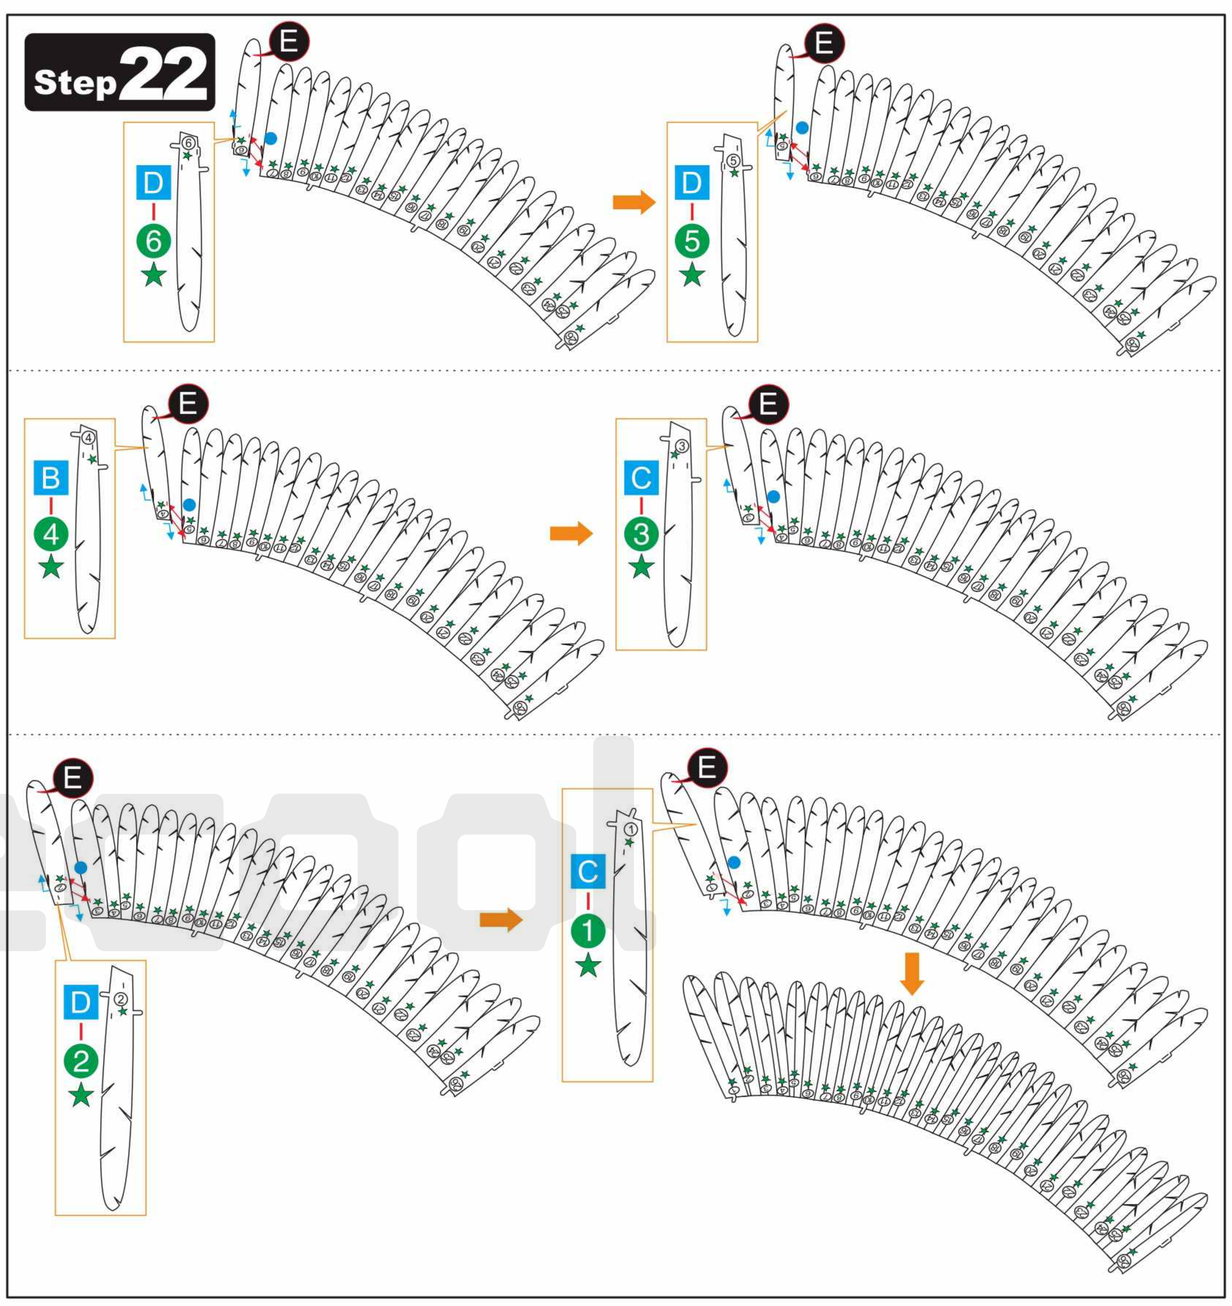

Step 23

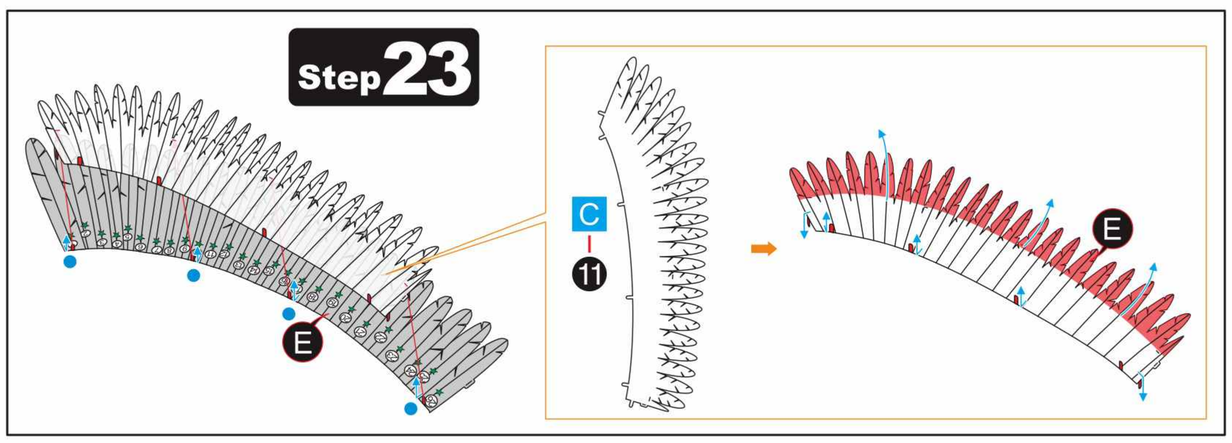

Step 24

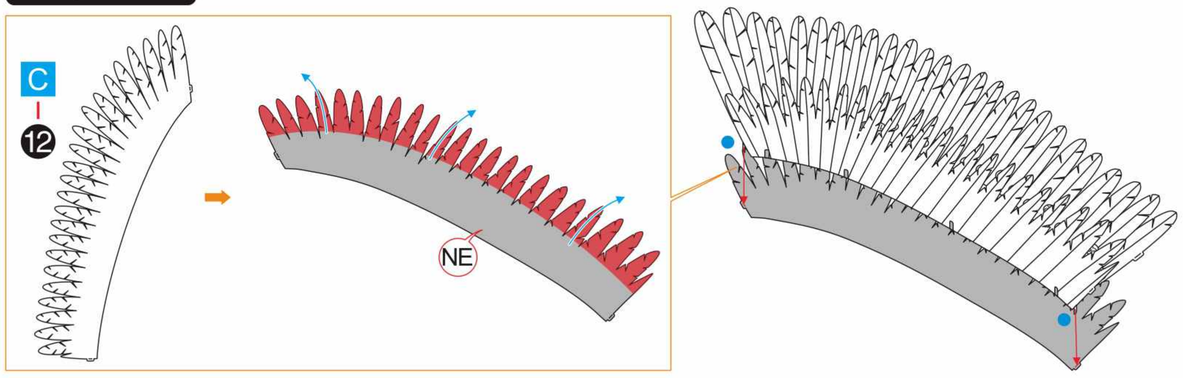

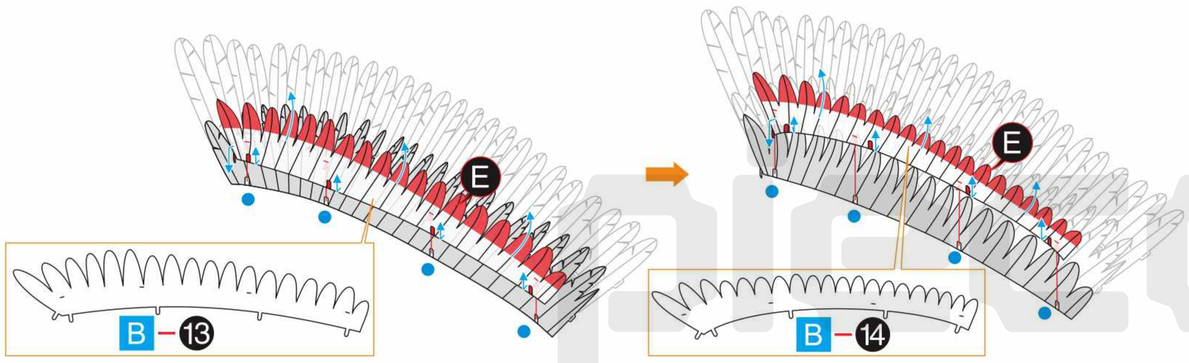

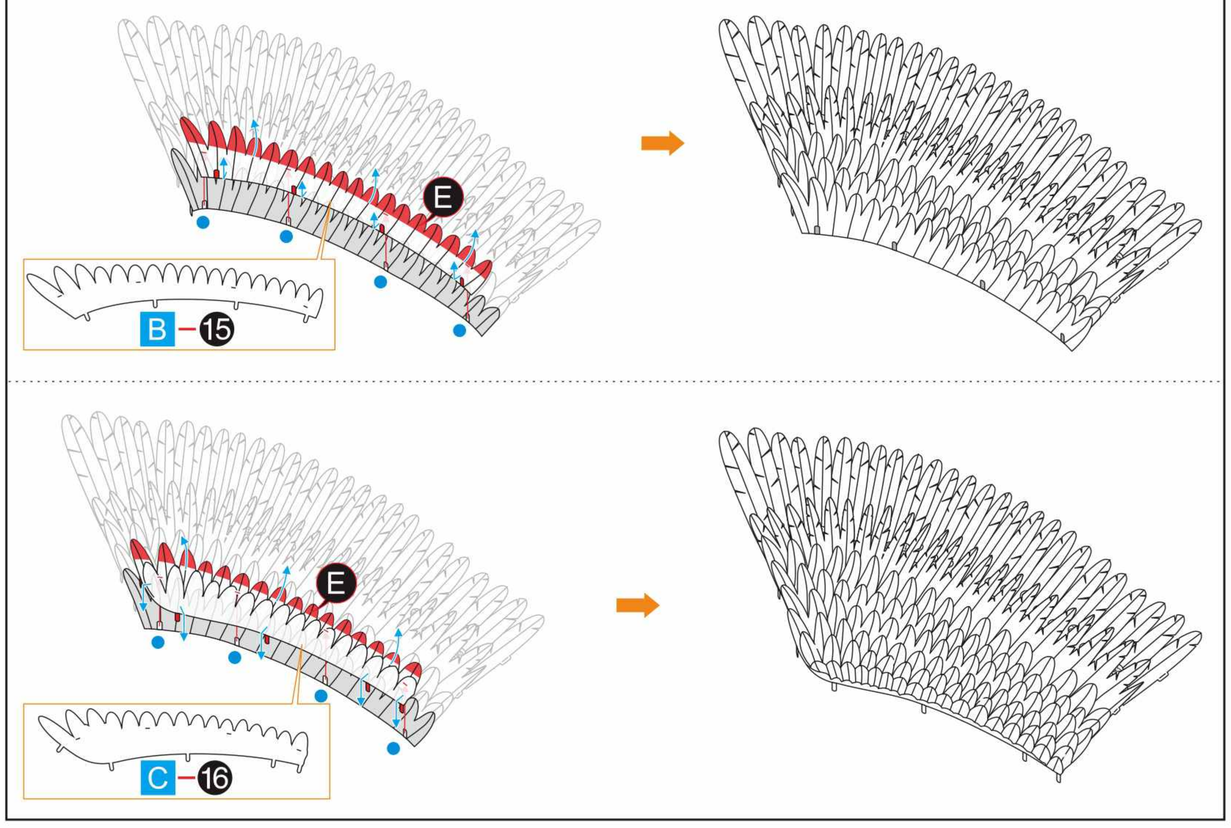

Step 25

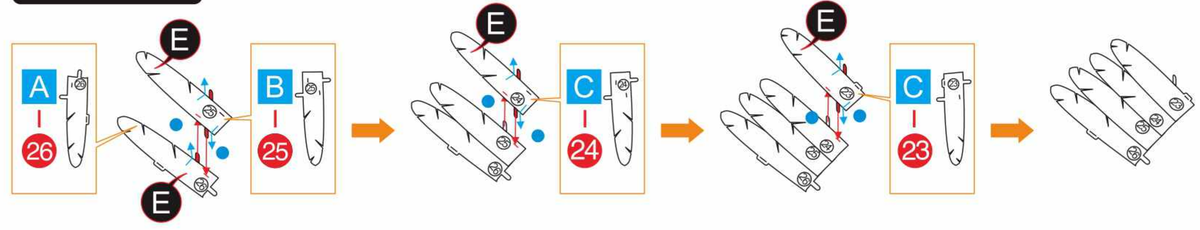

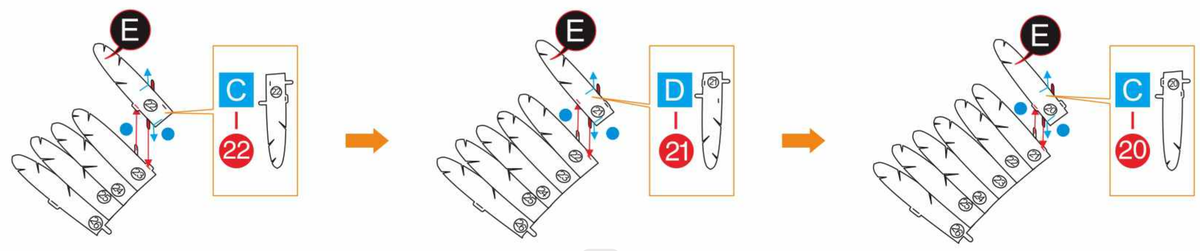

Step 26

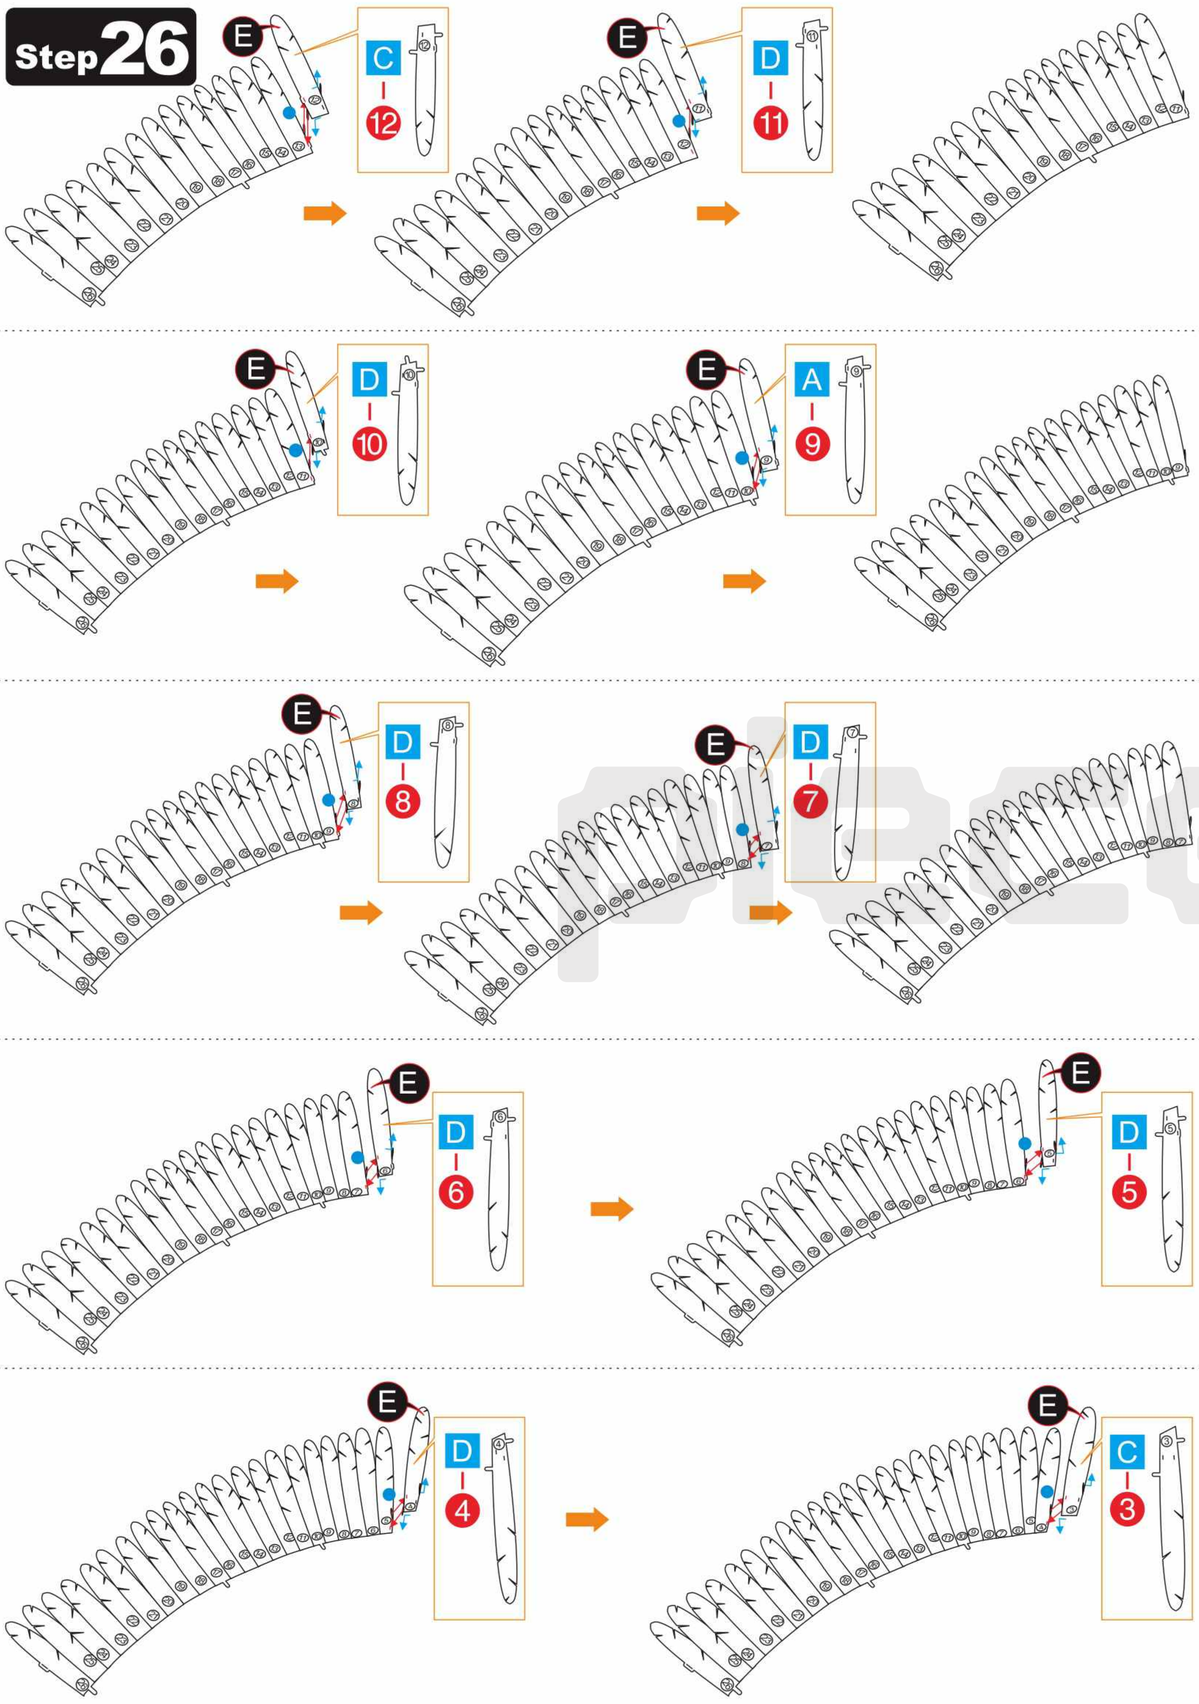

Step 27

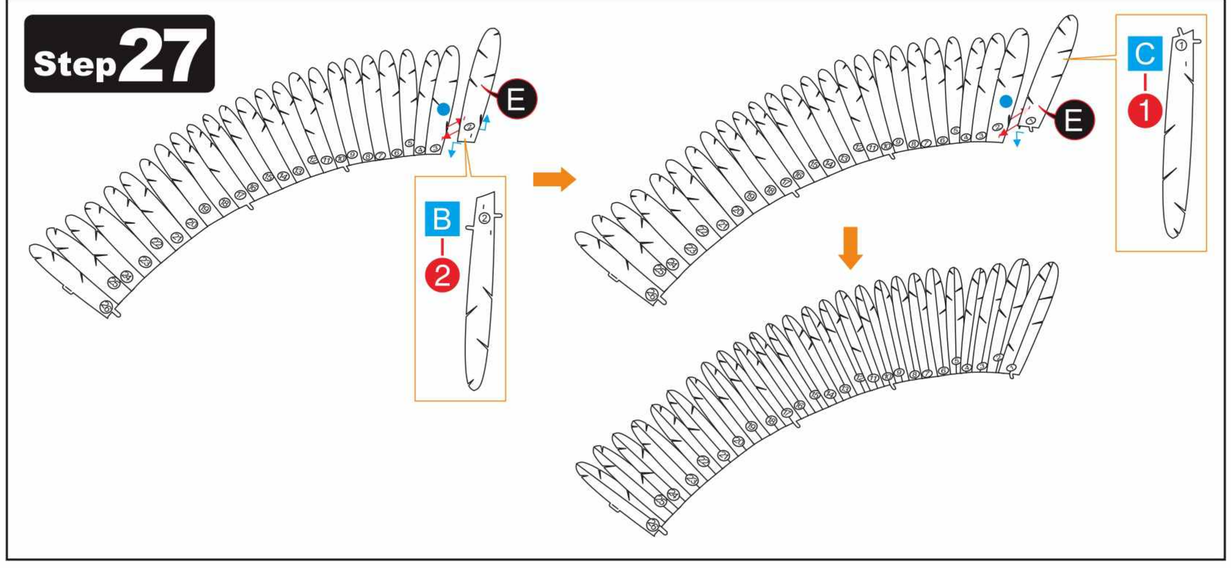

Step 28

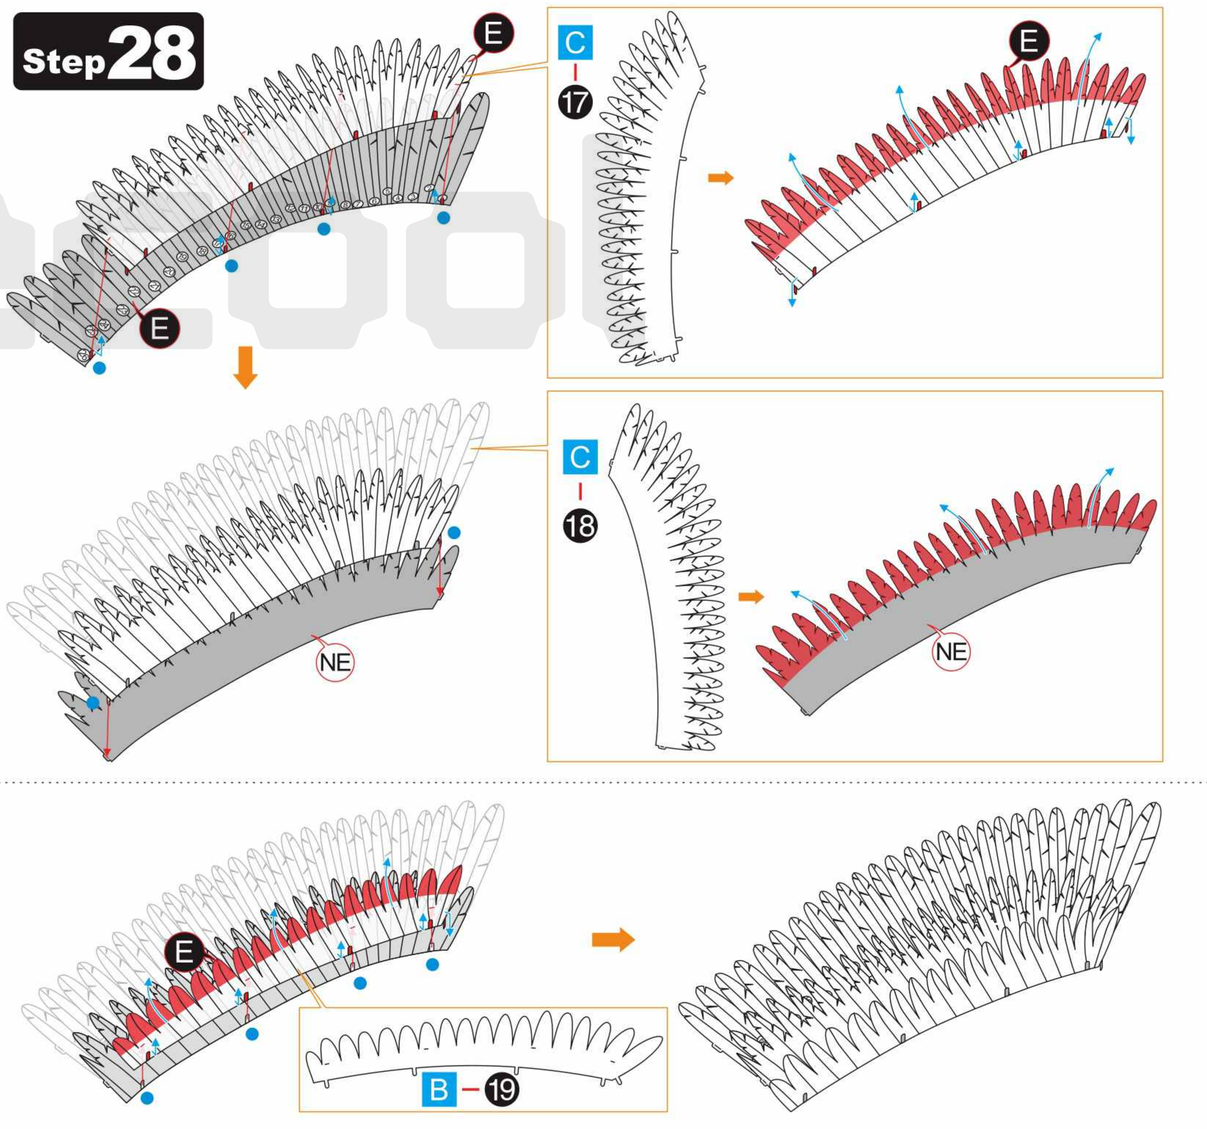

Step 29

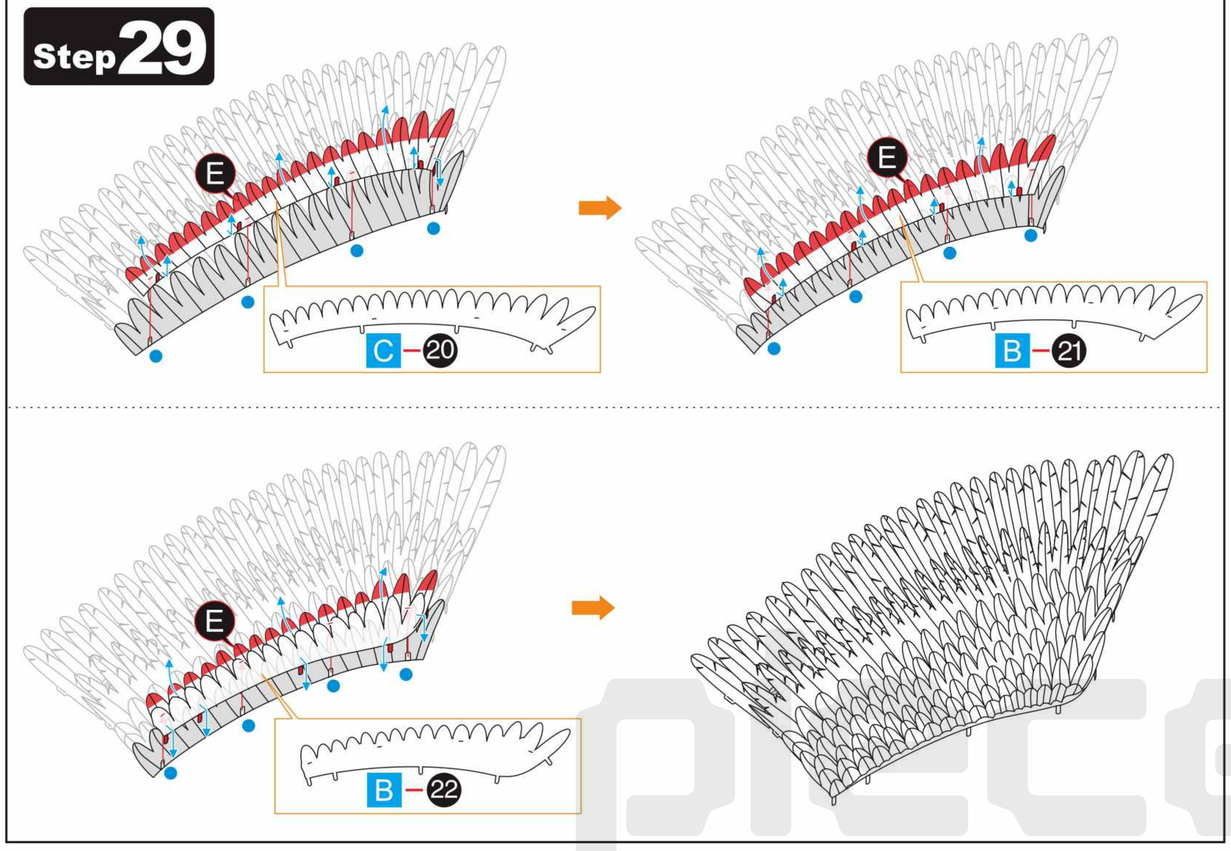

Step 30

Please tear off the kraft paper protective cover on the surface of the acrylic base before assembling.

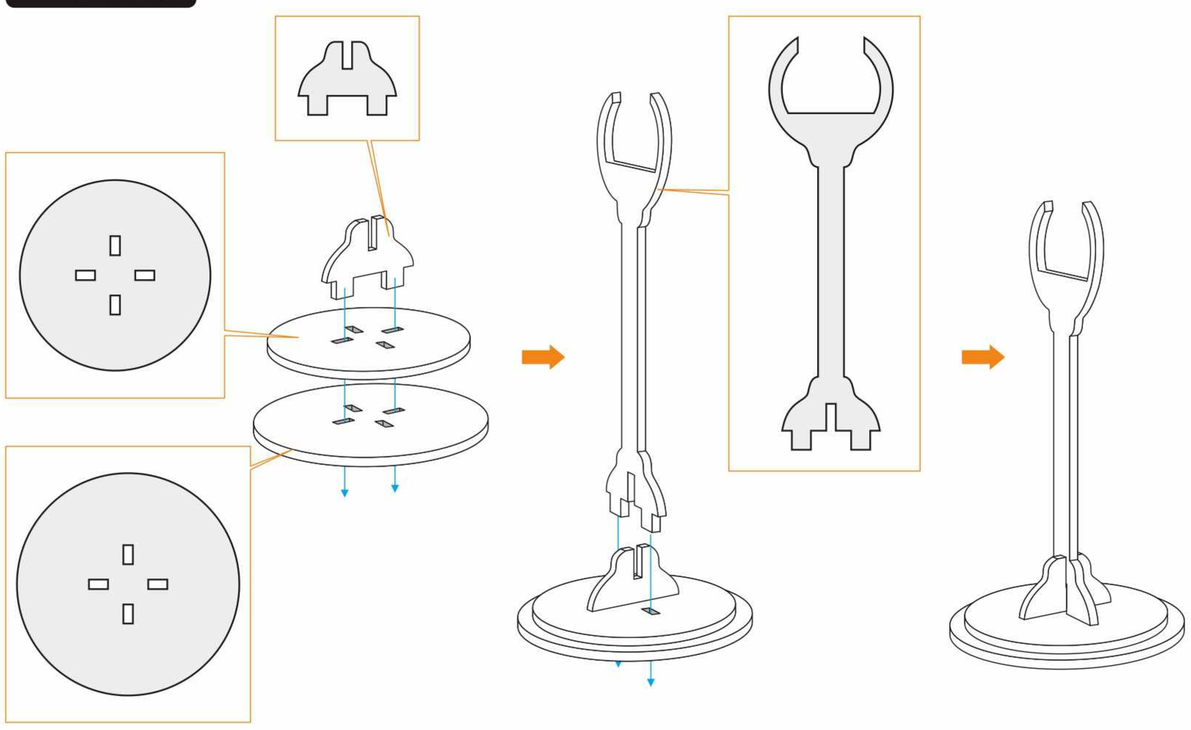

Step 31

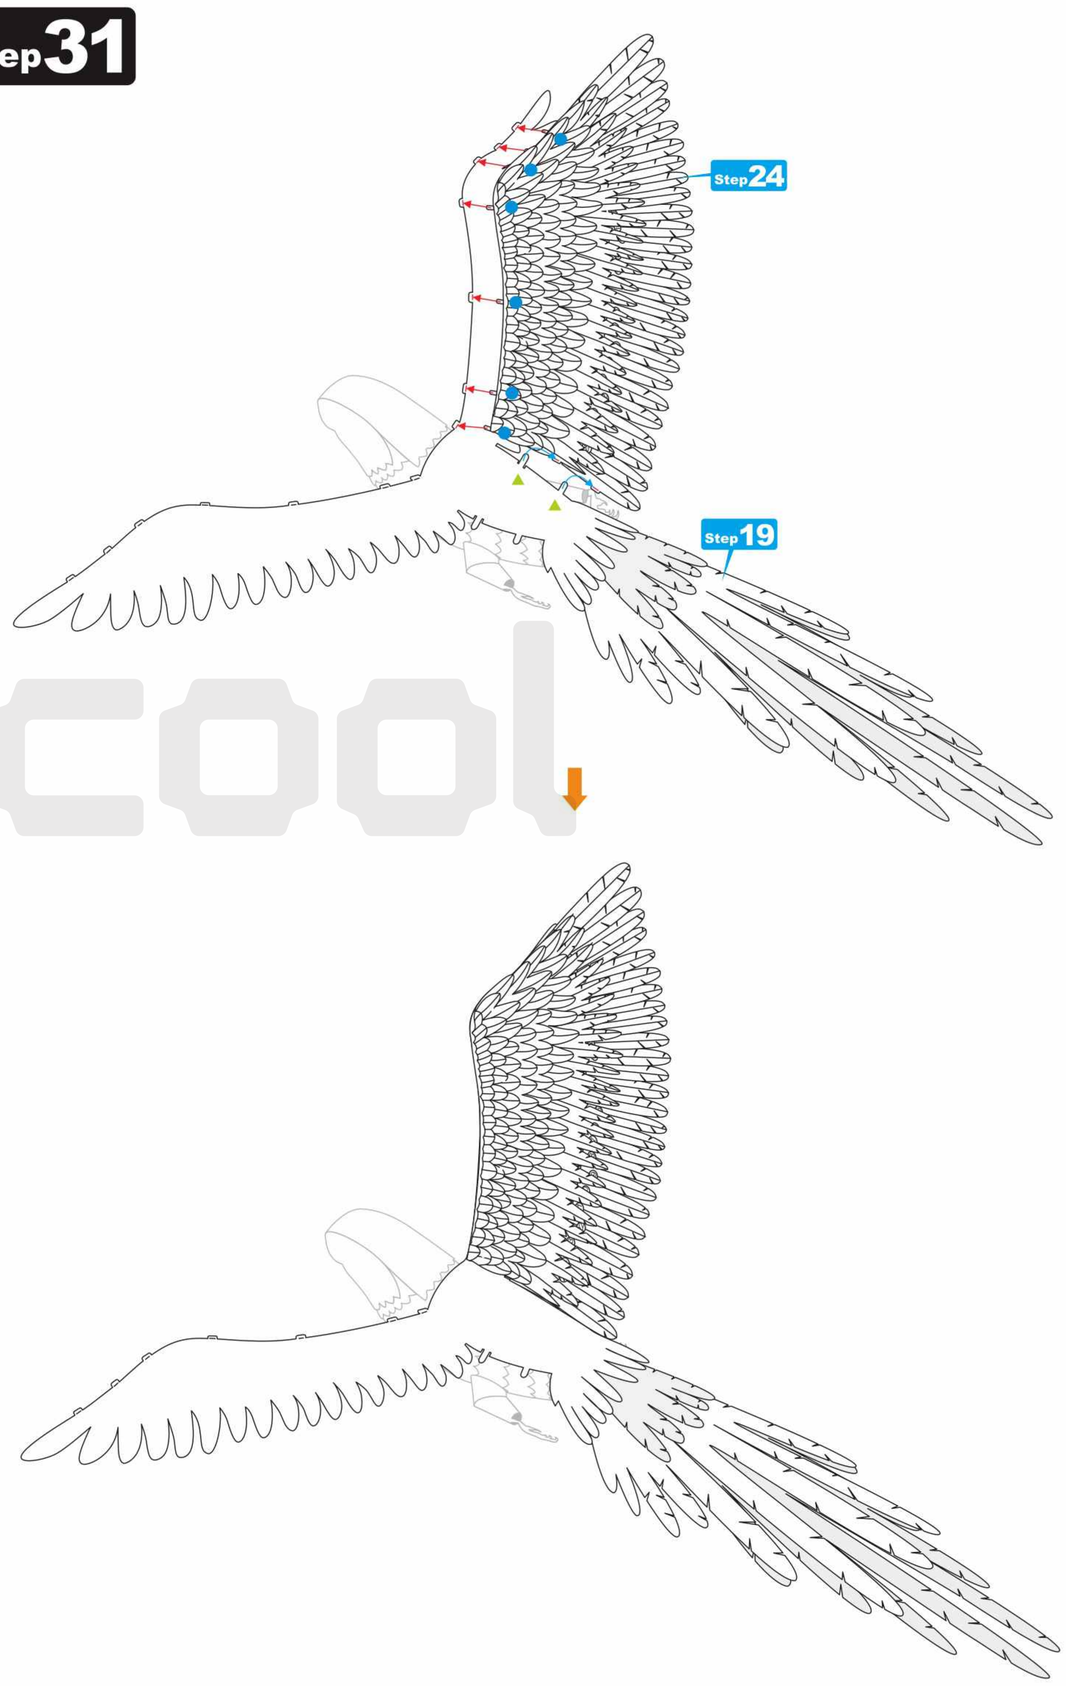

Step 32

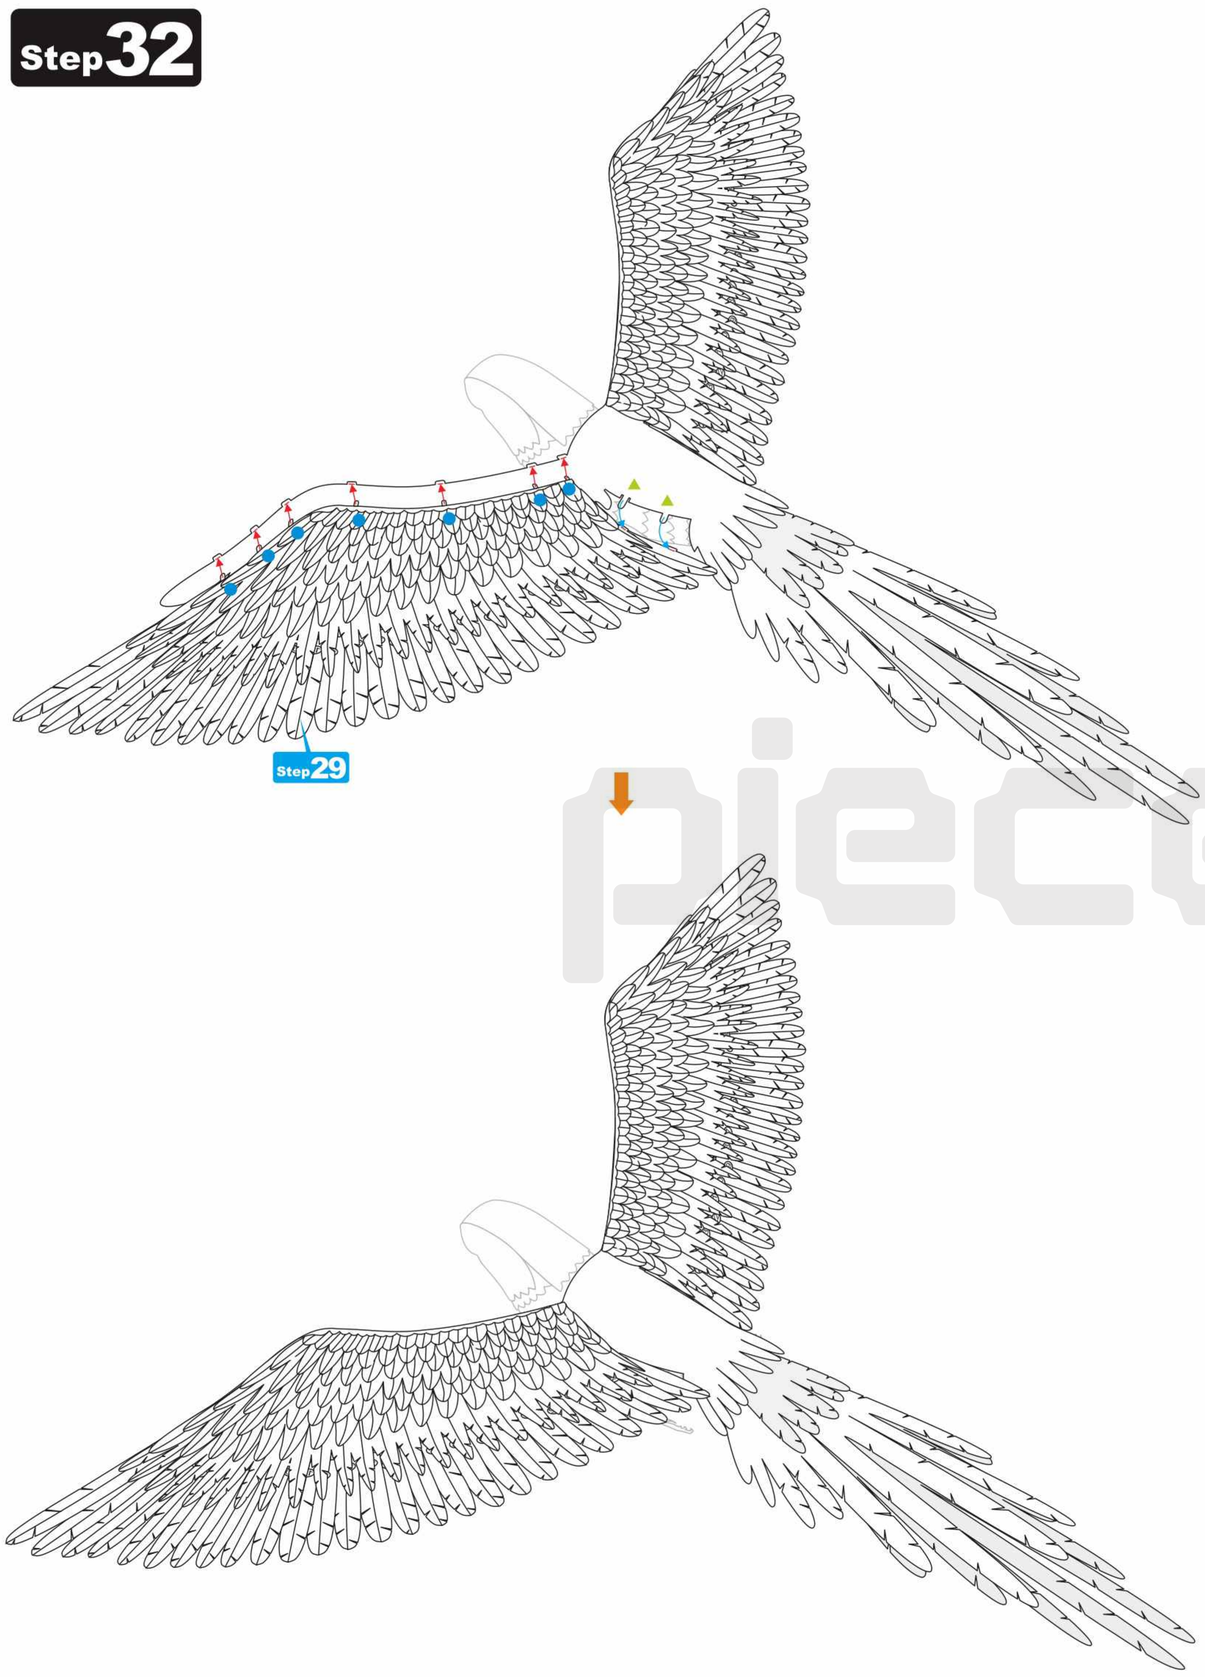

Step 33

piececool

piececool

SCARLET MACAW
HP118

Metal Sheet + Parts | Sketch Map

© Wist Plastic & Metal Technology Limited. All rights reserved.

CP-PART-HP118#-A1-2020.07.25

Parts

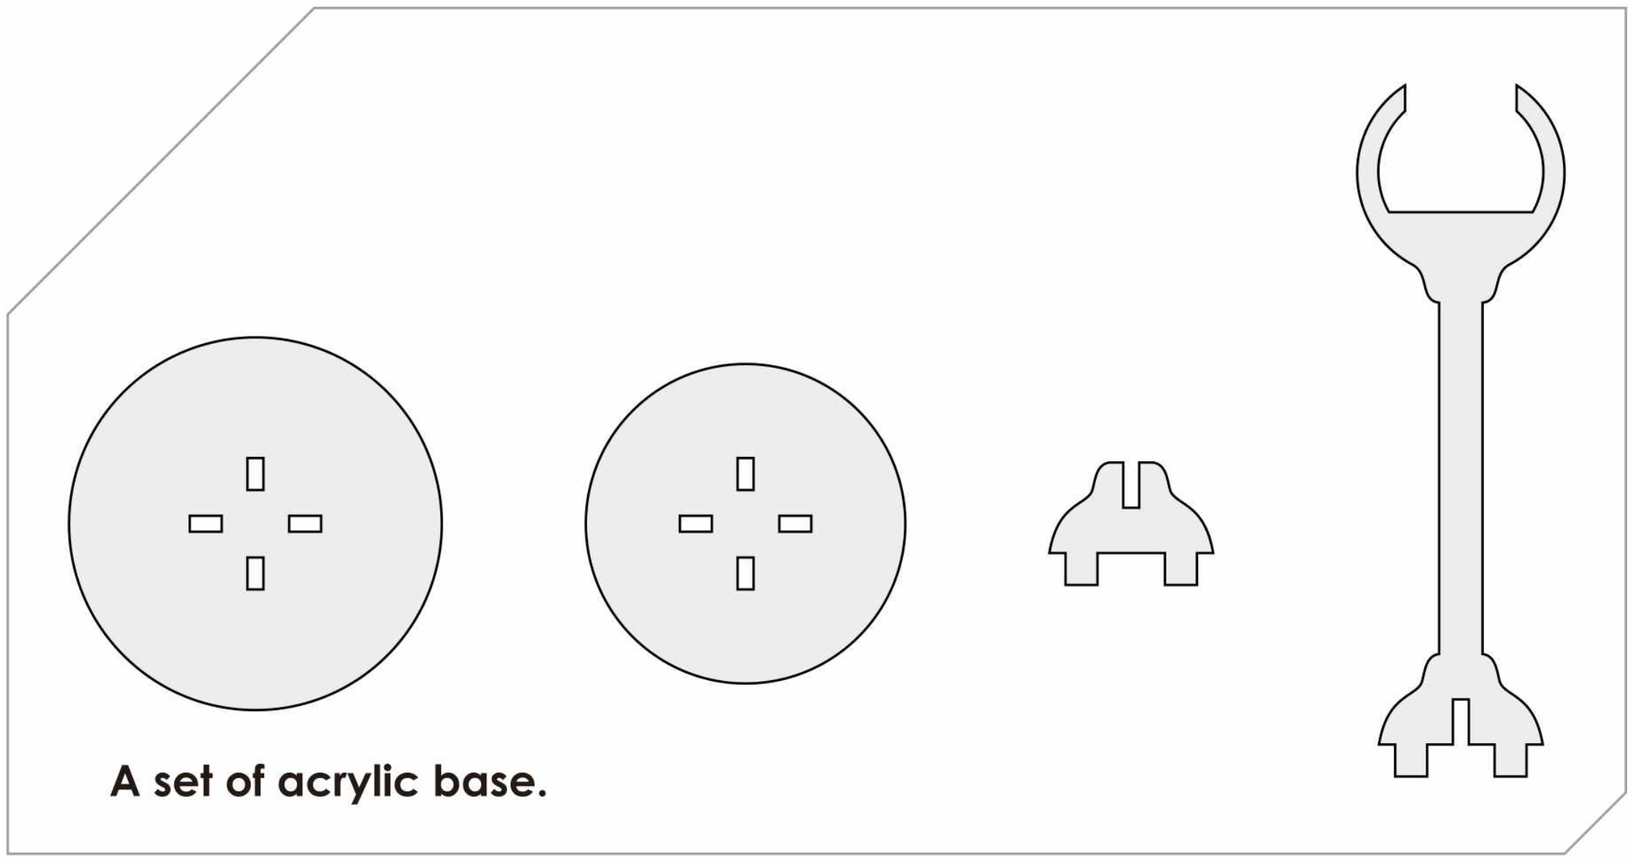

A set of acrylic base.

Metal Sheet

A

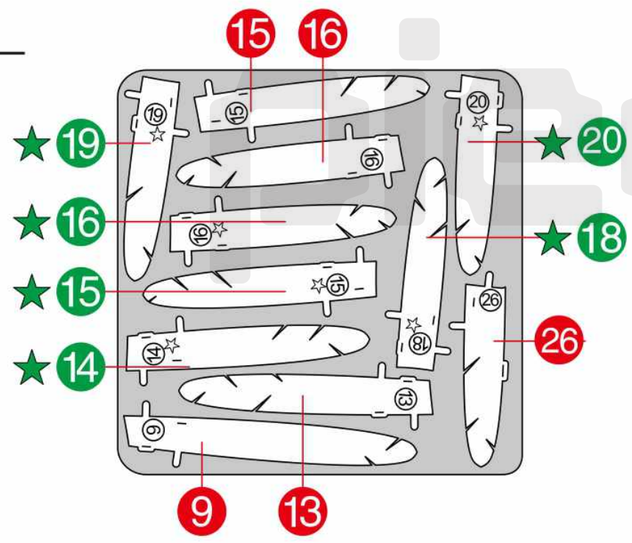

Metal Sheet

B

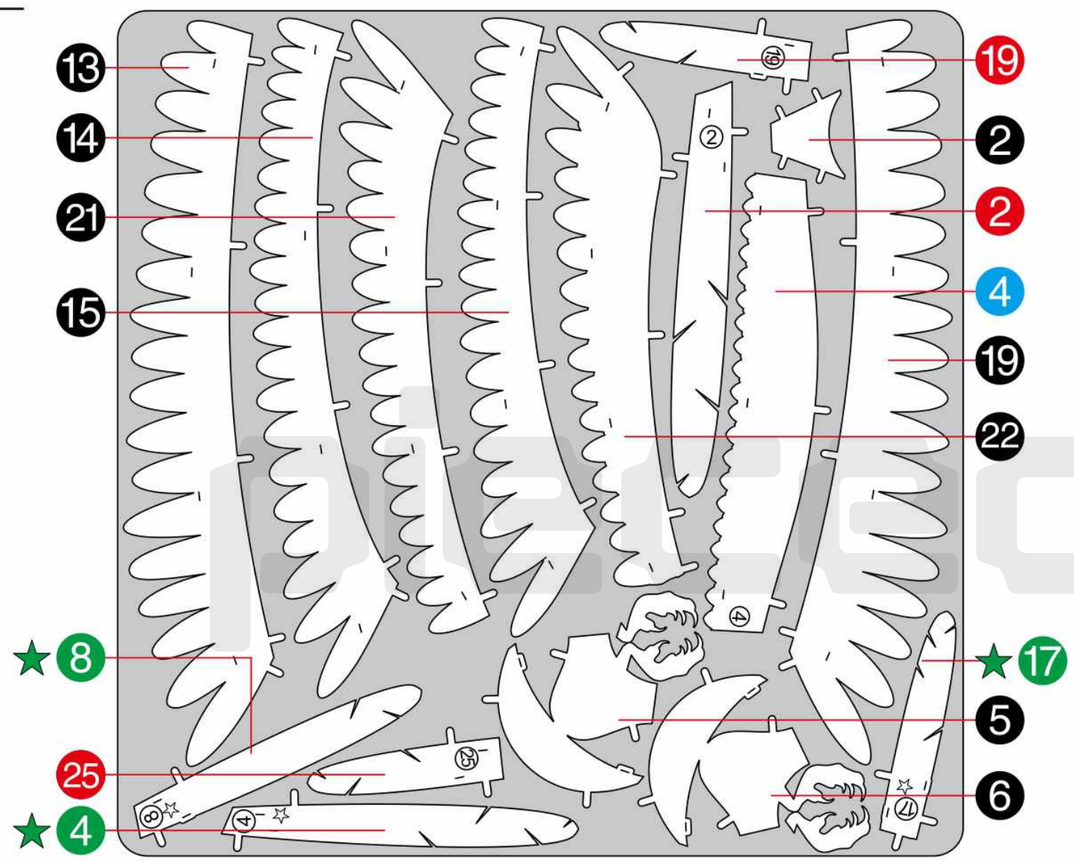

Metal Sheet

C

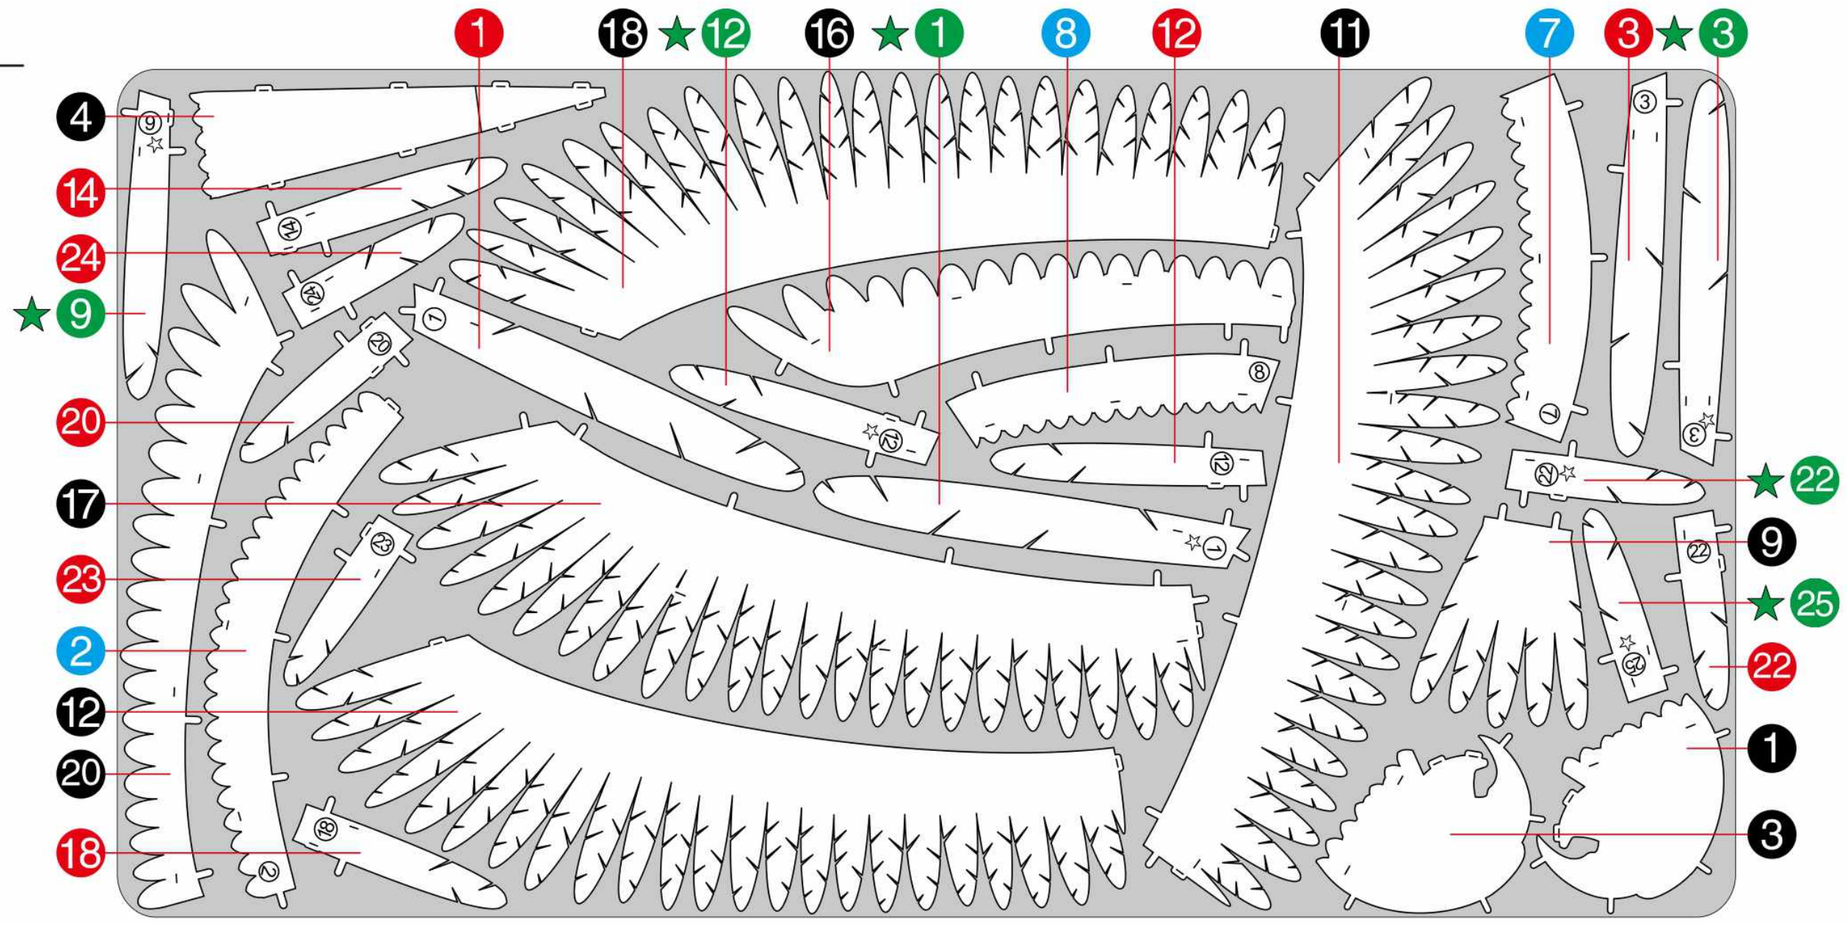

Metal Sheet
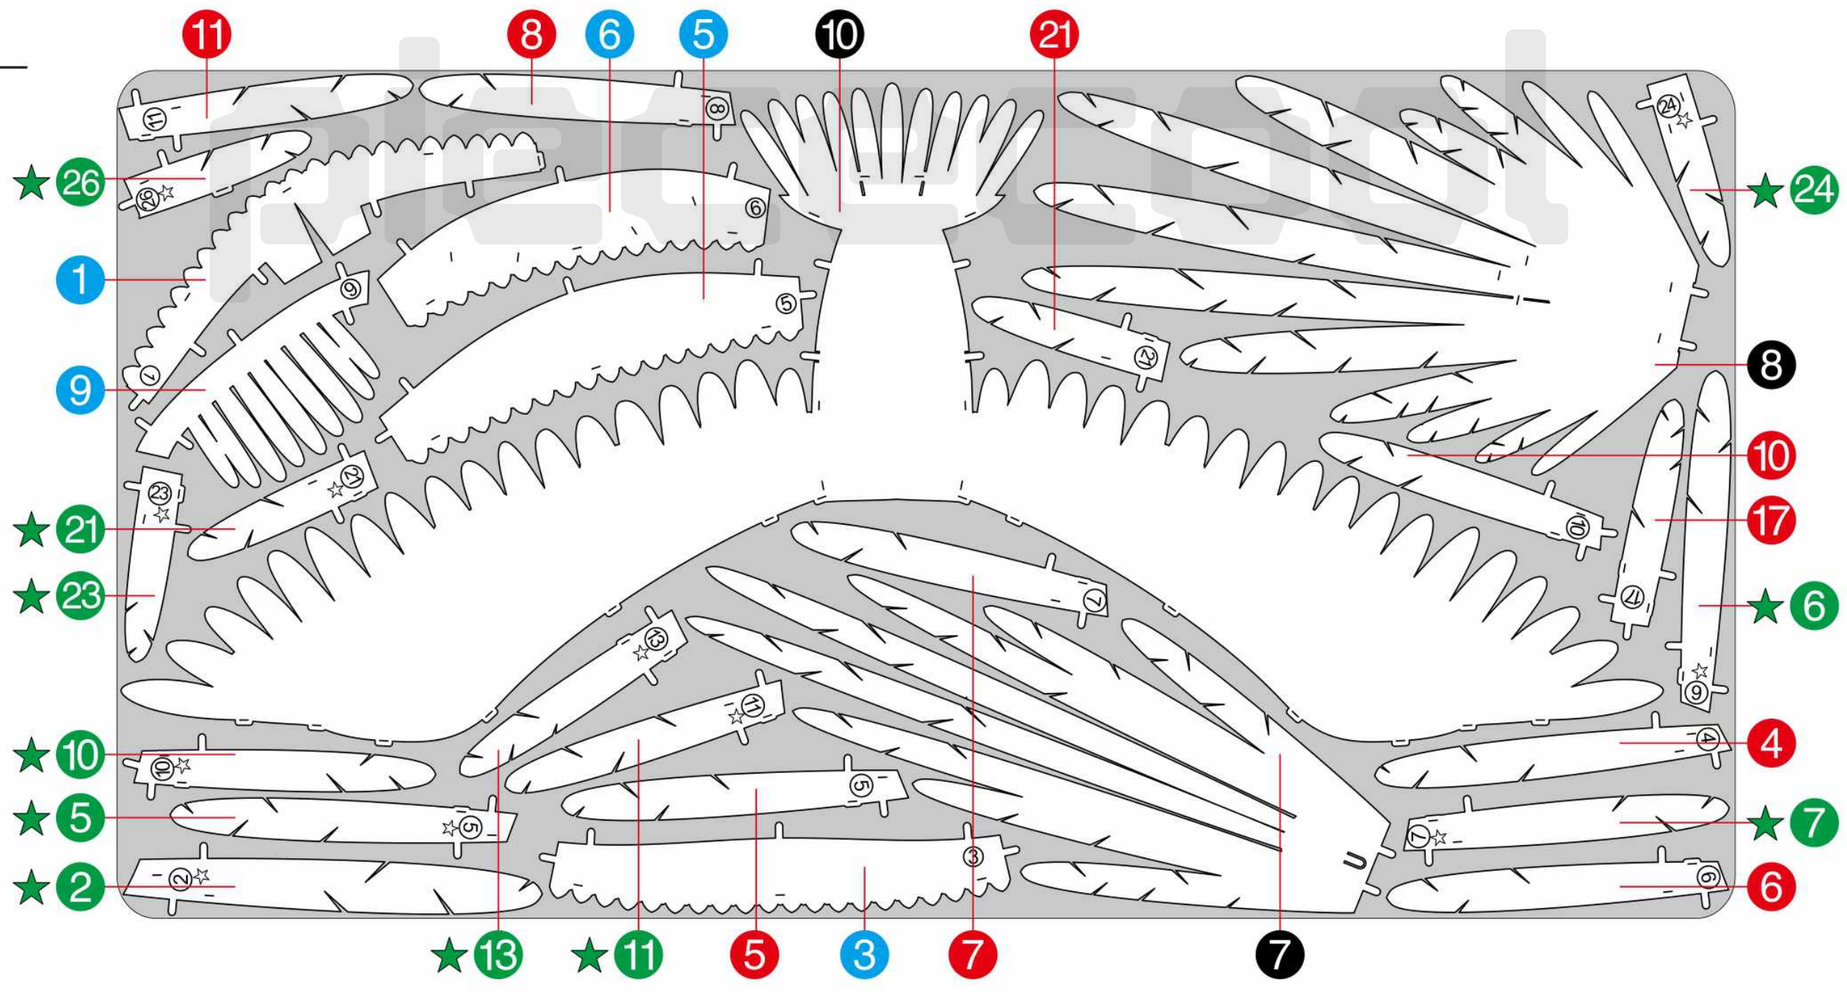
D