



ZIWEI PALACE HP158

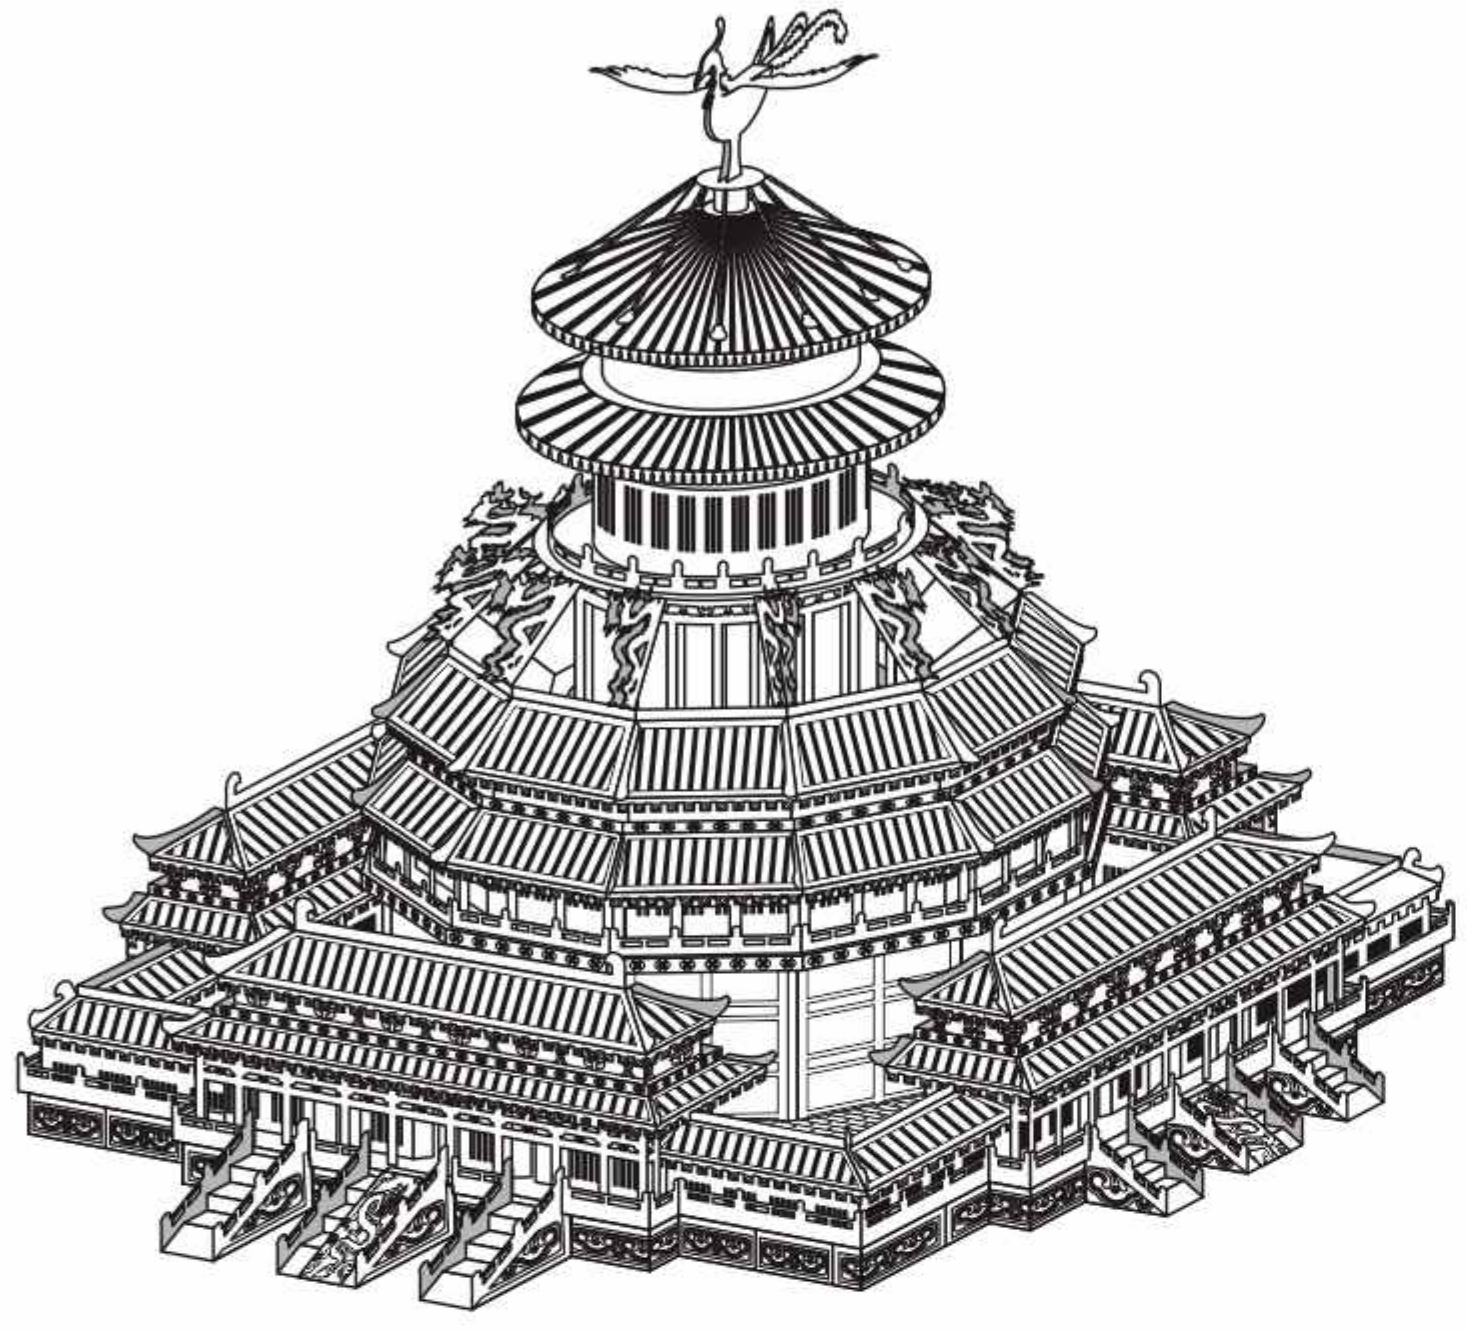

CP-ASSY-HP158#-A1-20200617


Installation Reminder

- Prepare tools:

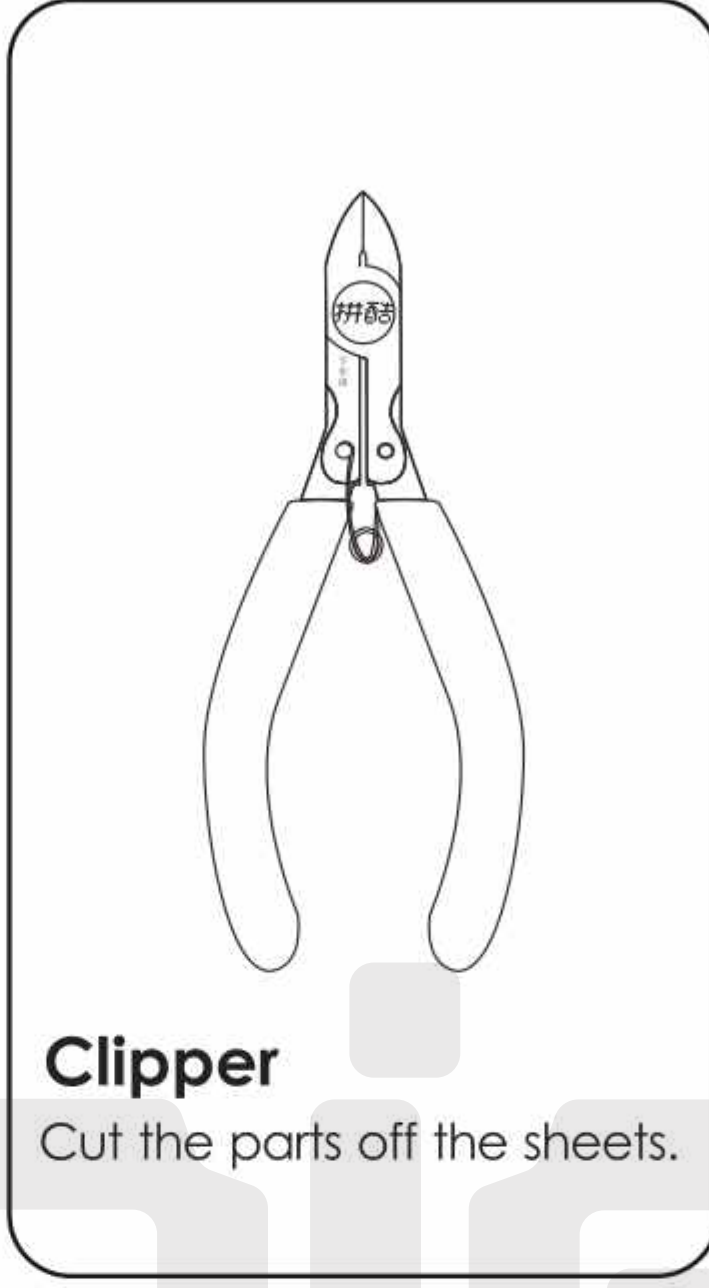

Clipper

Cut the parts off the sheets.

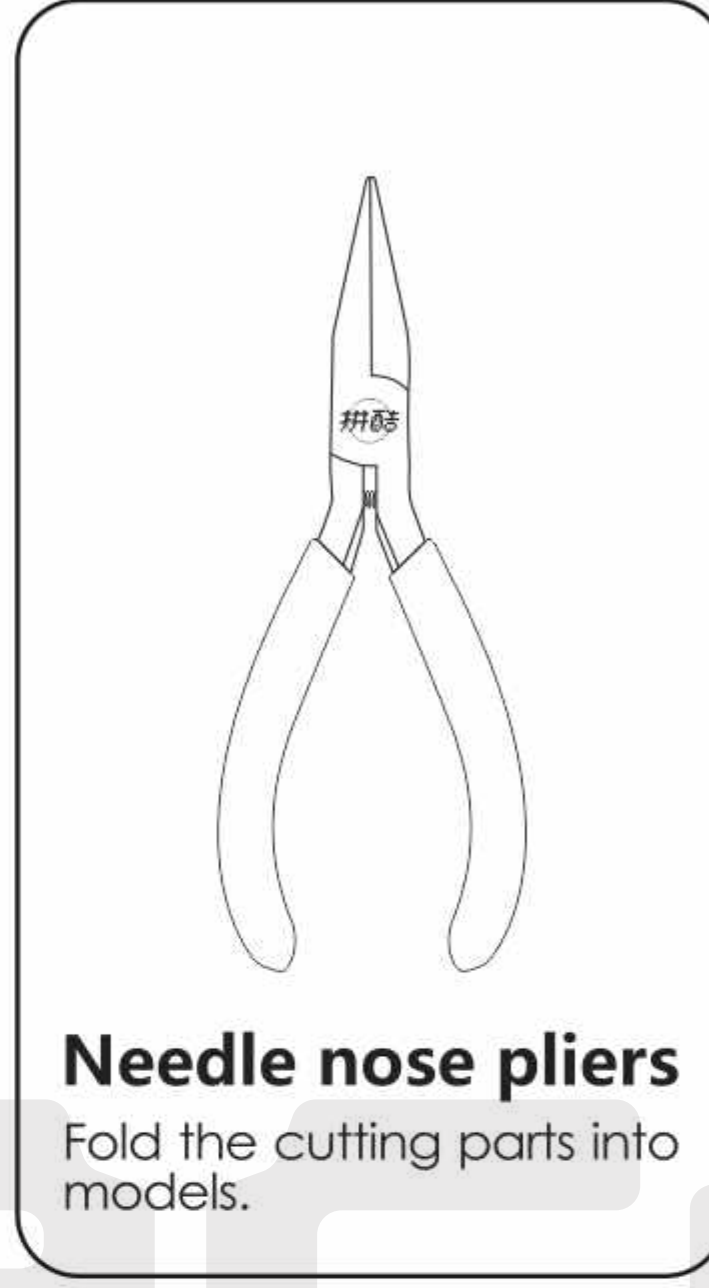

Needle nose pliers


Fold the cutting parts into models.

It is recommended to use piececool authentic assembly tools to build or fix the design. It is tailor made for the metal pieces and user friendly.

⚠ Please handle the metal trim carefully to prevent scratches.


Installation Method:

a. Remove the parts

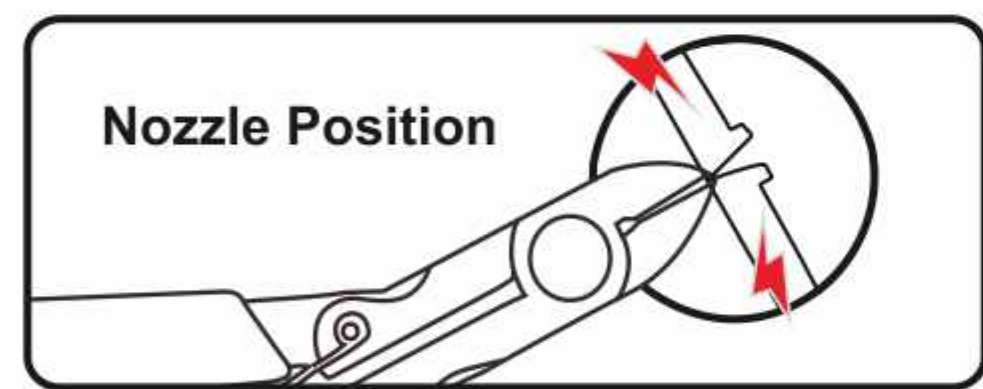


Please use the clipper to cut the nozzle position and remove the parts.

b. Identify the parts

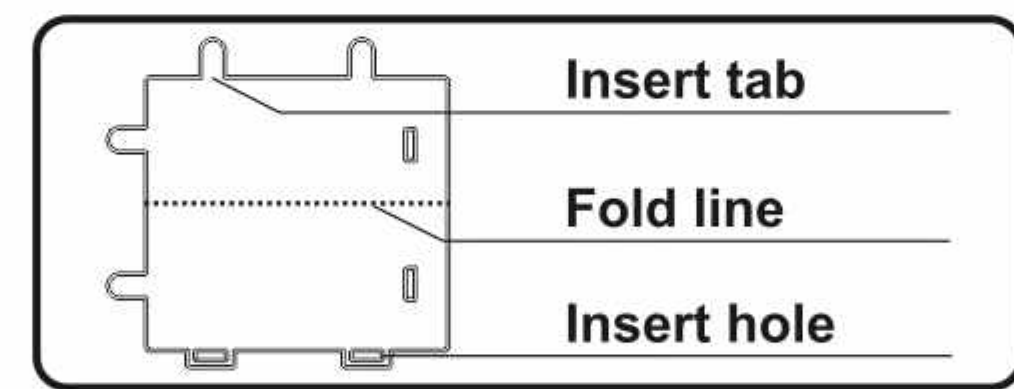


Identify the insert tab, fold line and the insert hole.

c. Folding the parts

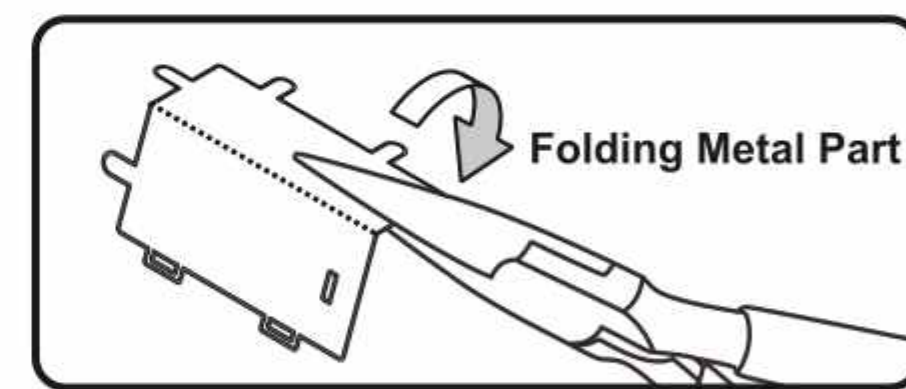


Please use the Needle nose pliers to fold the cutting parts into models.

d. Retaining the parts

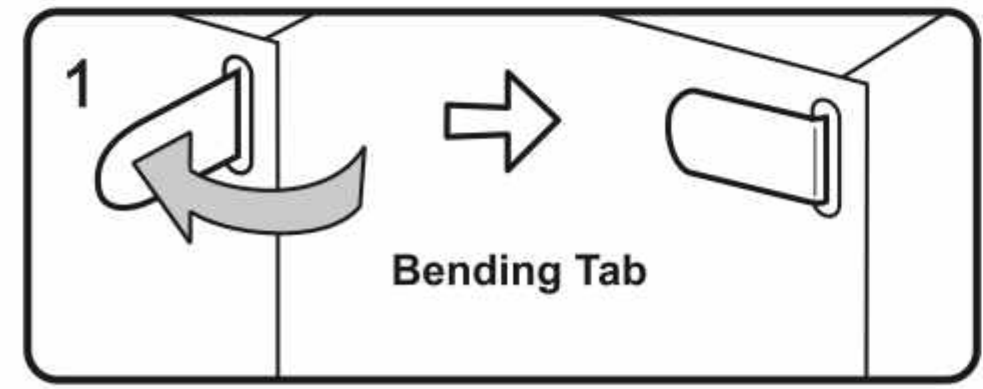

1 Insert the hole, bending tab with angle 90°

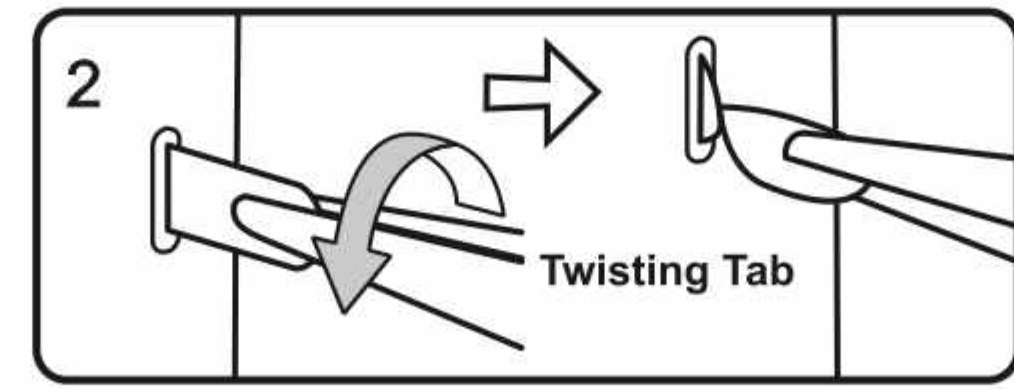

2 Insert the hole, twisting tab with angle 90°

Attention:



- E** Engraved / Color side
- NE** Non-engraved / Silver side
- !** Attention Point
- ||** Keep the parts symmetrical

When cutting metal parts, please do not cut the "insert tab" as "nozzle position". Only cut the parts of the current step when cutting the parts. Do not cut all the parts at one time to avoid loss.







When encountering the parts of the folding line, please pay attention to the front and back of the metal sheet and the direction of the folding. According to the direction indicated in the instruction, cut lightly and fold slowly. It is best to fold it once. Do not fold it repeatedly to avoid damage to the parts.

Assembly Guide


























Step 01

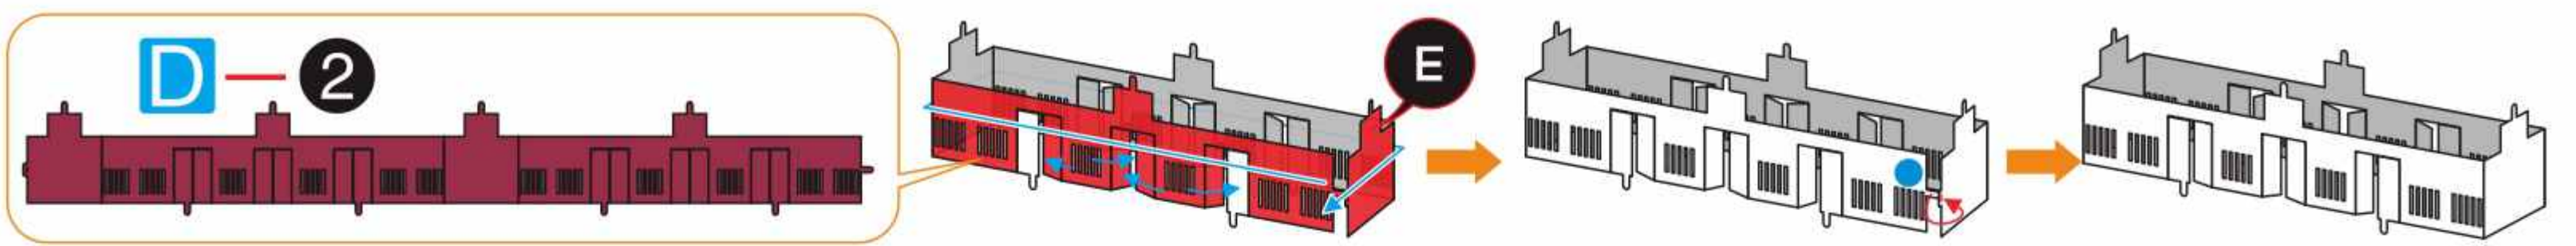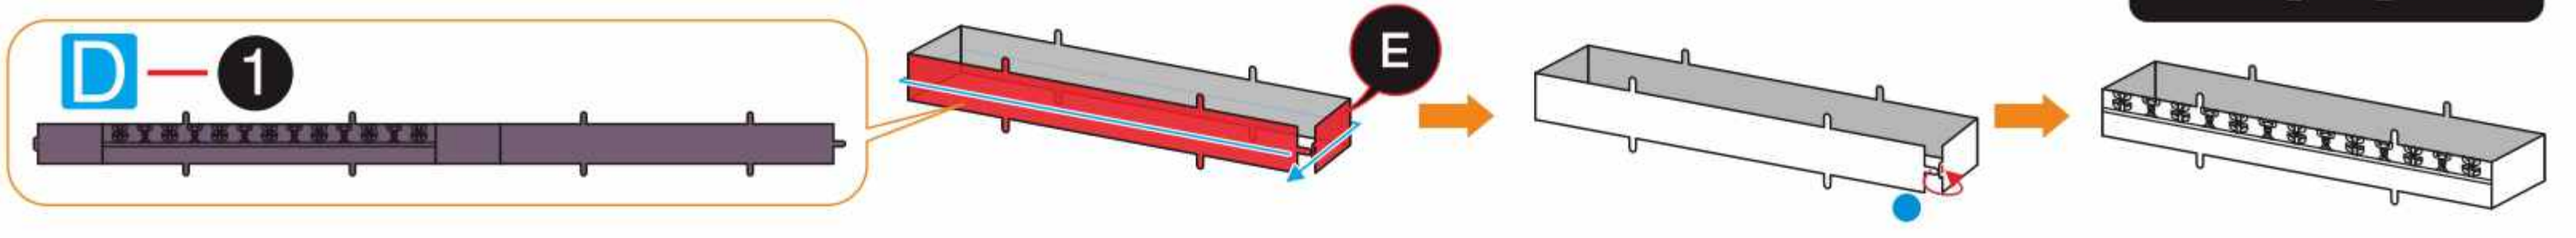







Step 02

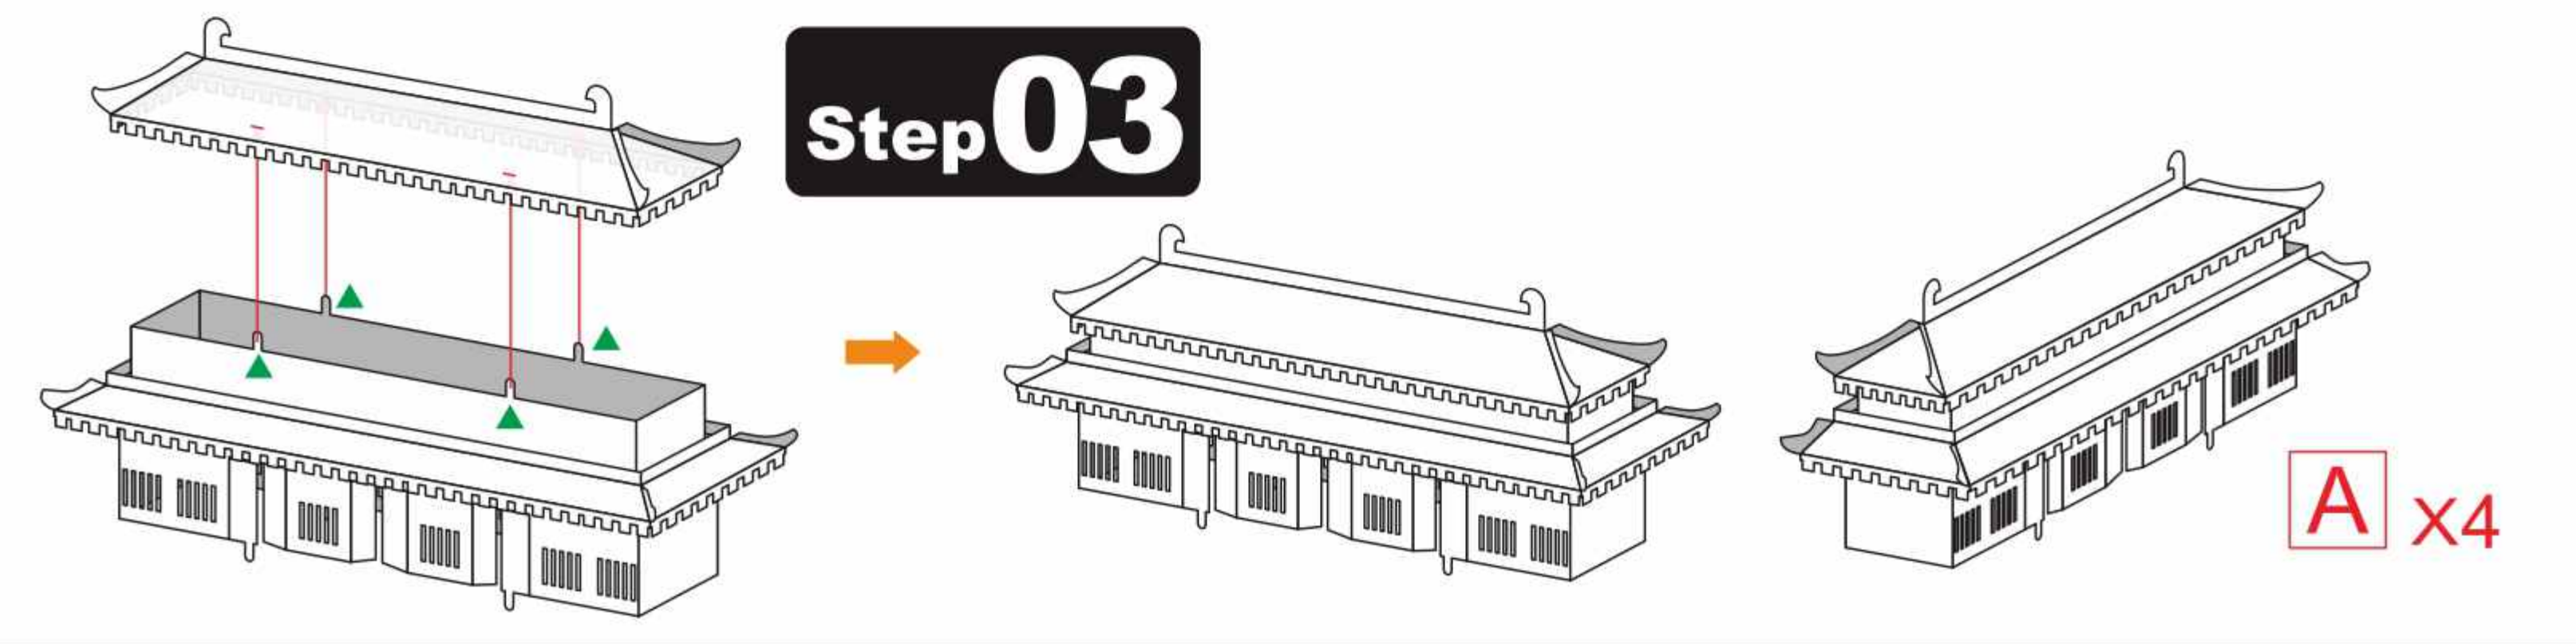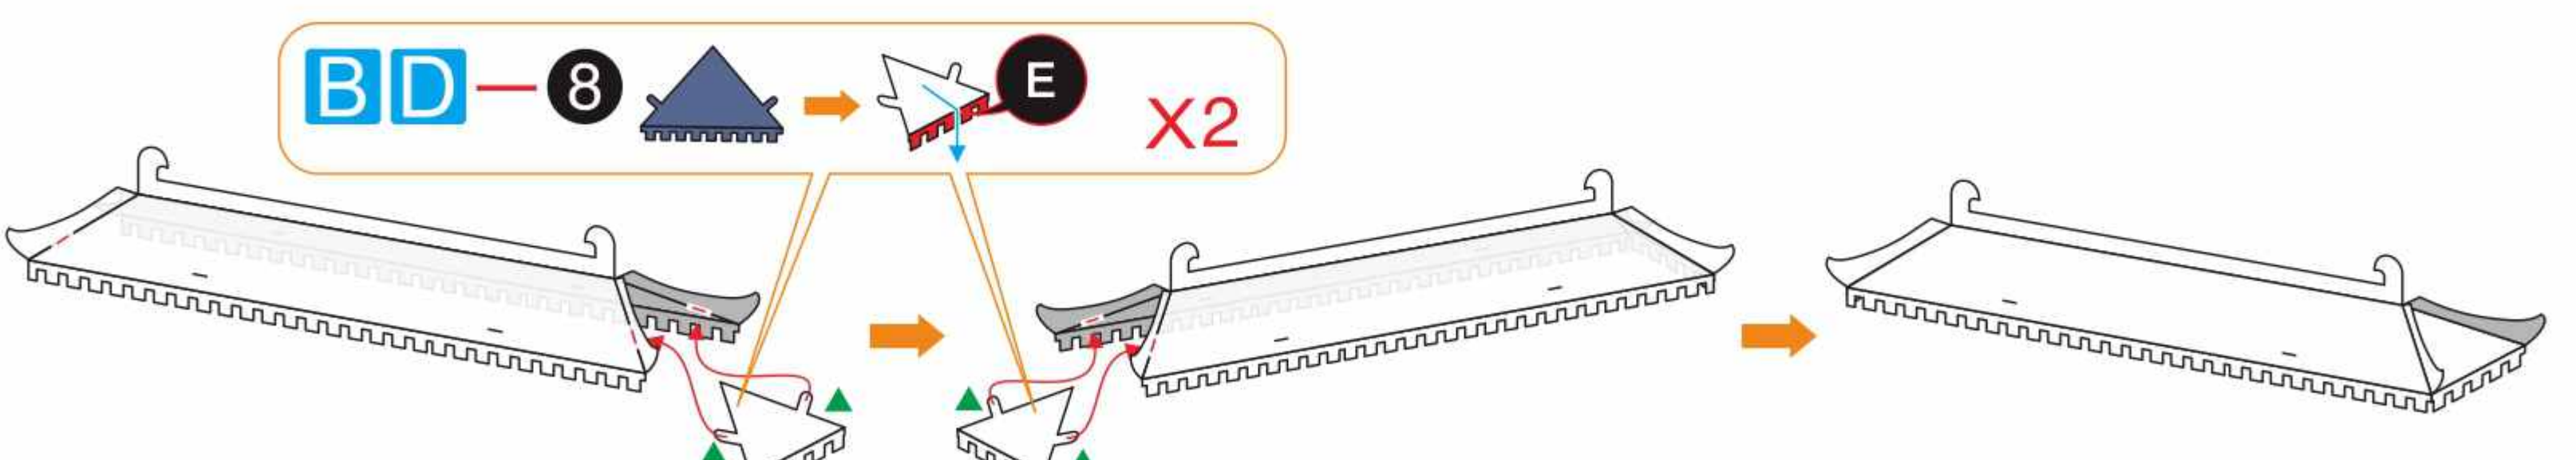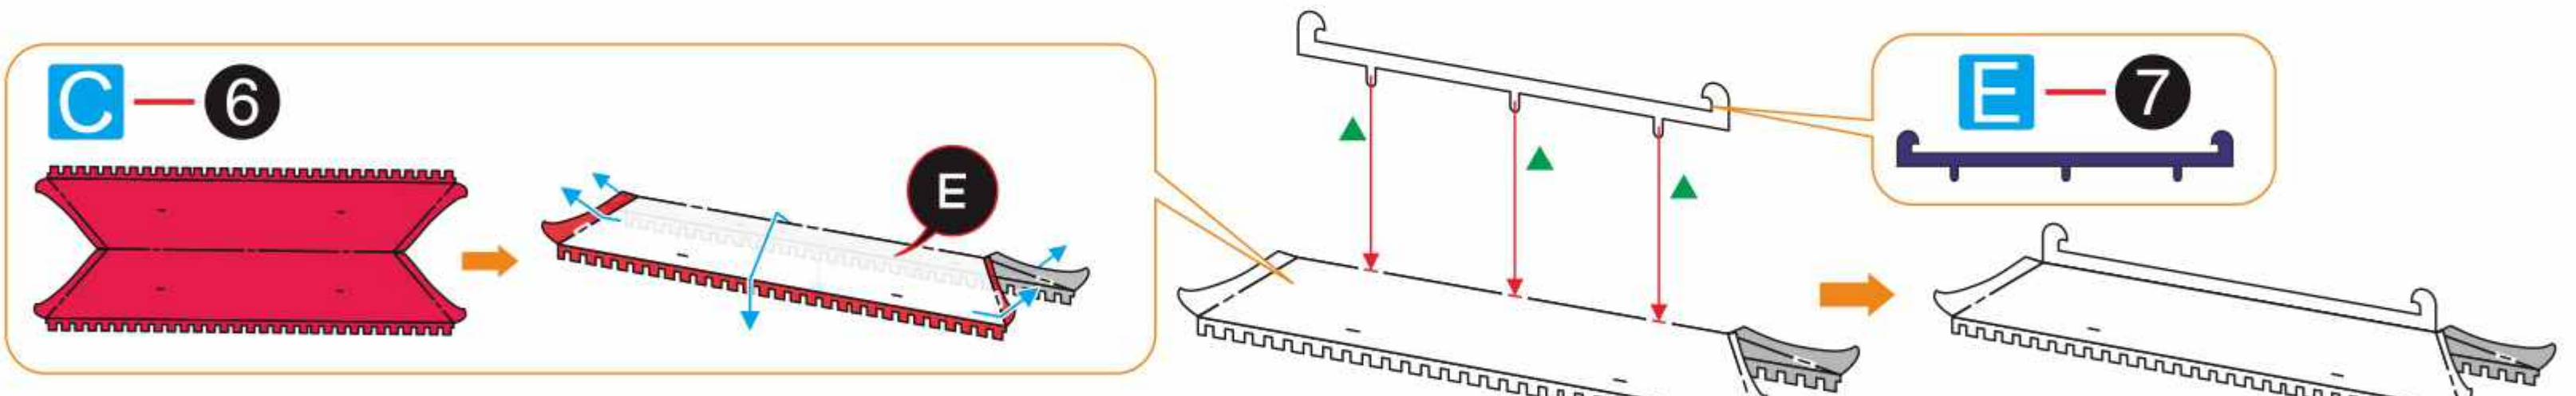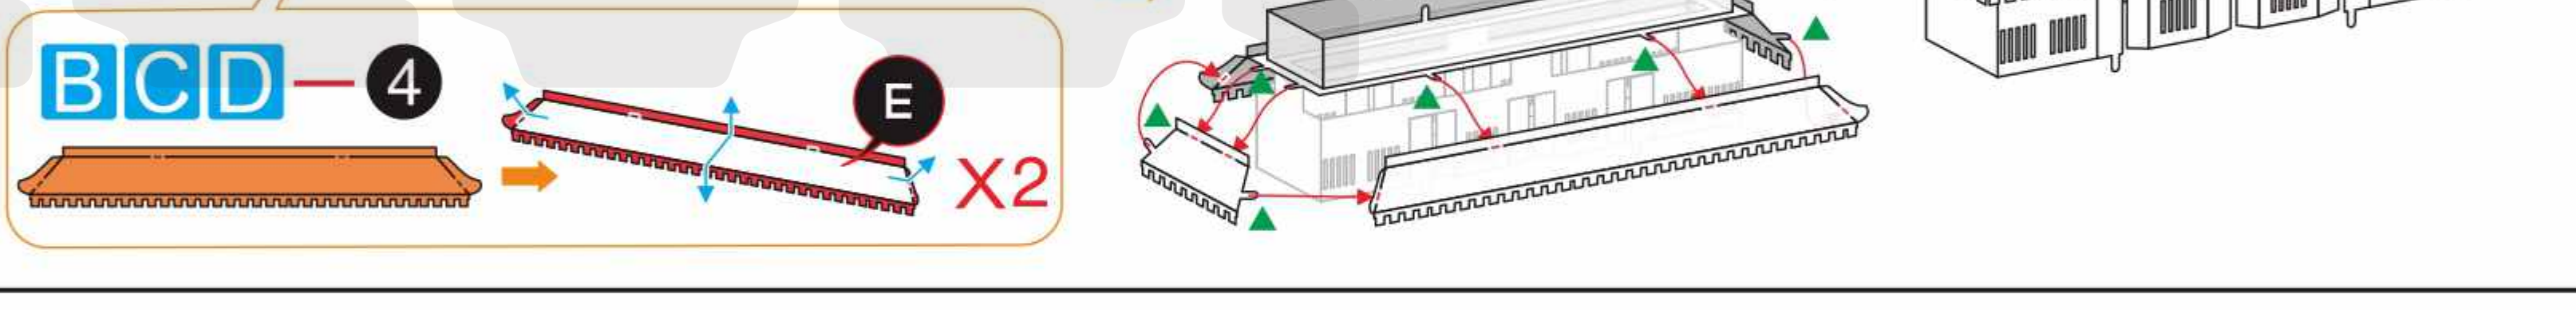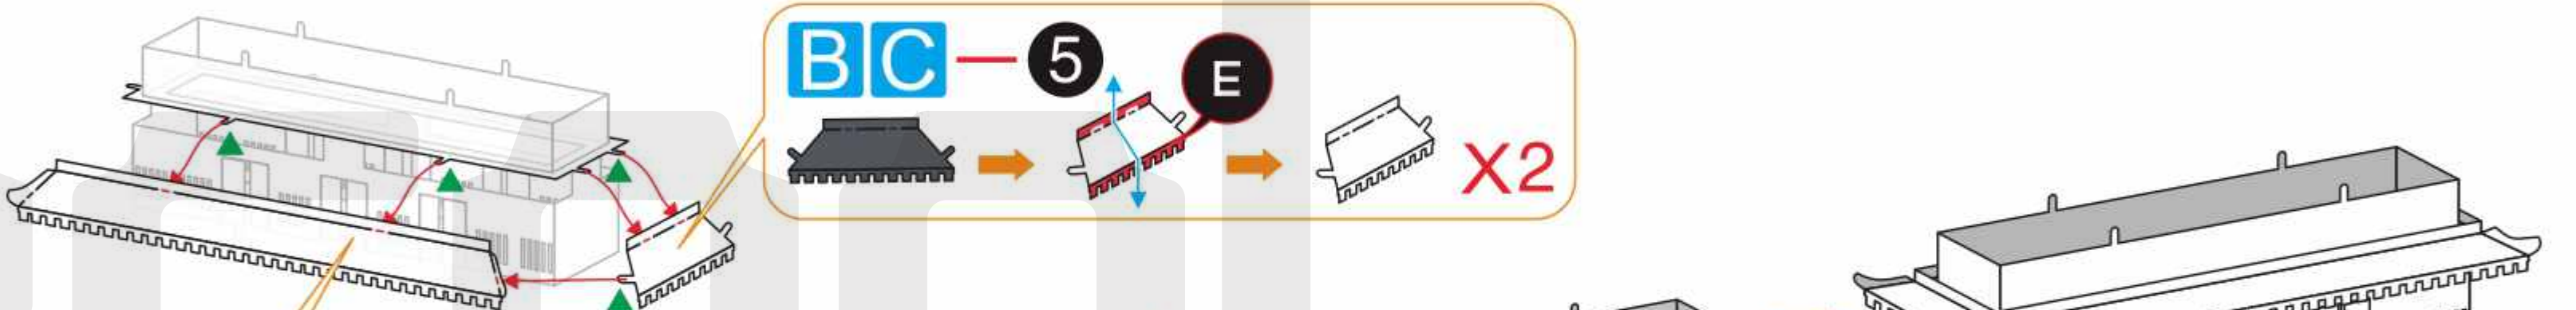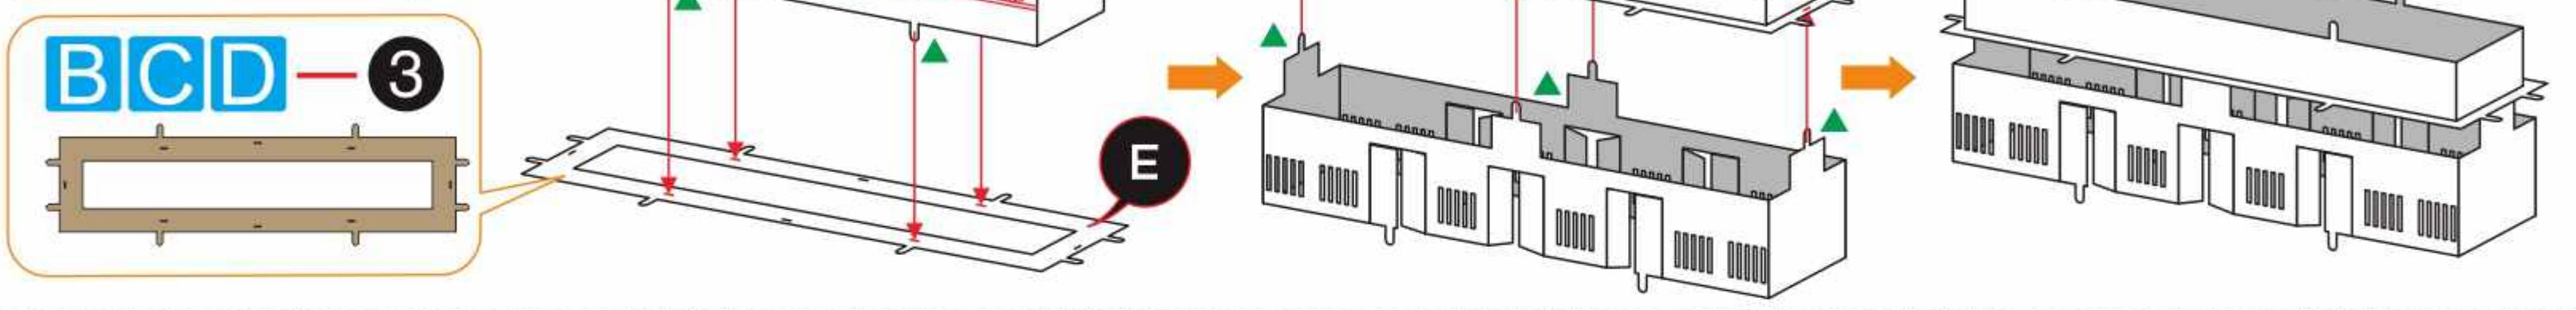


1 2
3 4

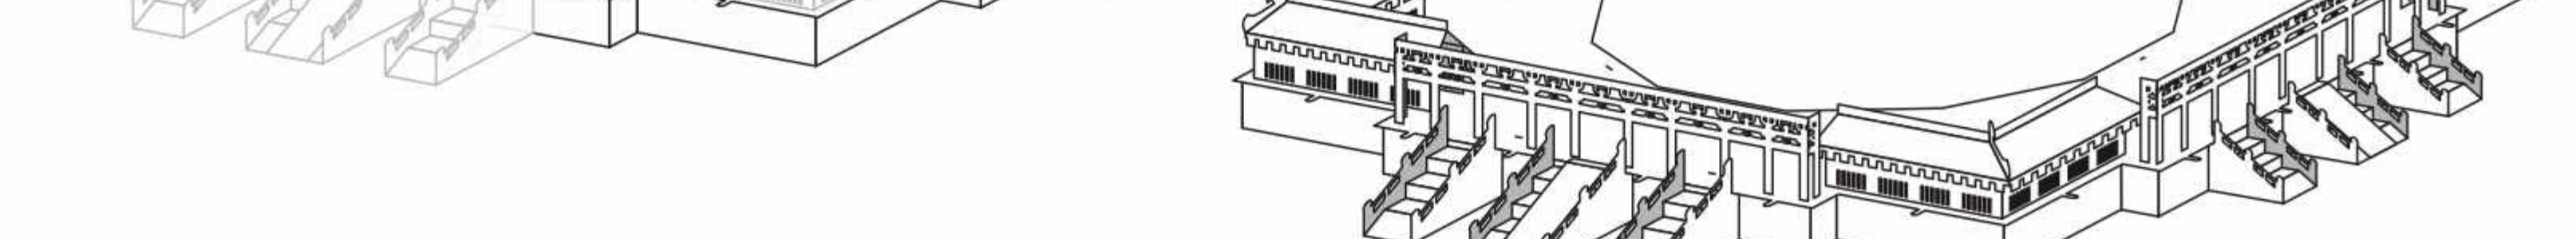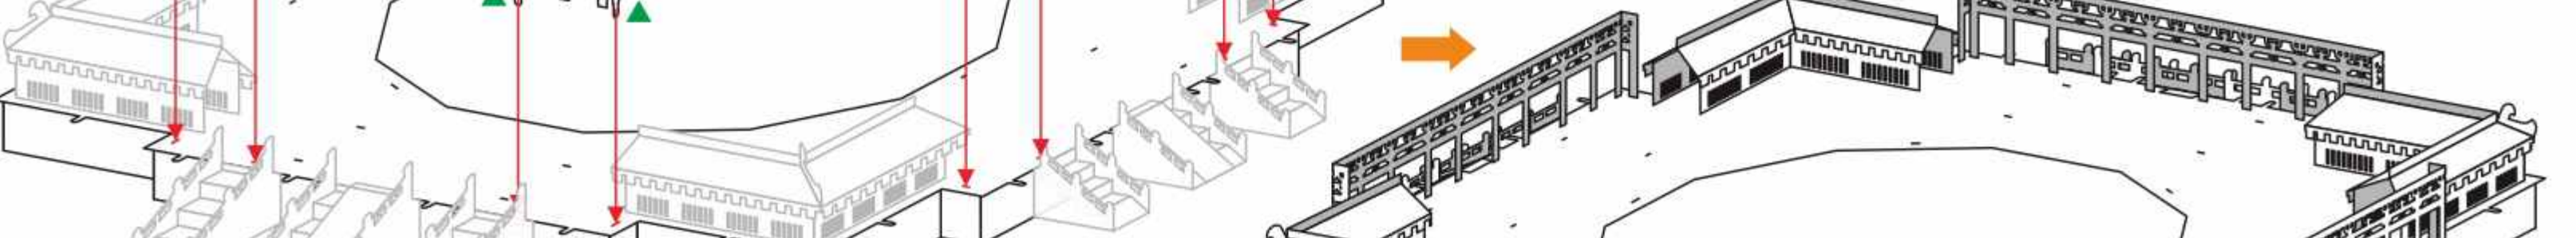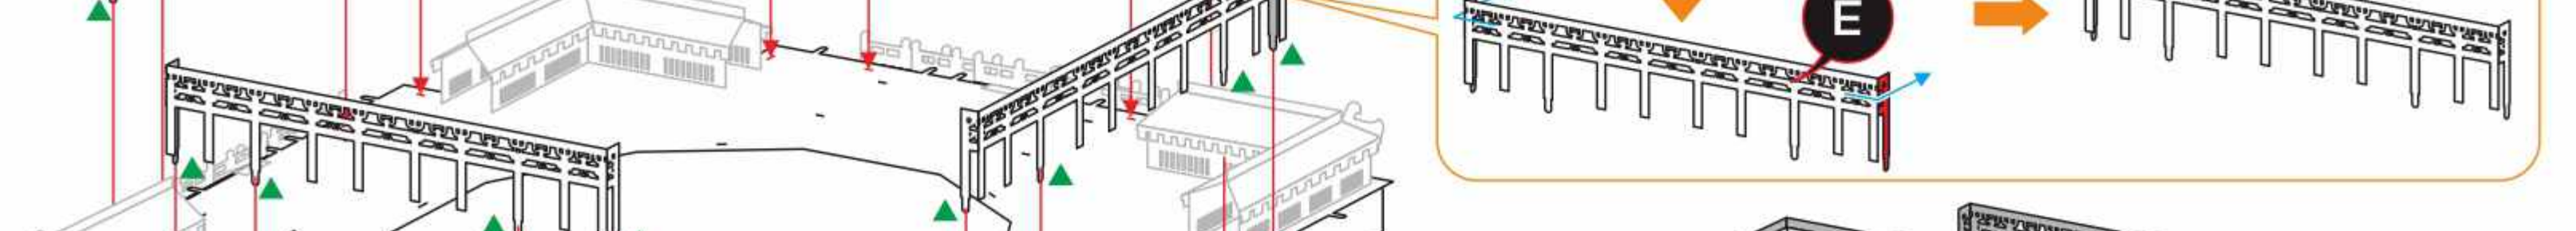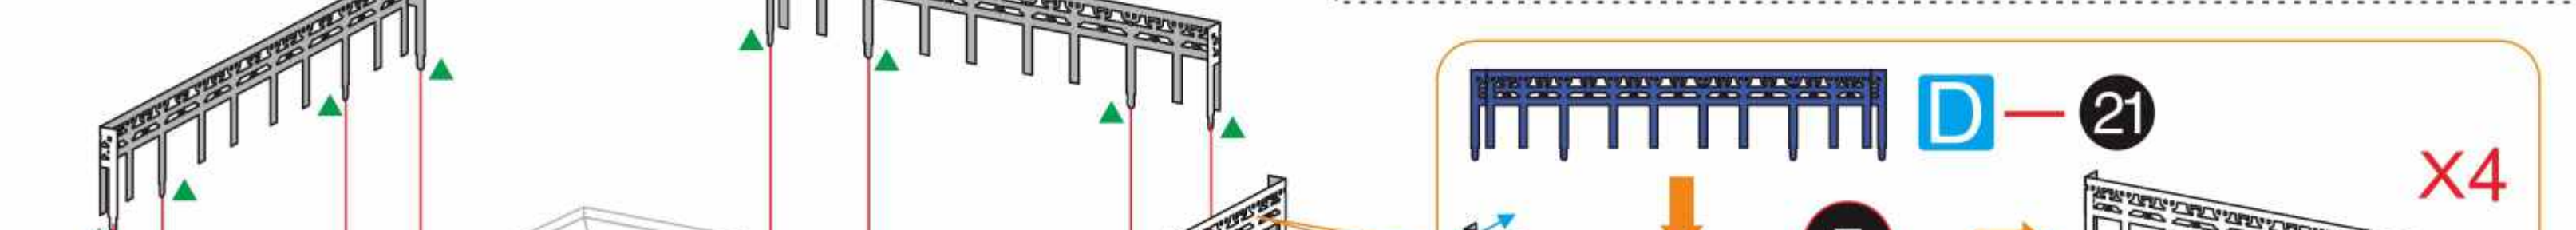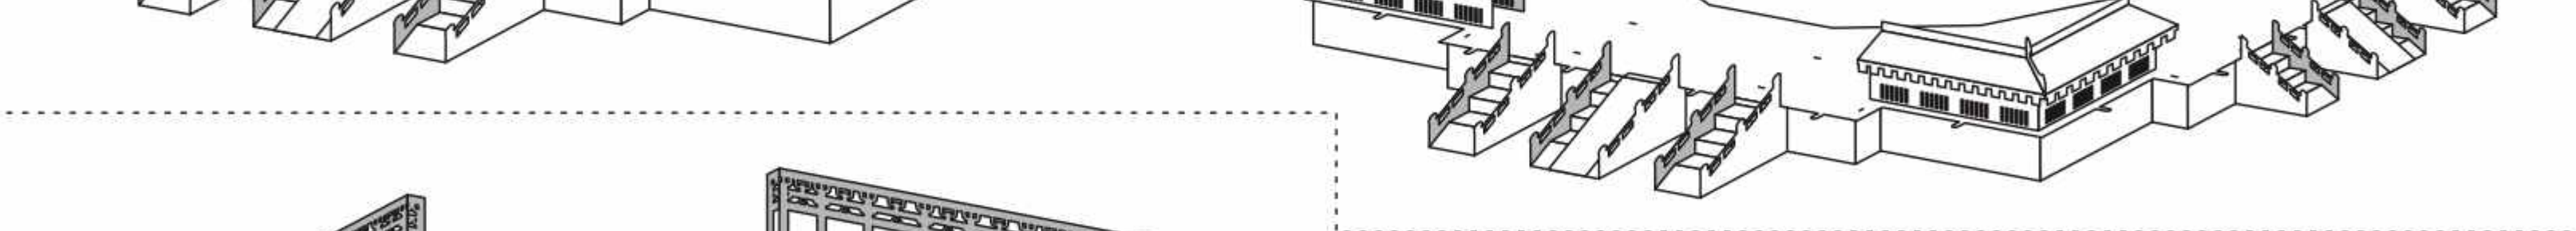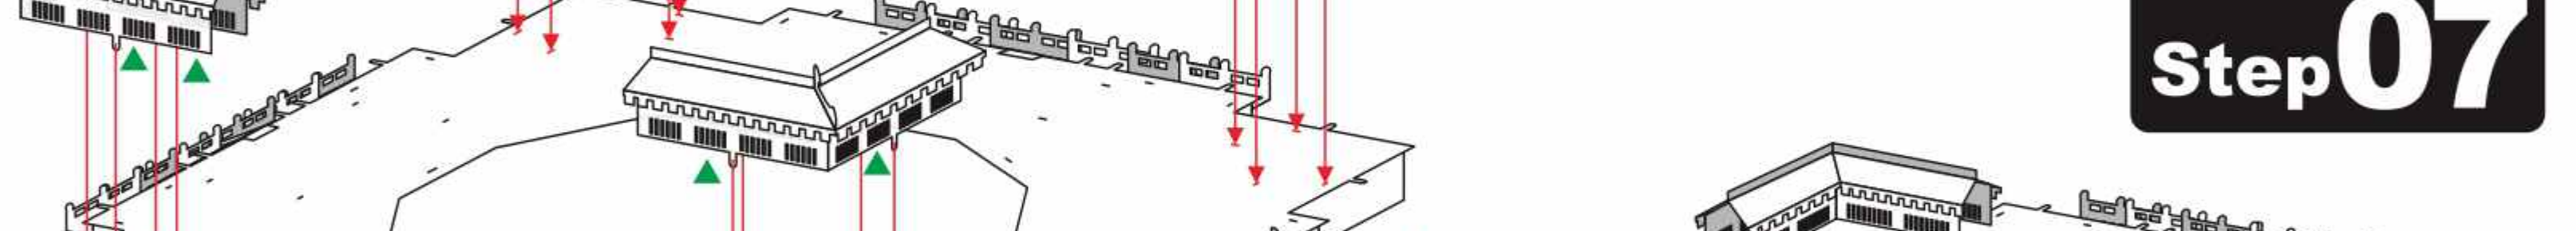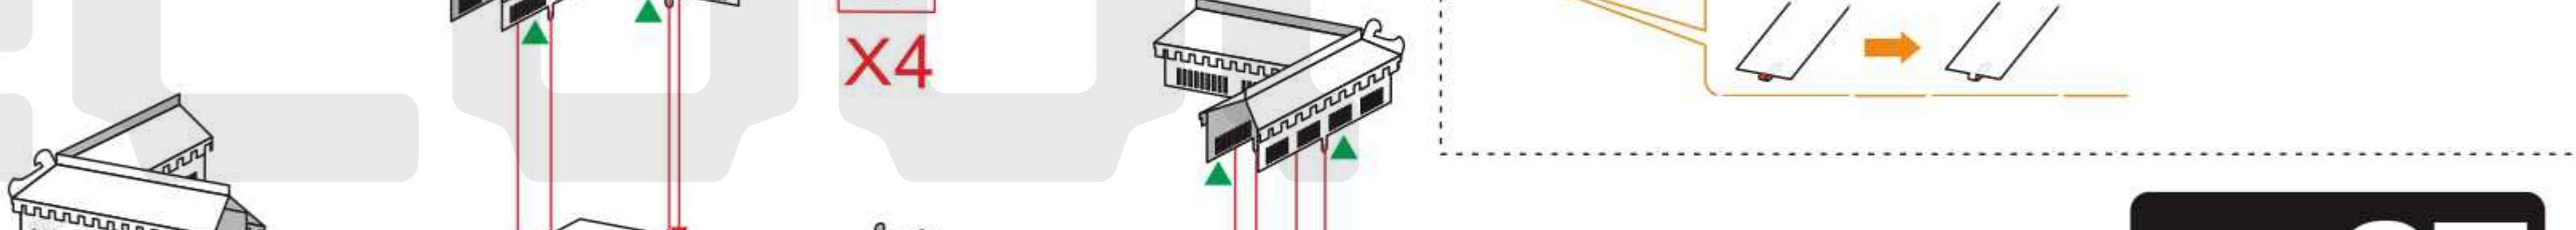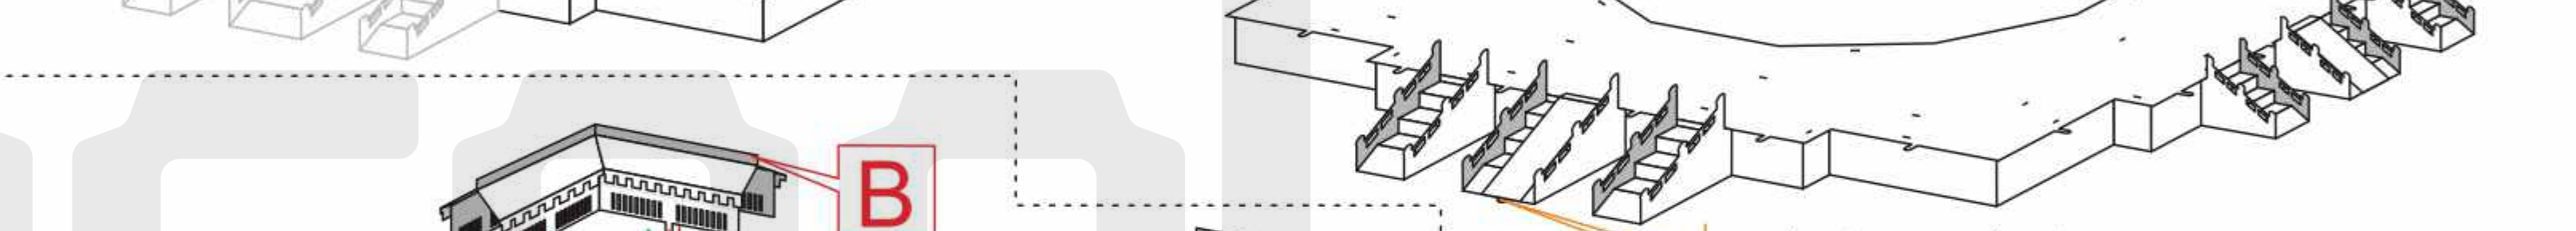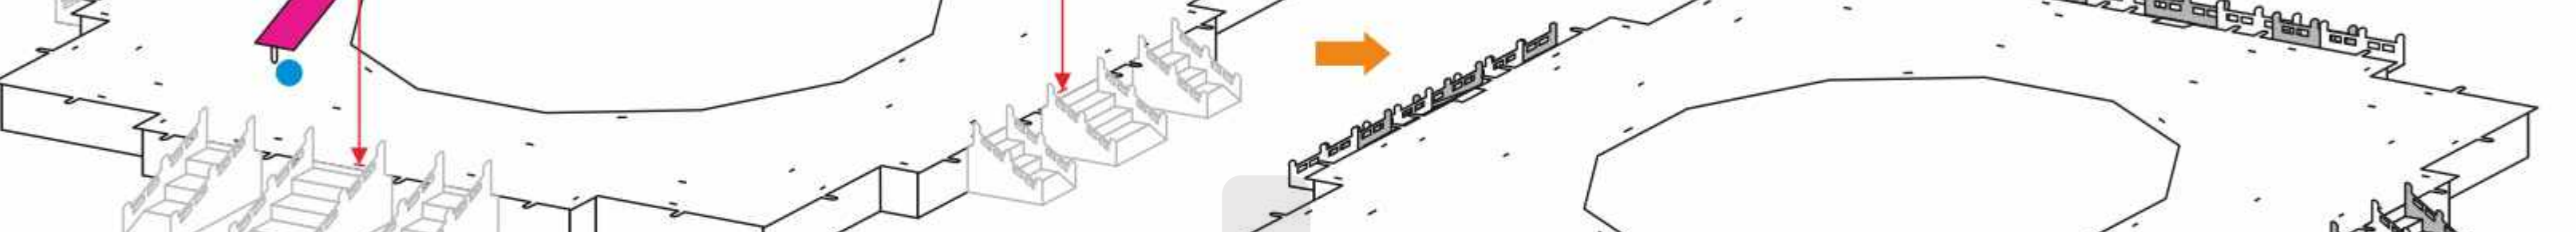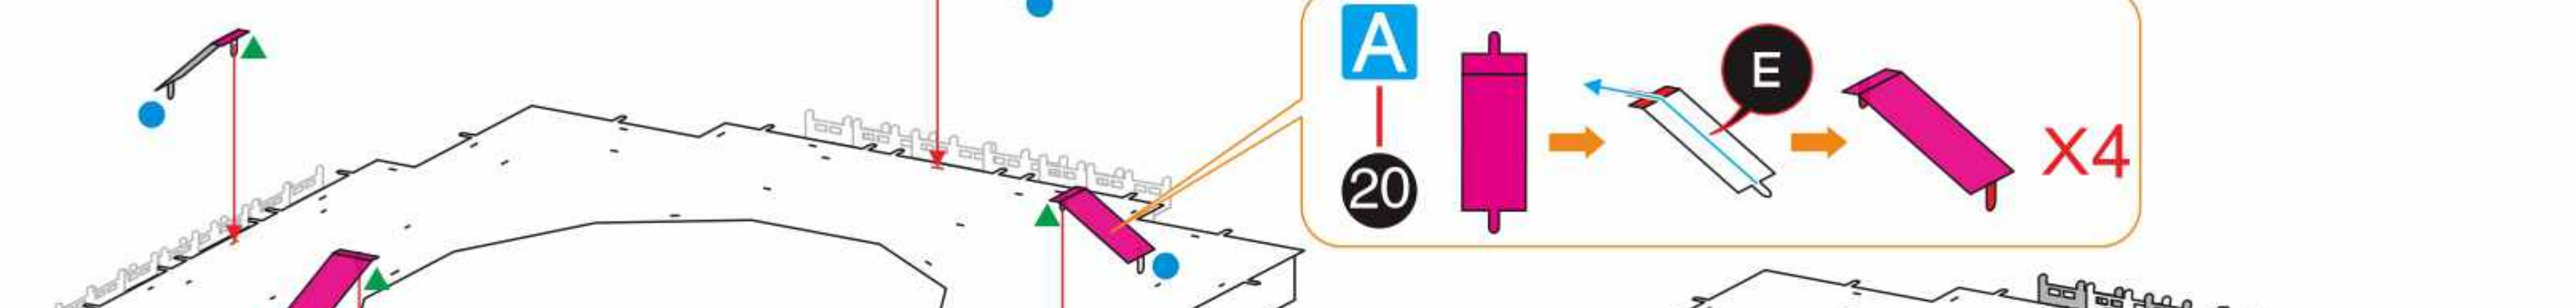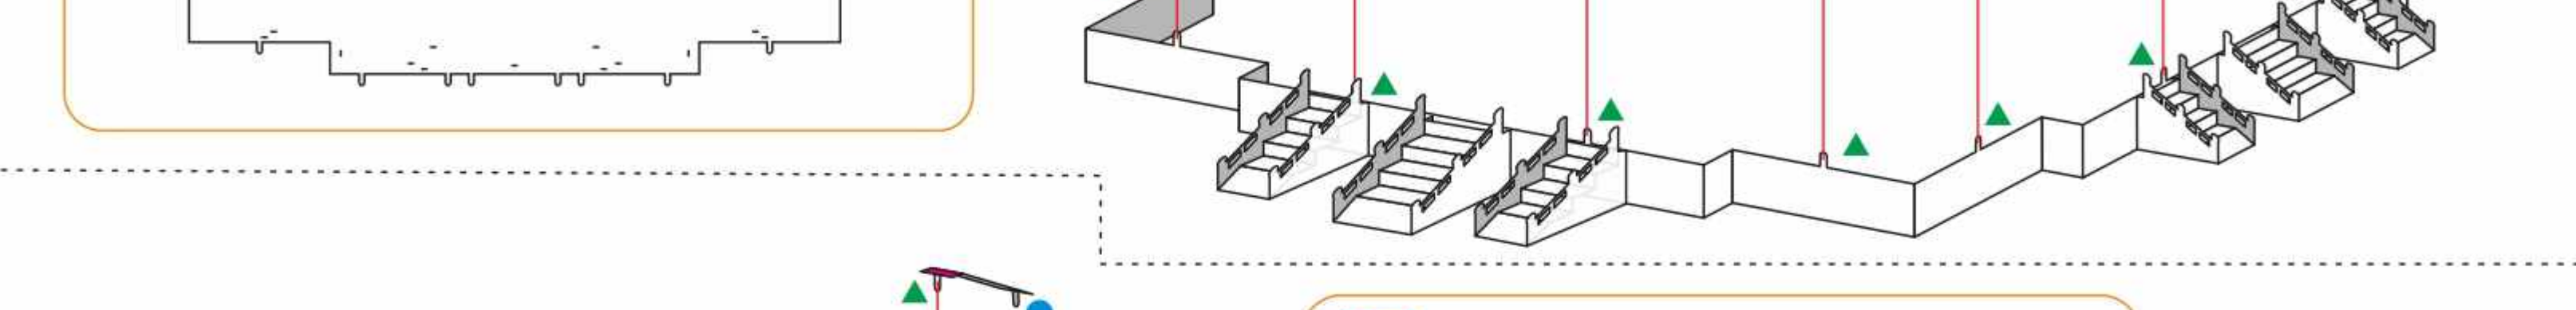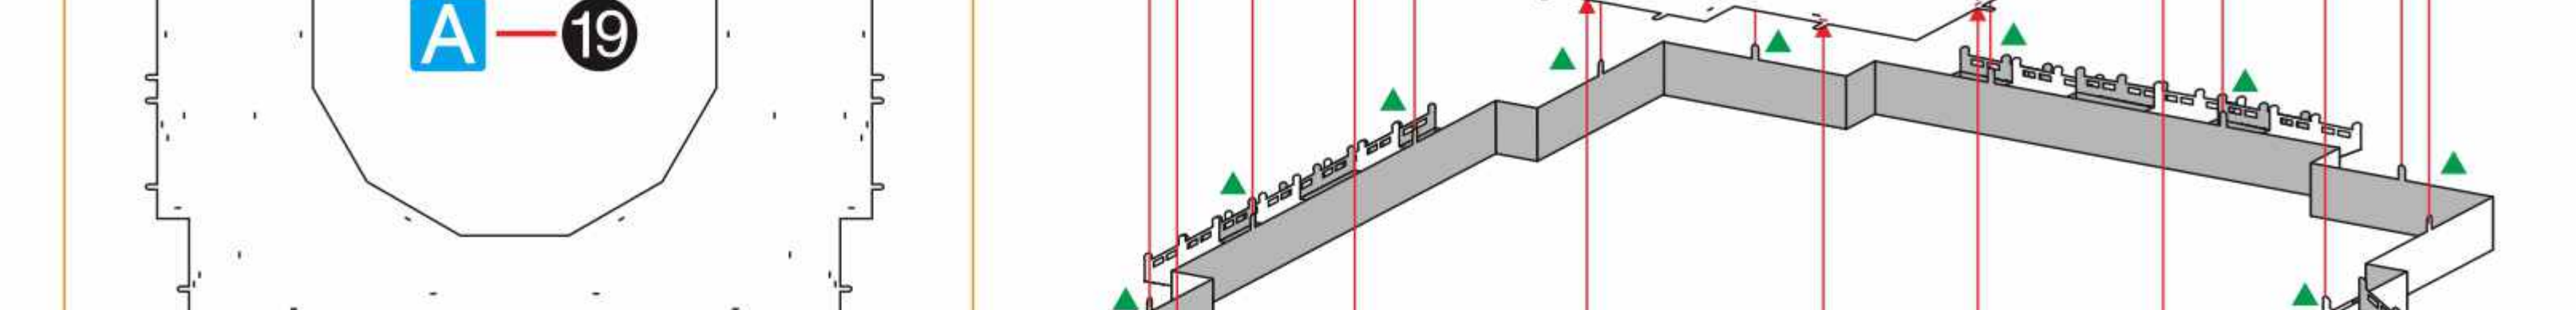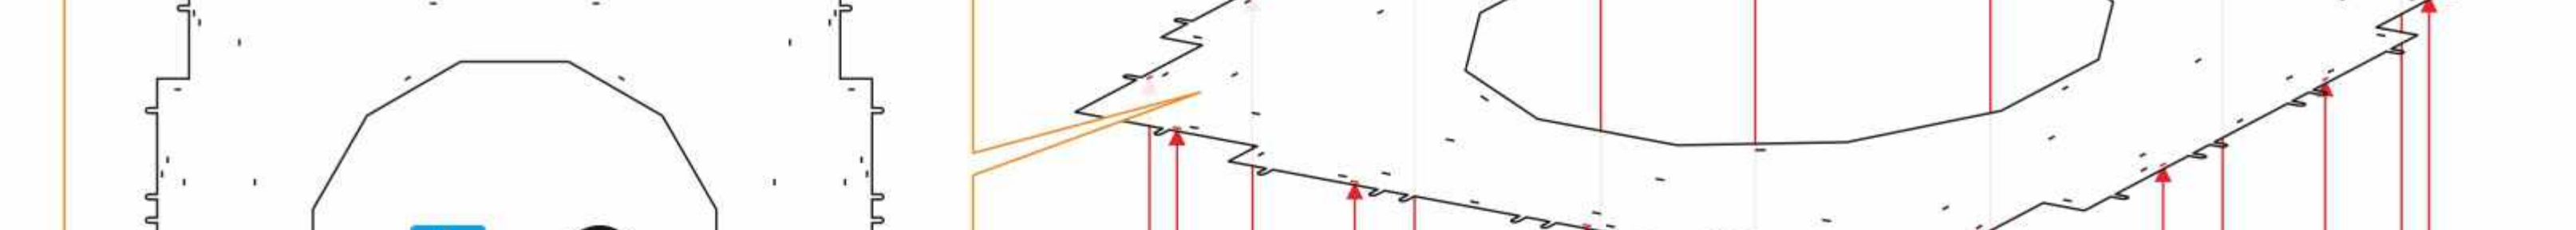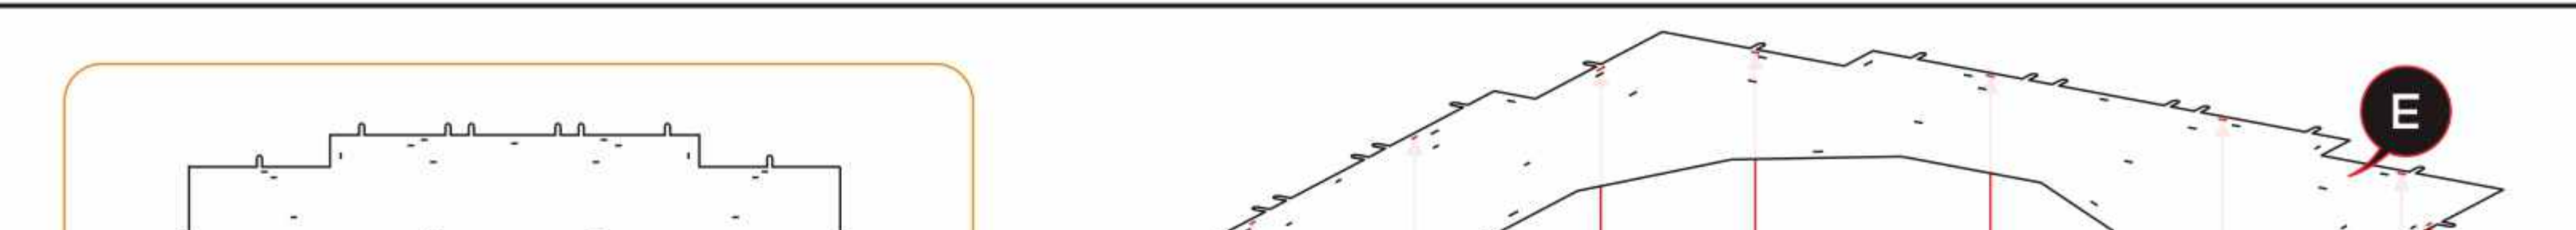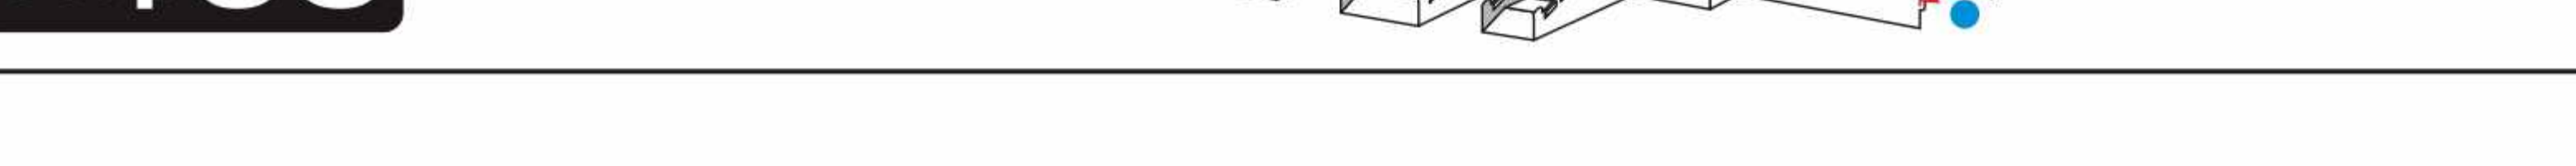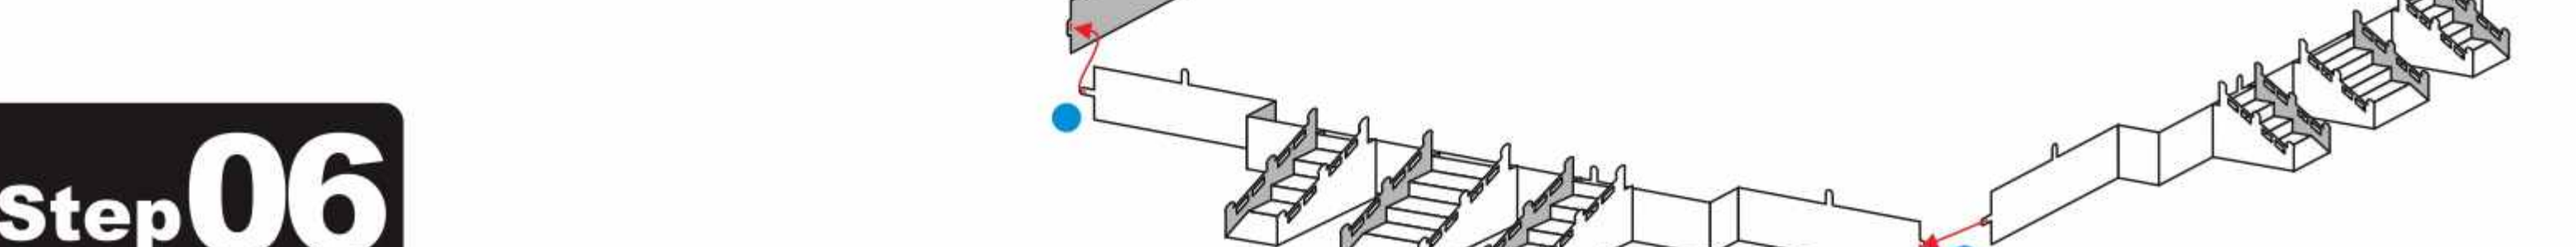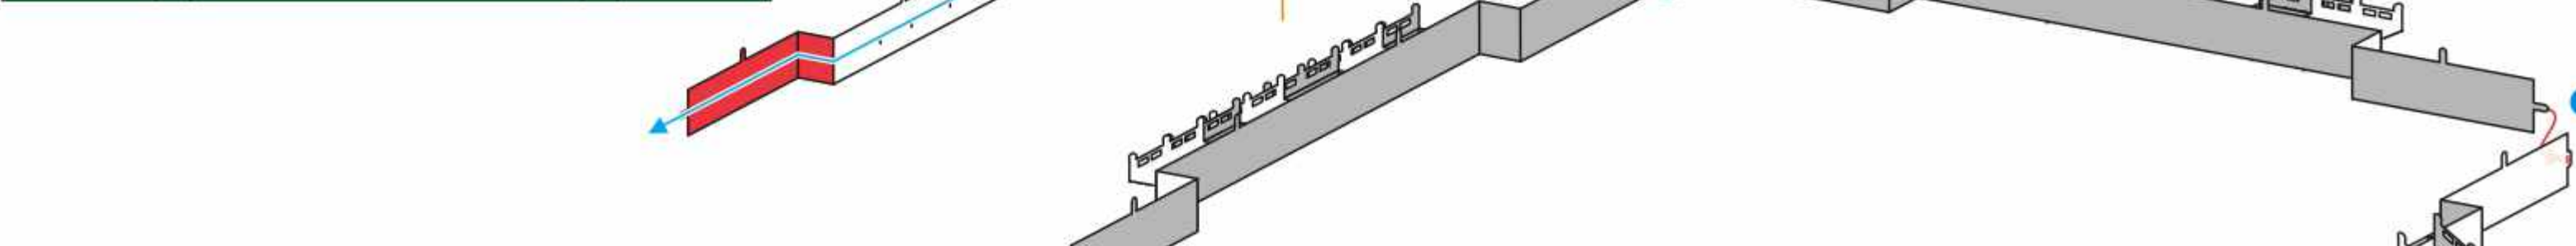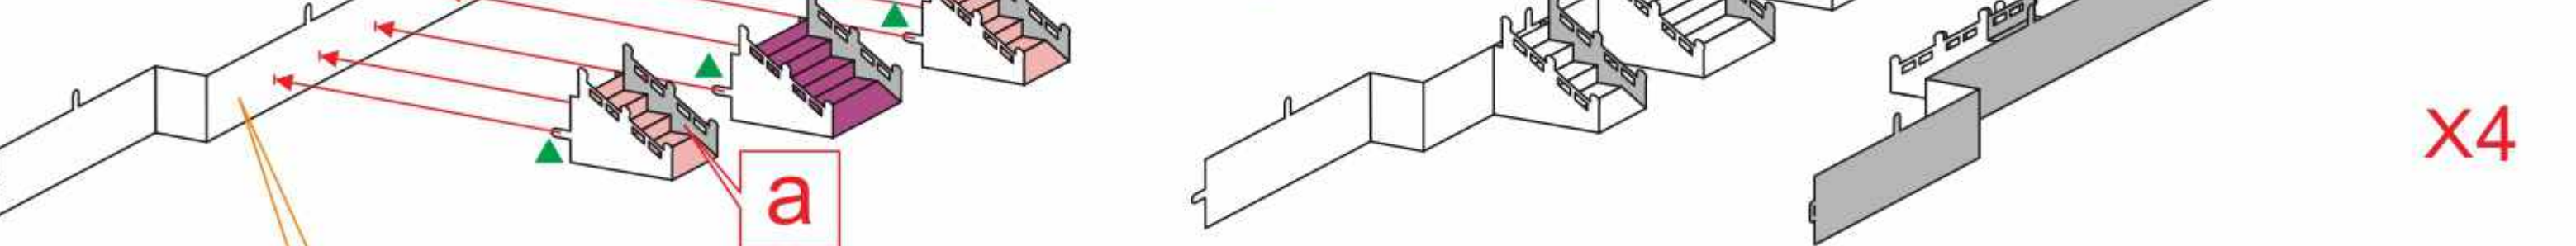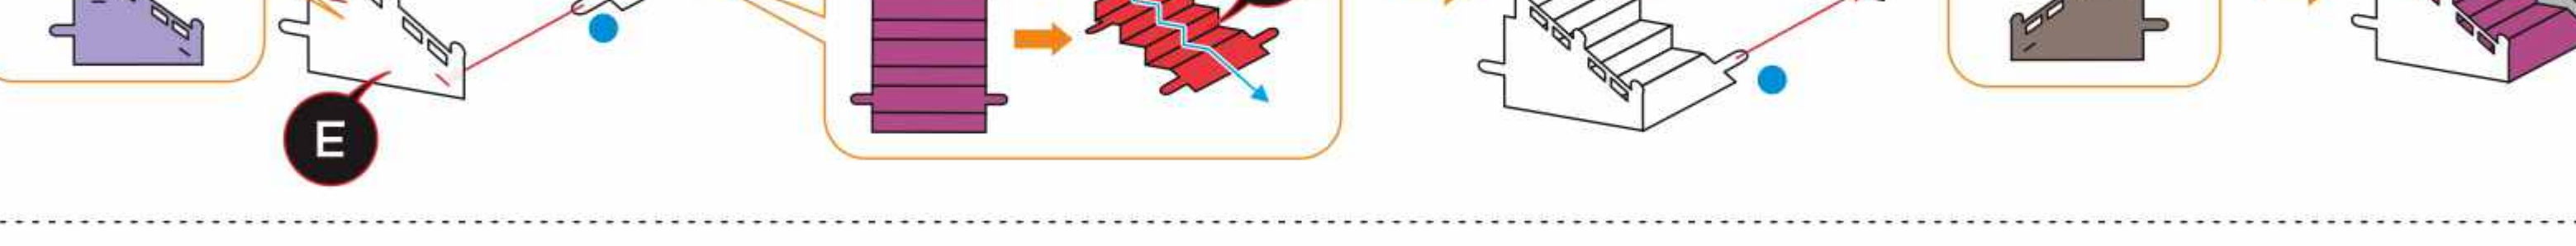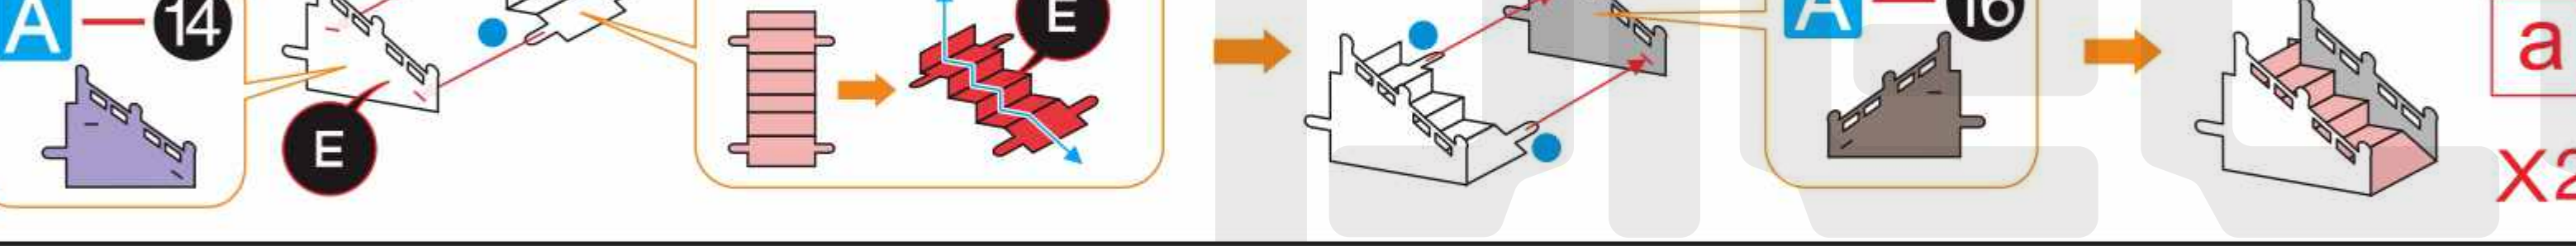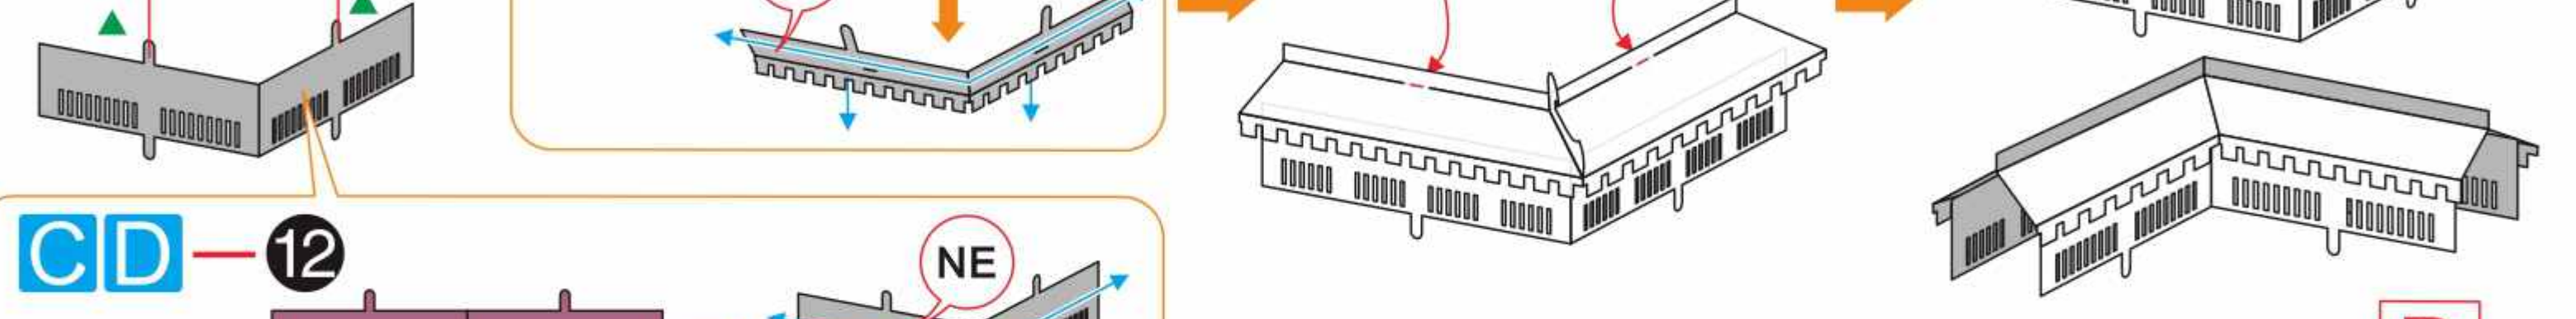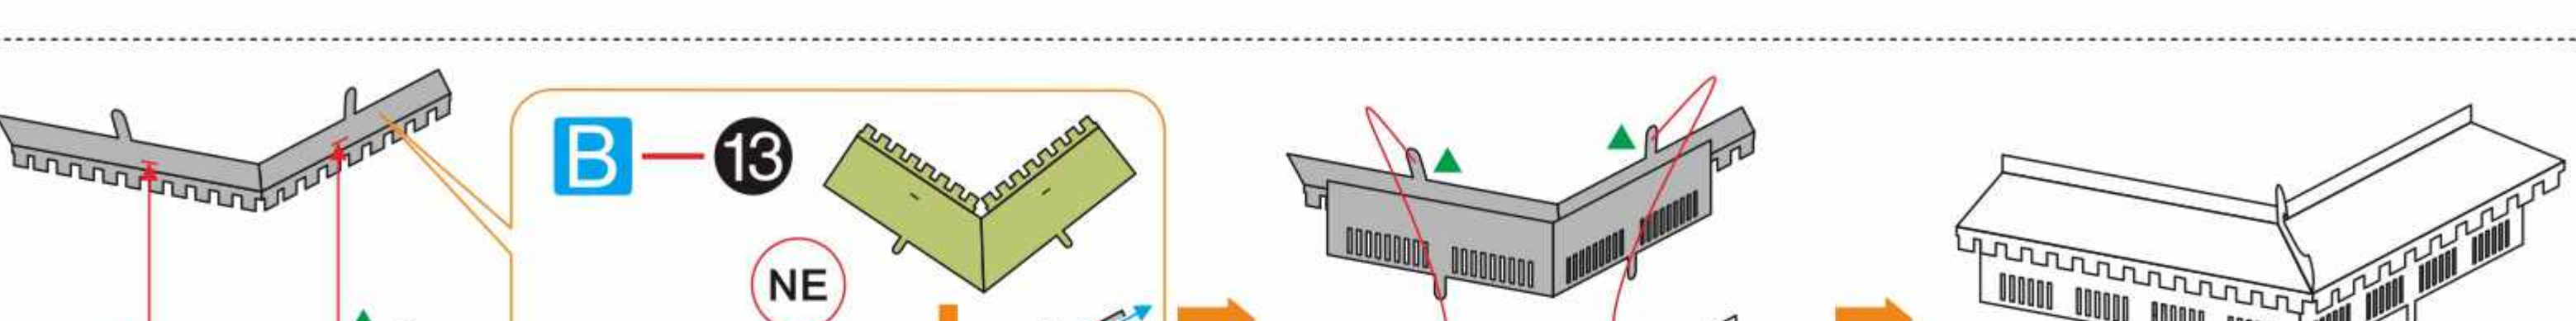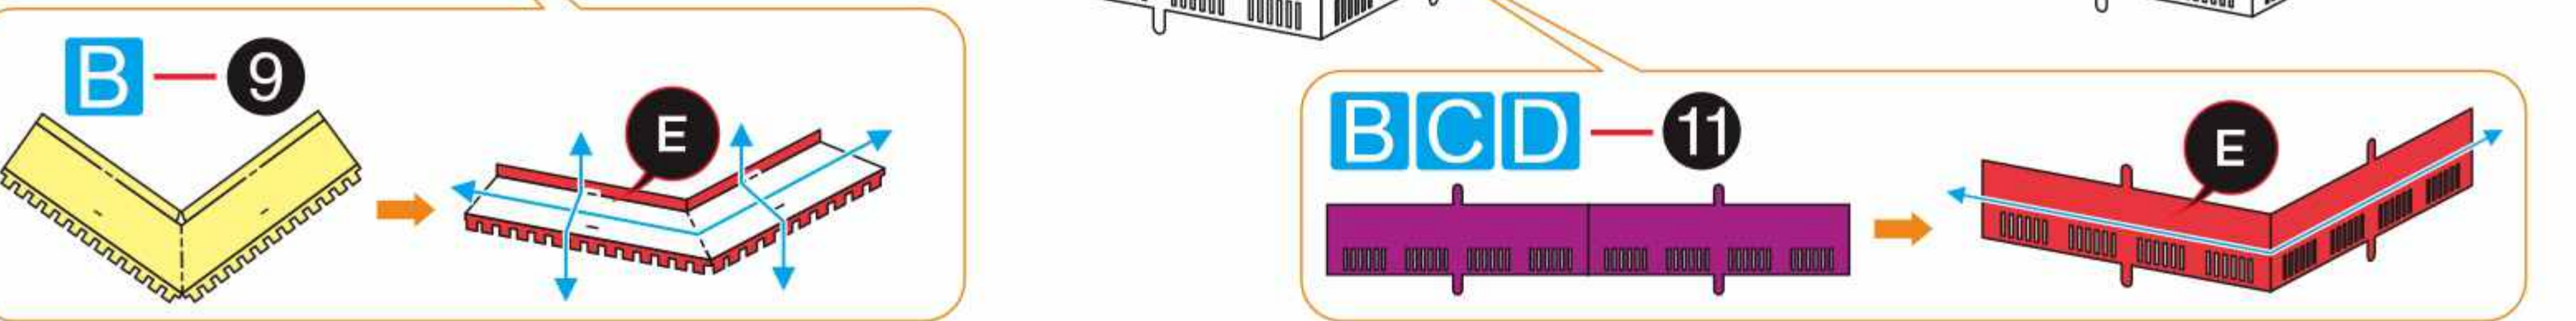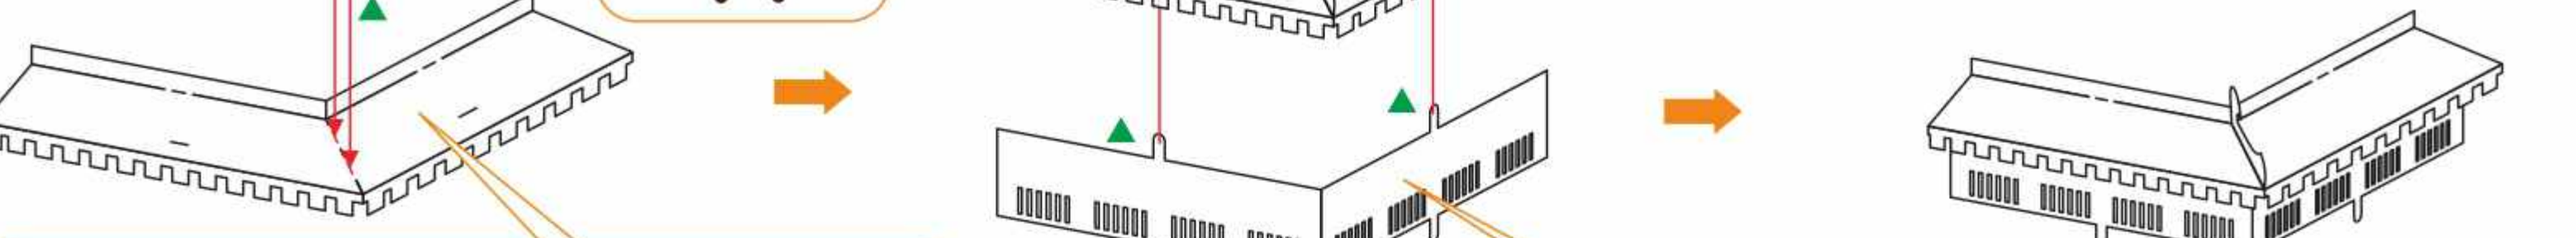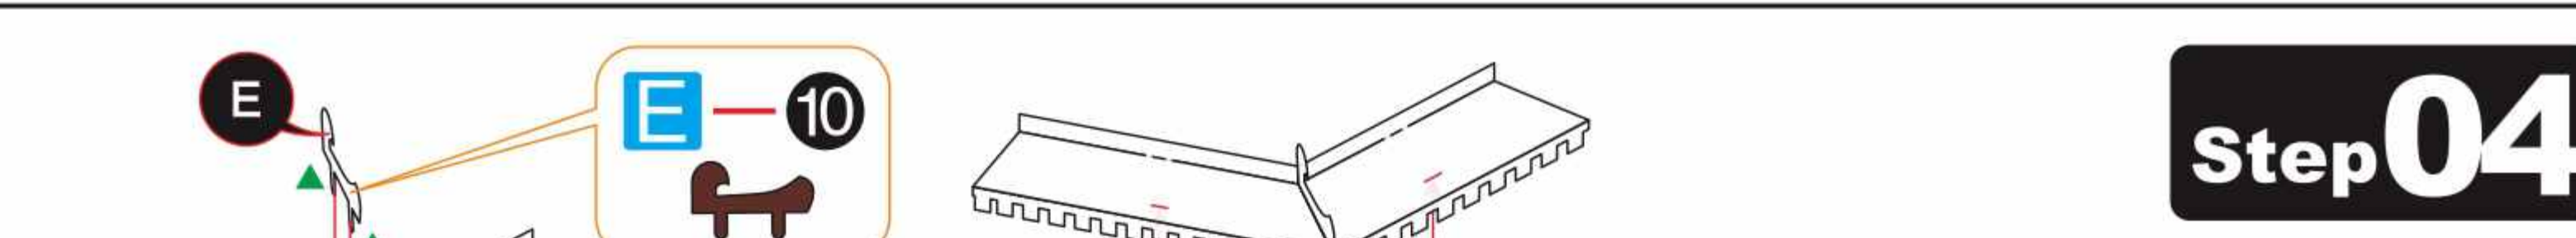


Step 07

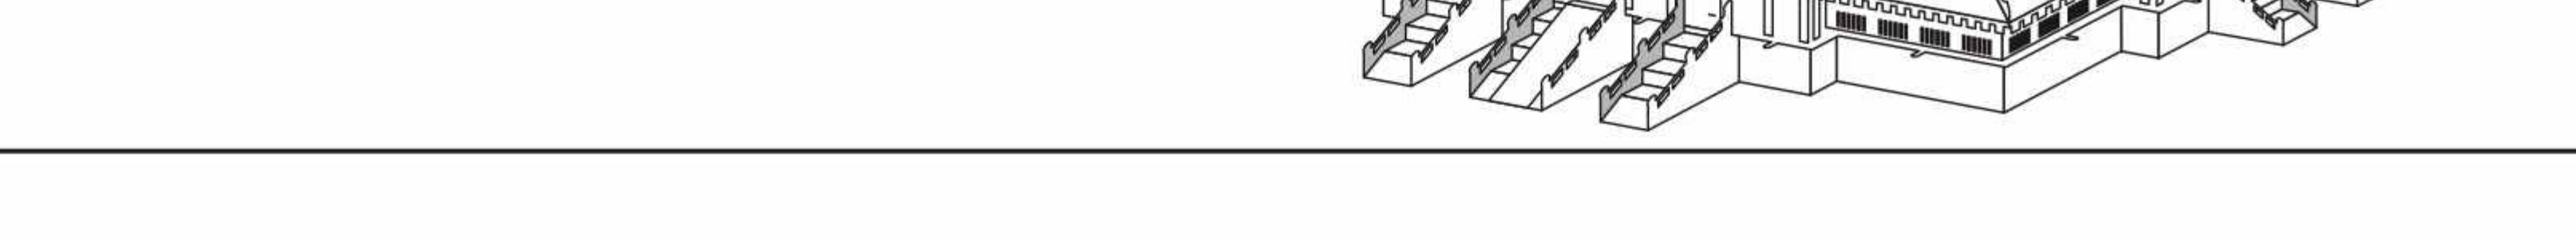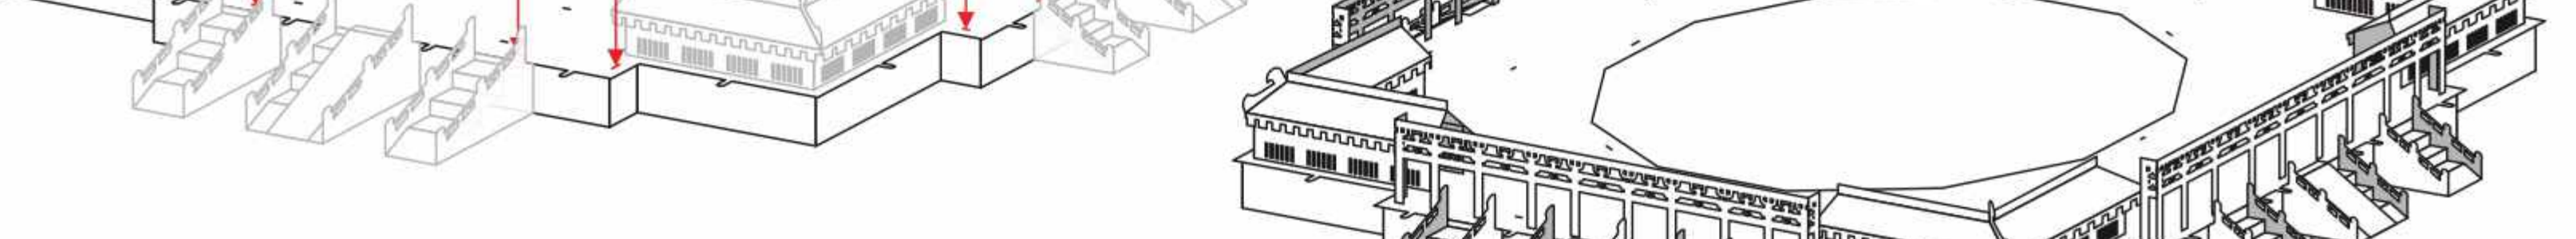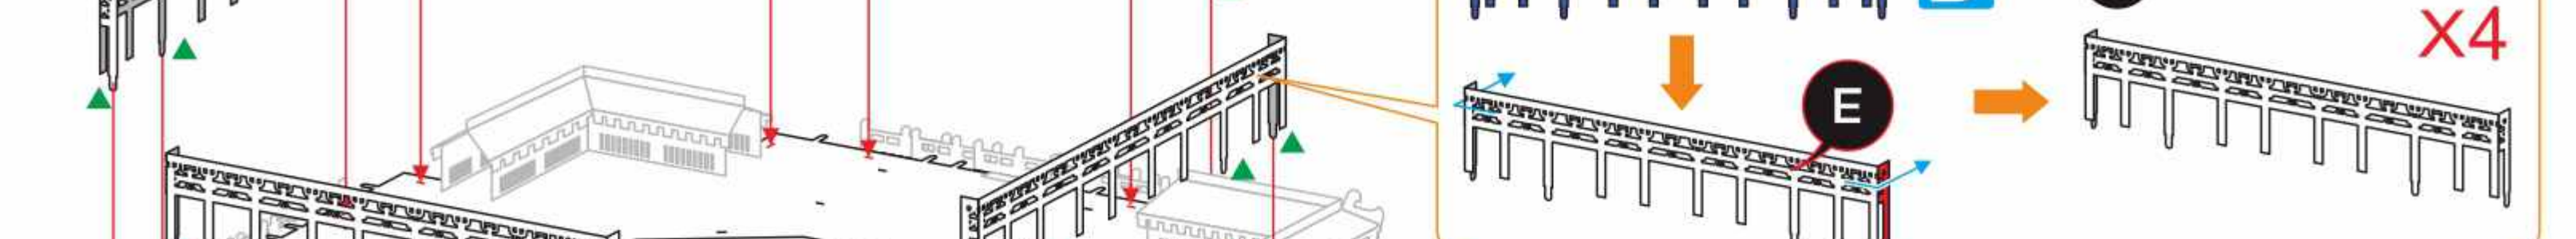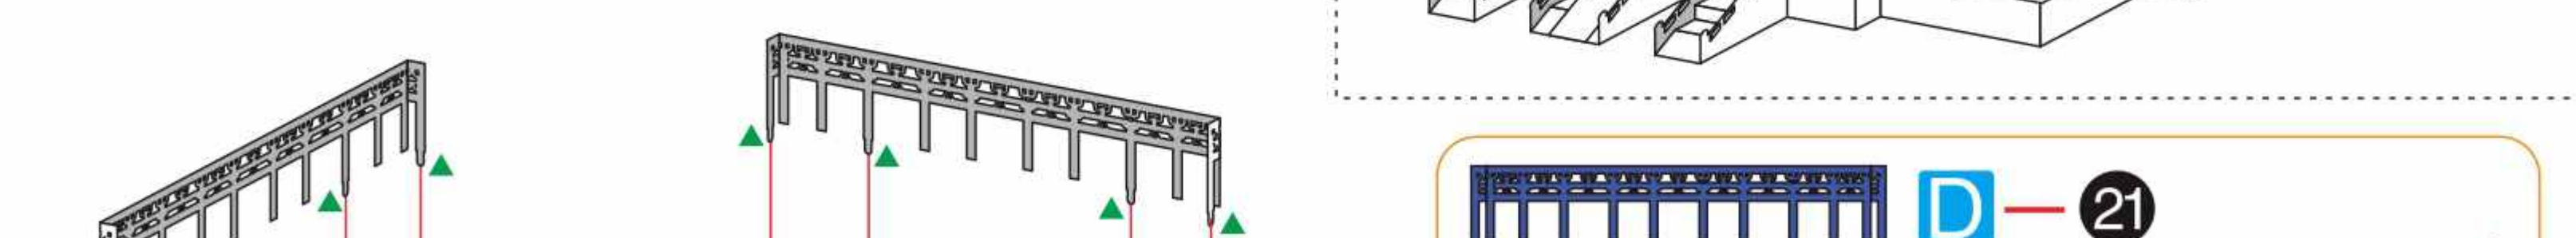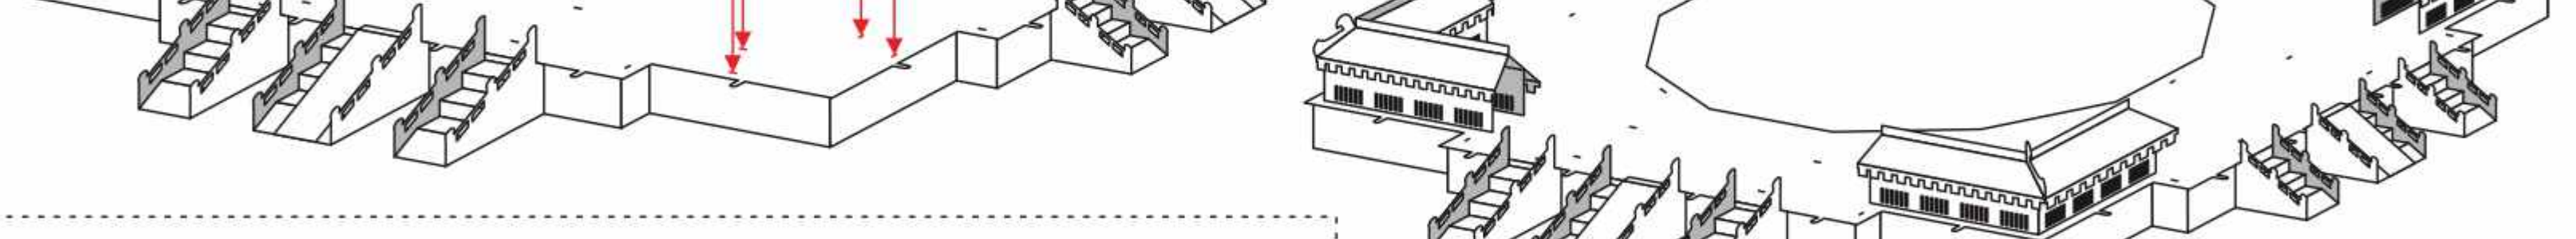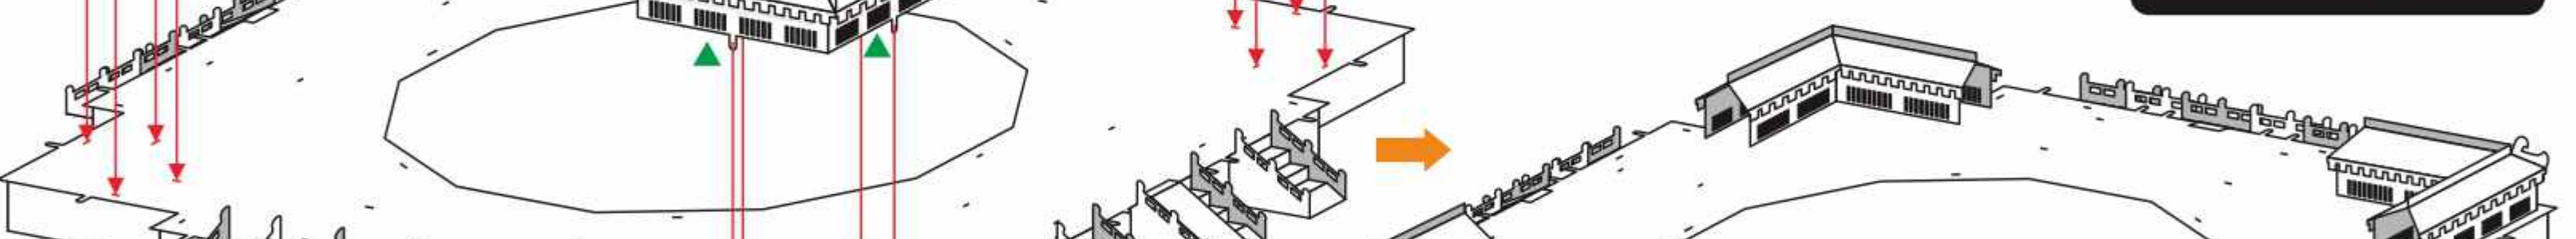

Step 08

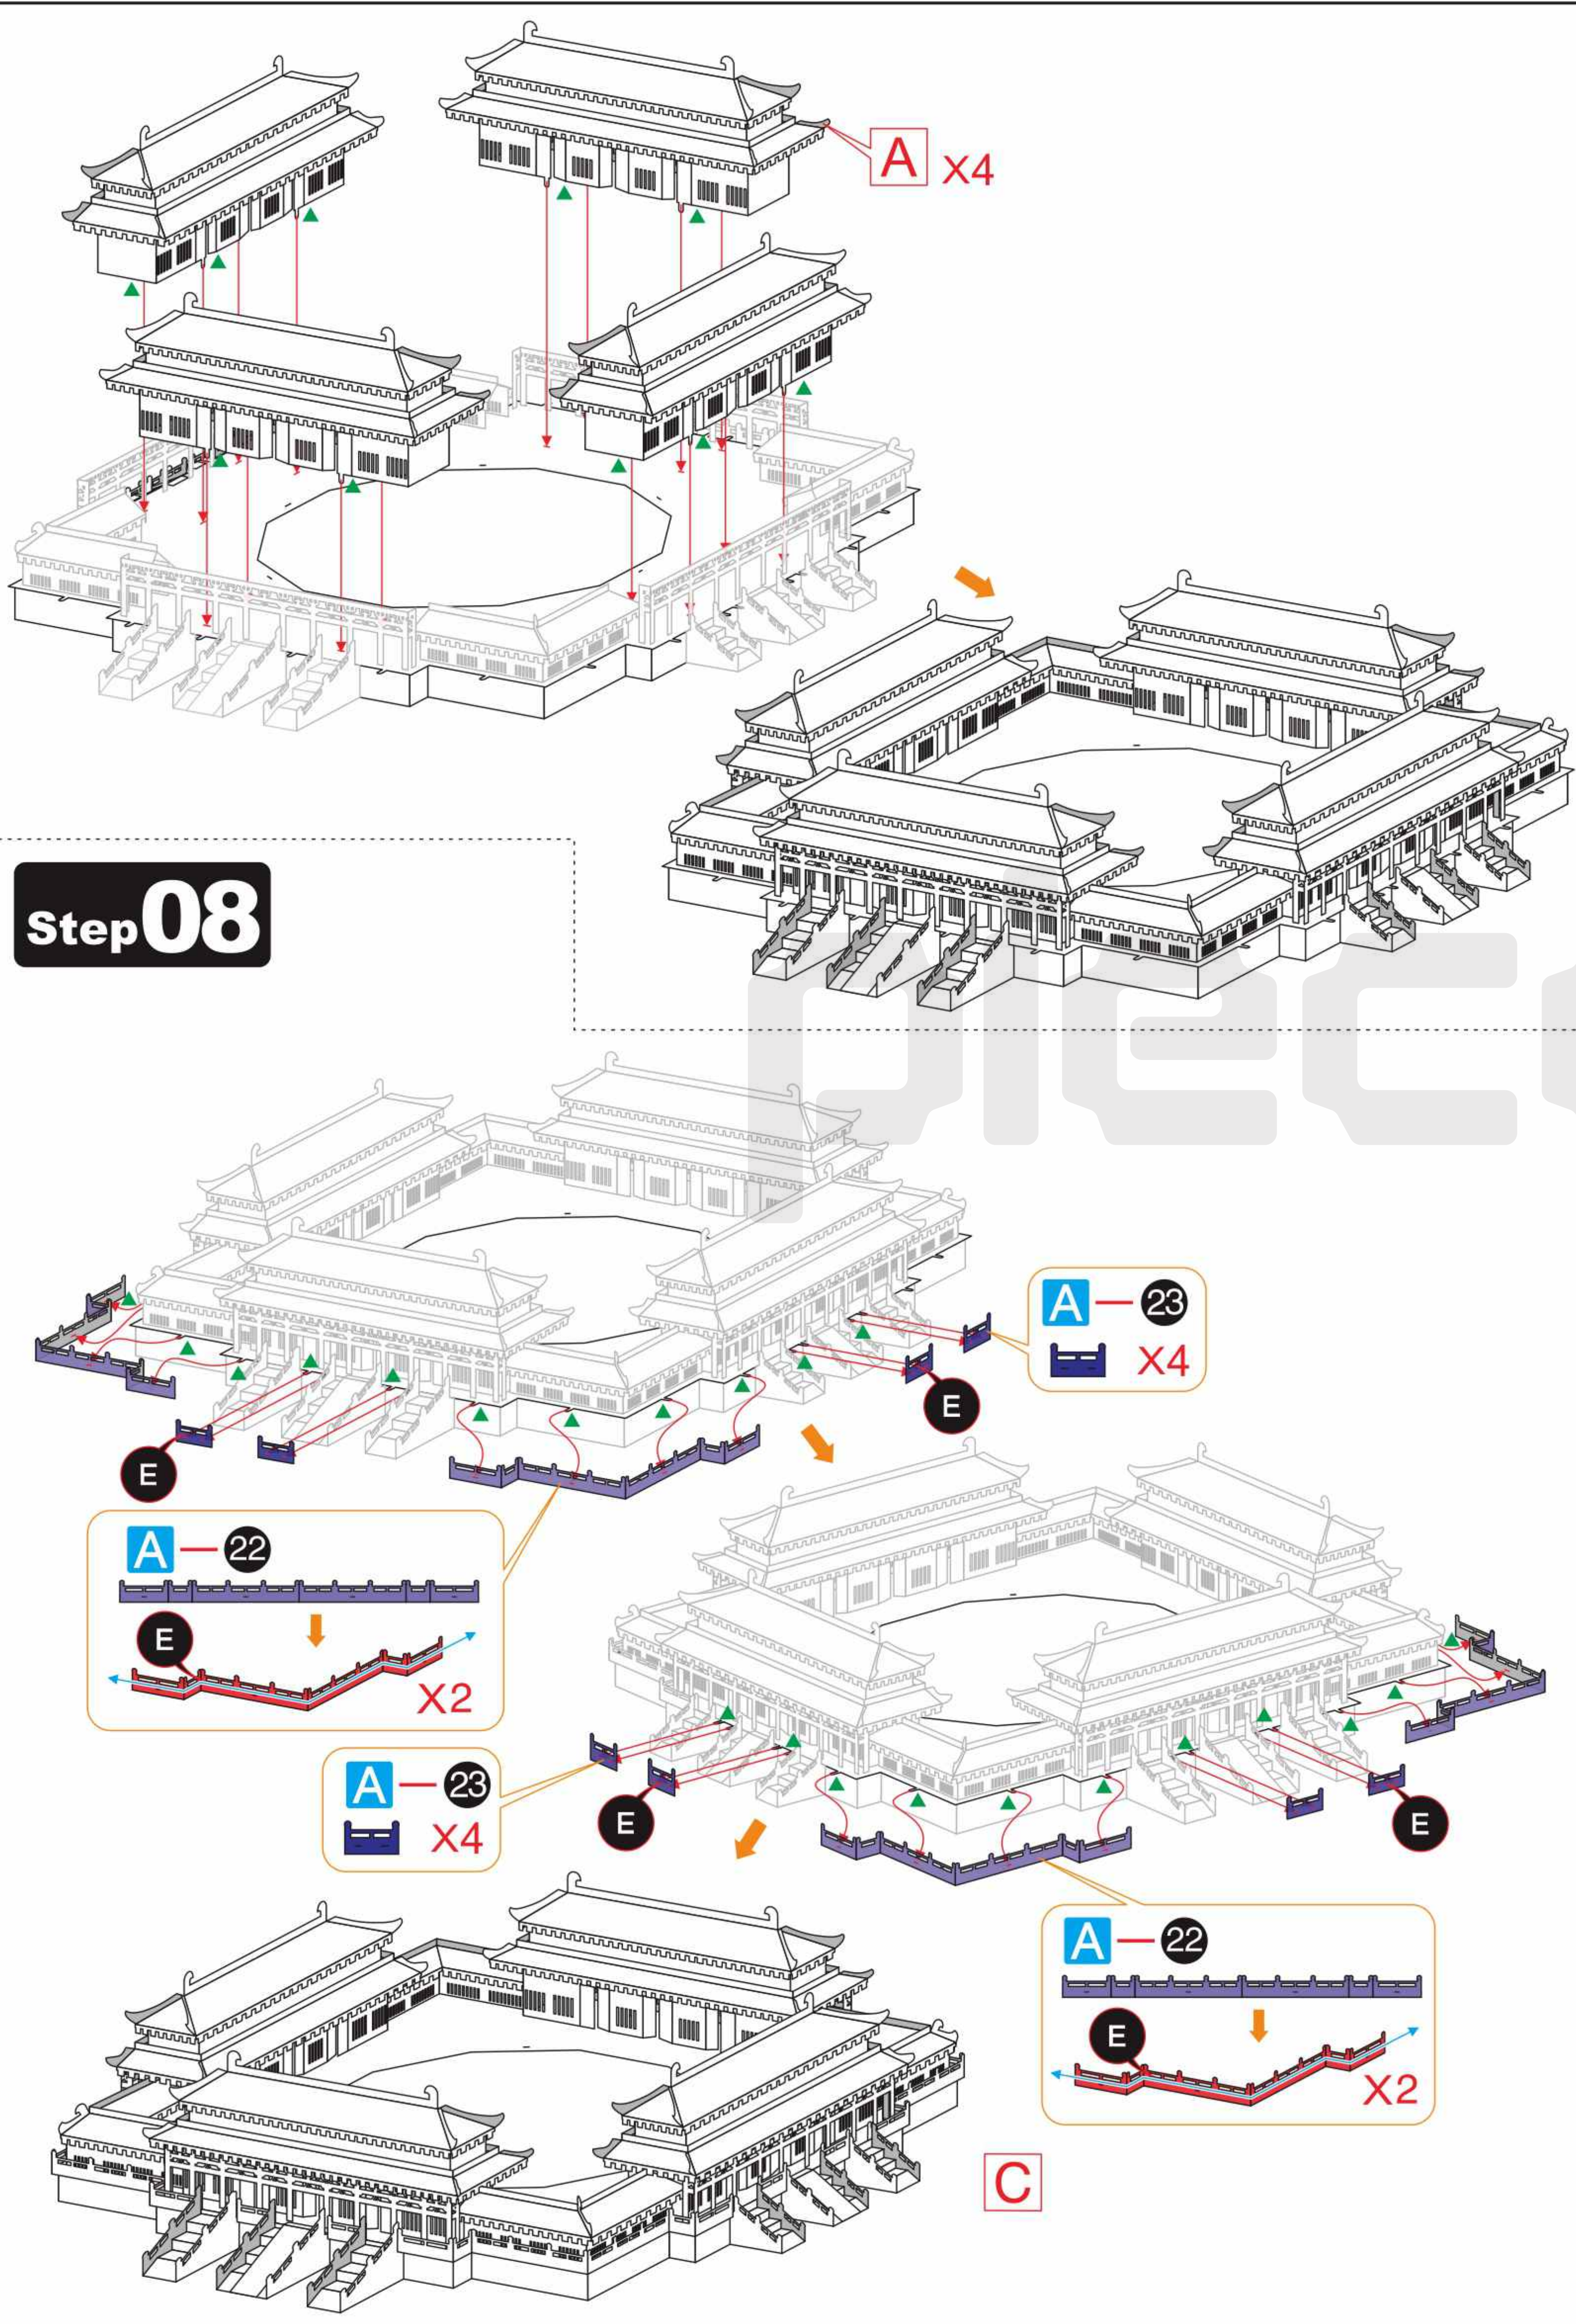


Step 09

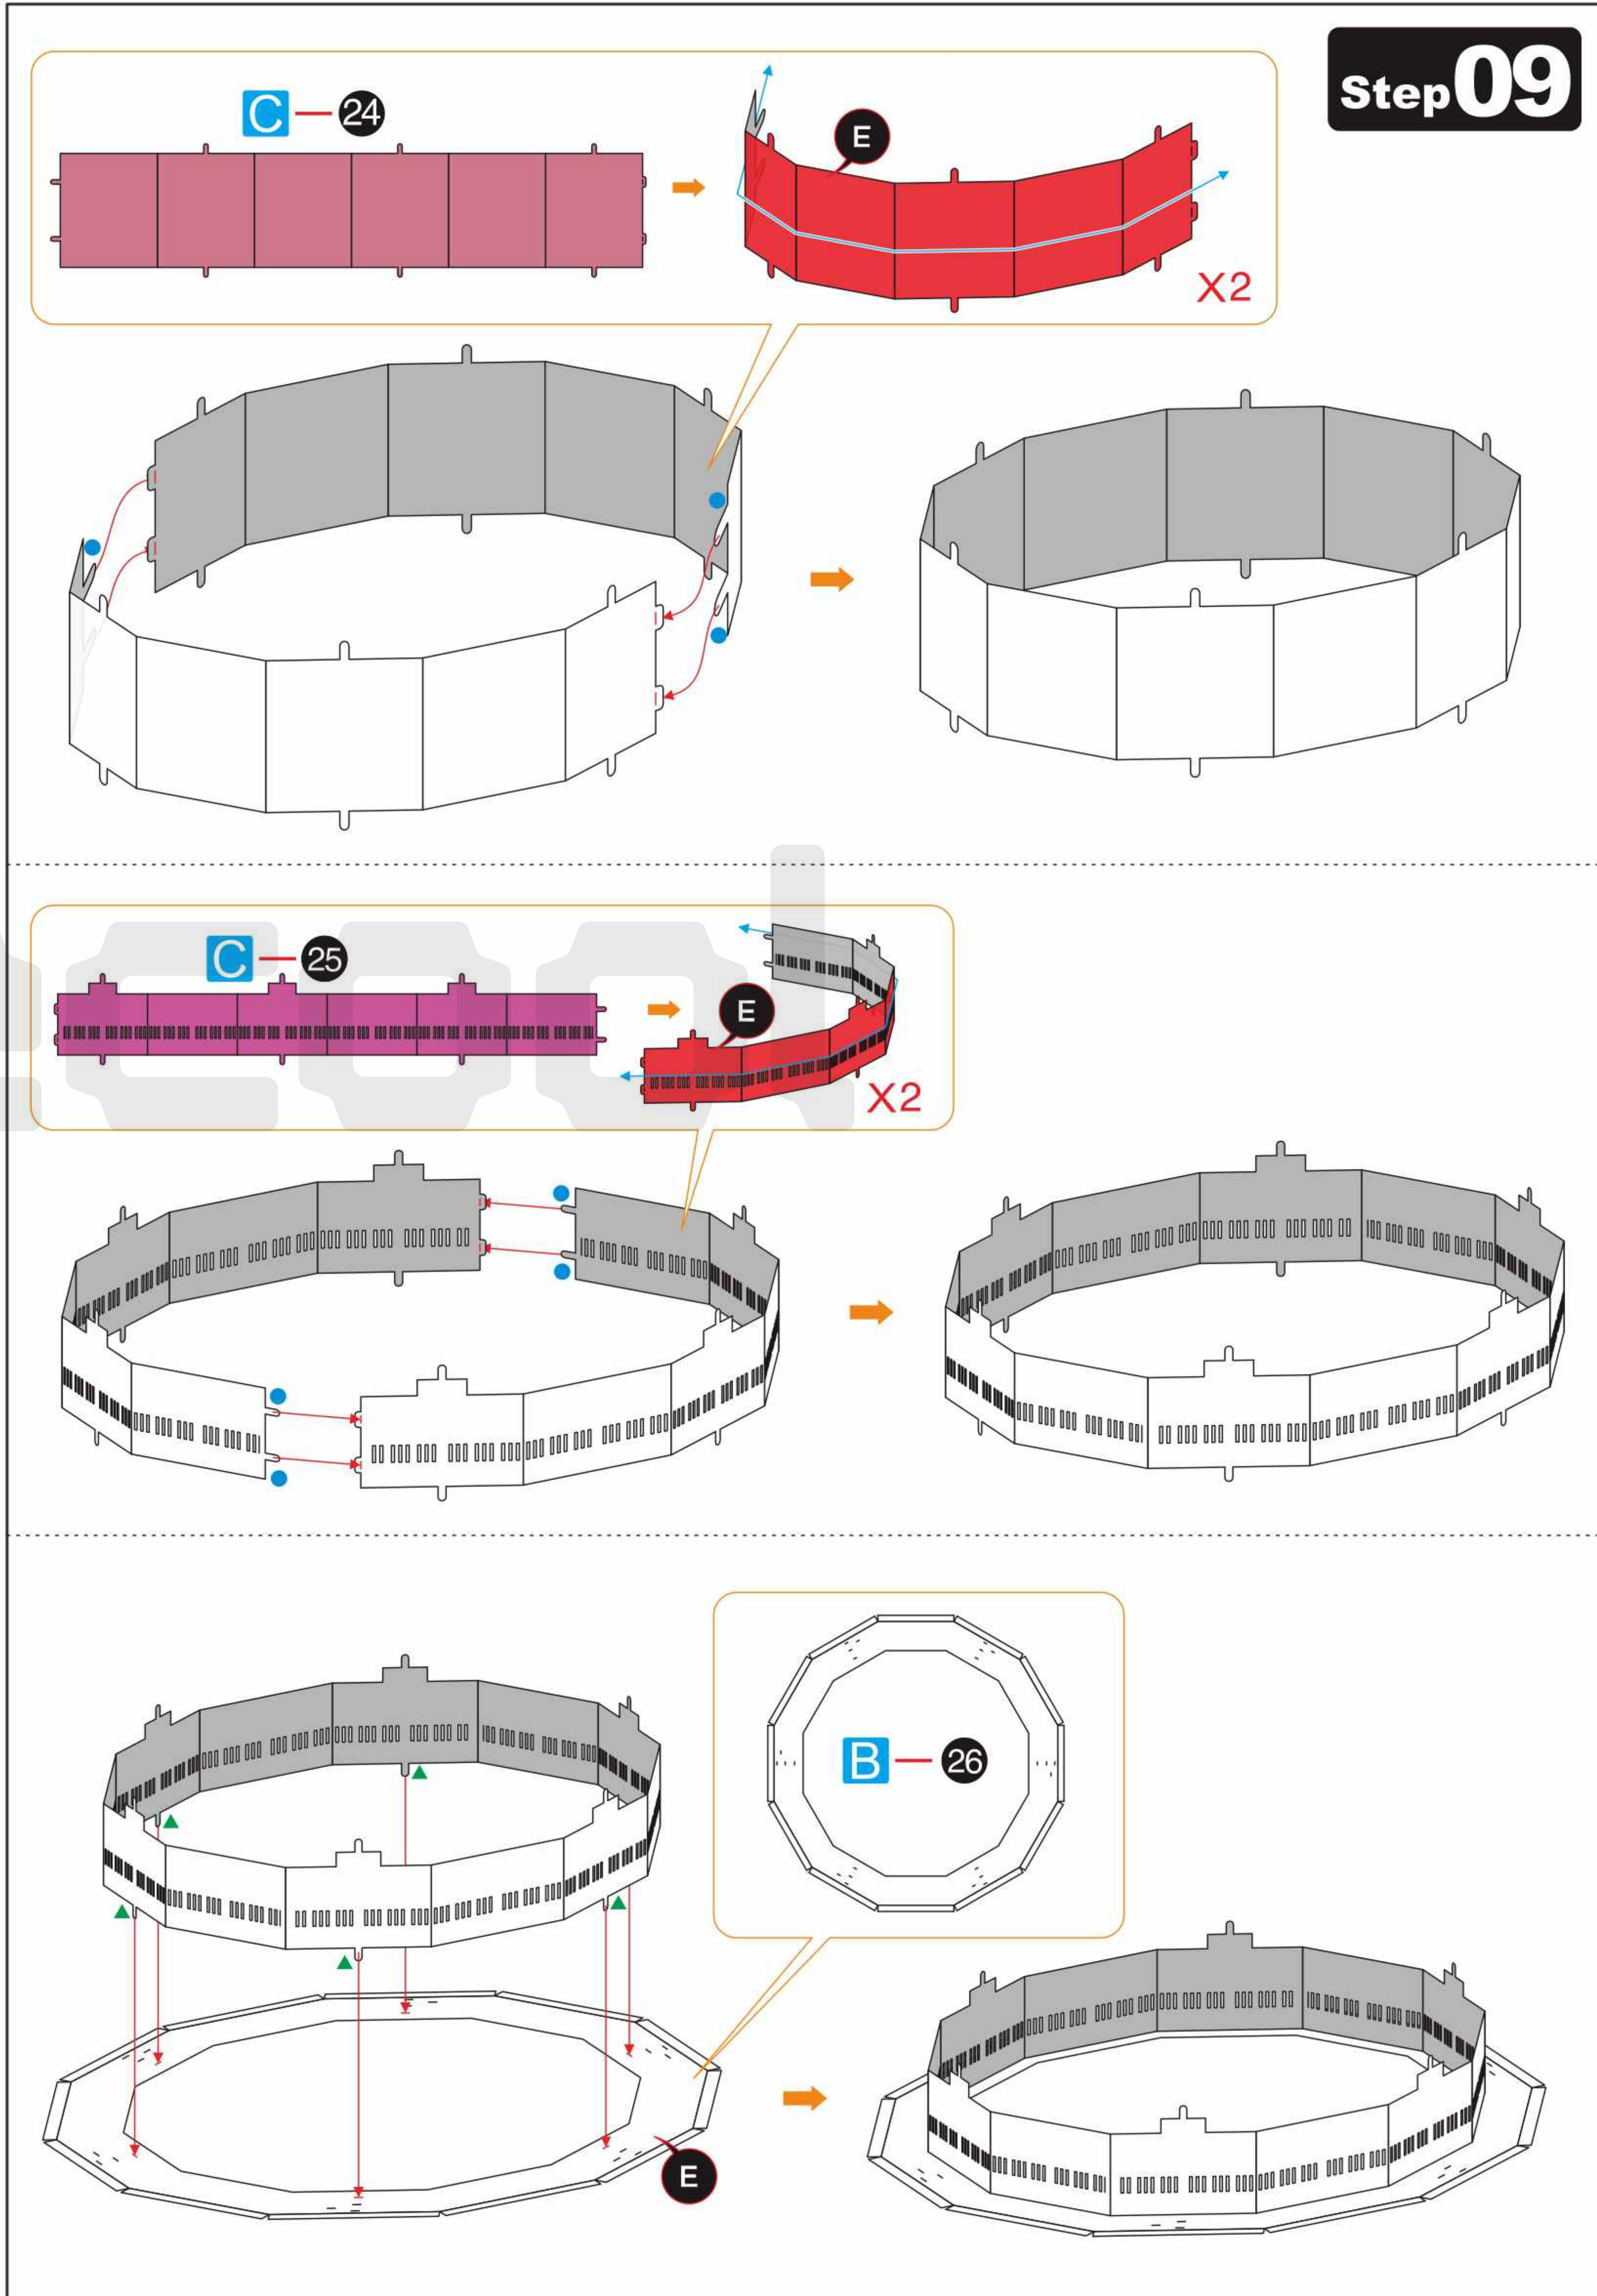


5
6
7
8


Step 10

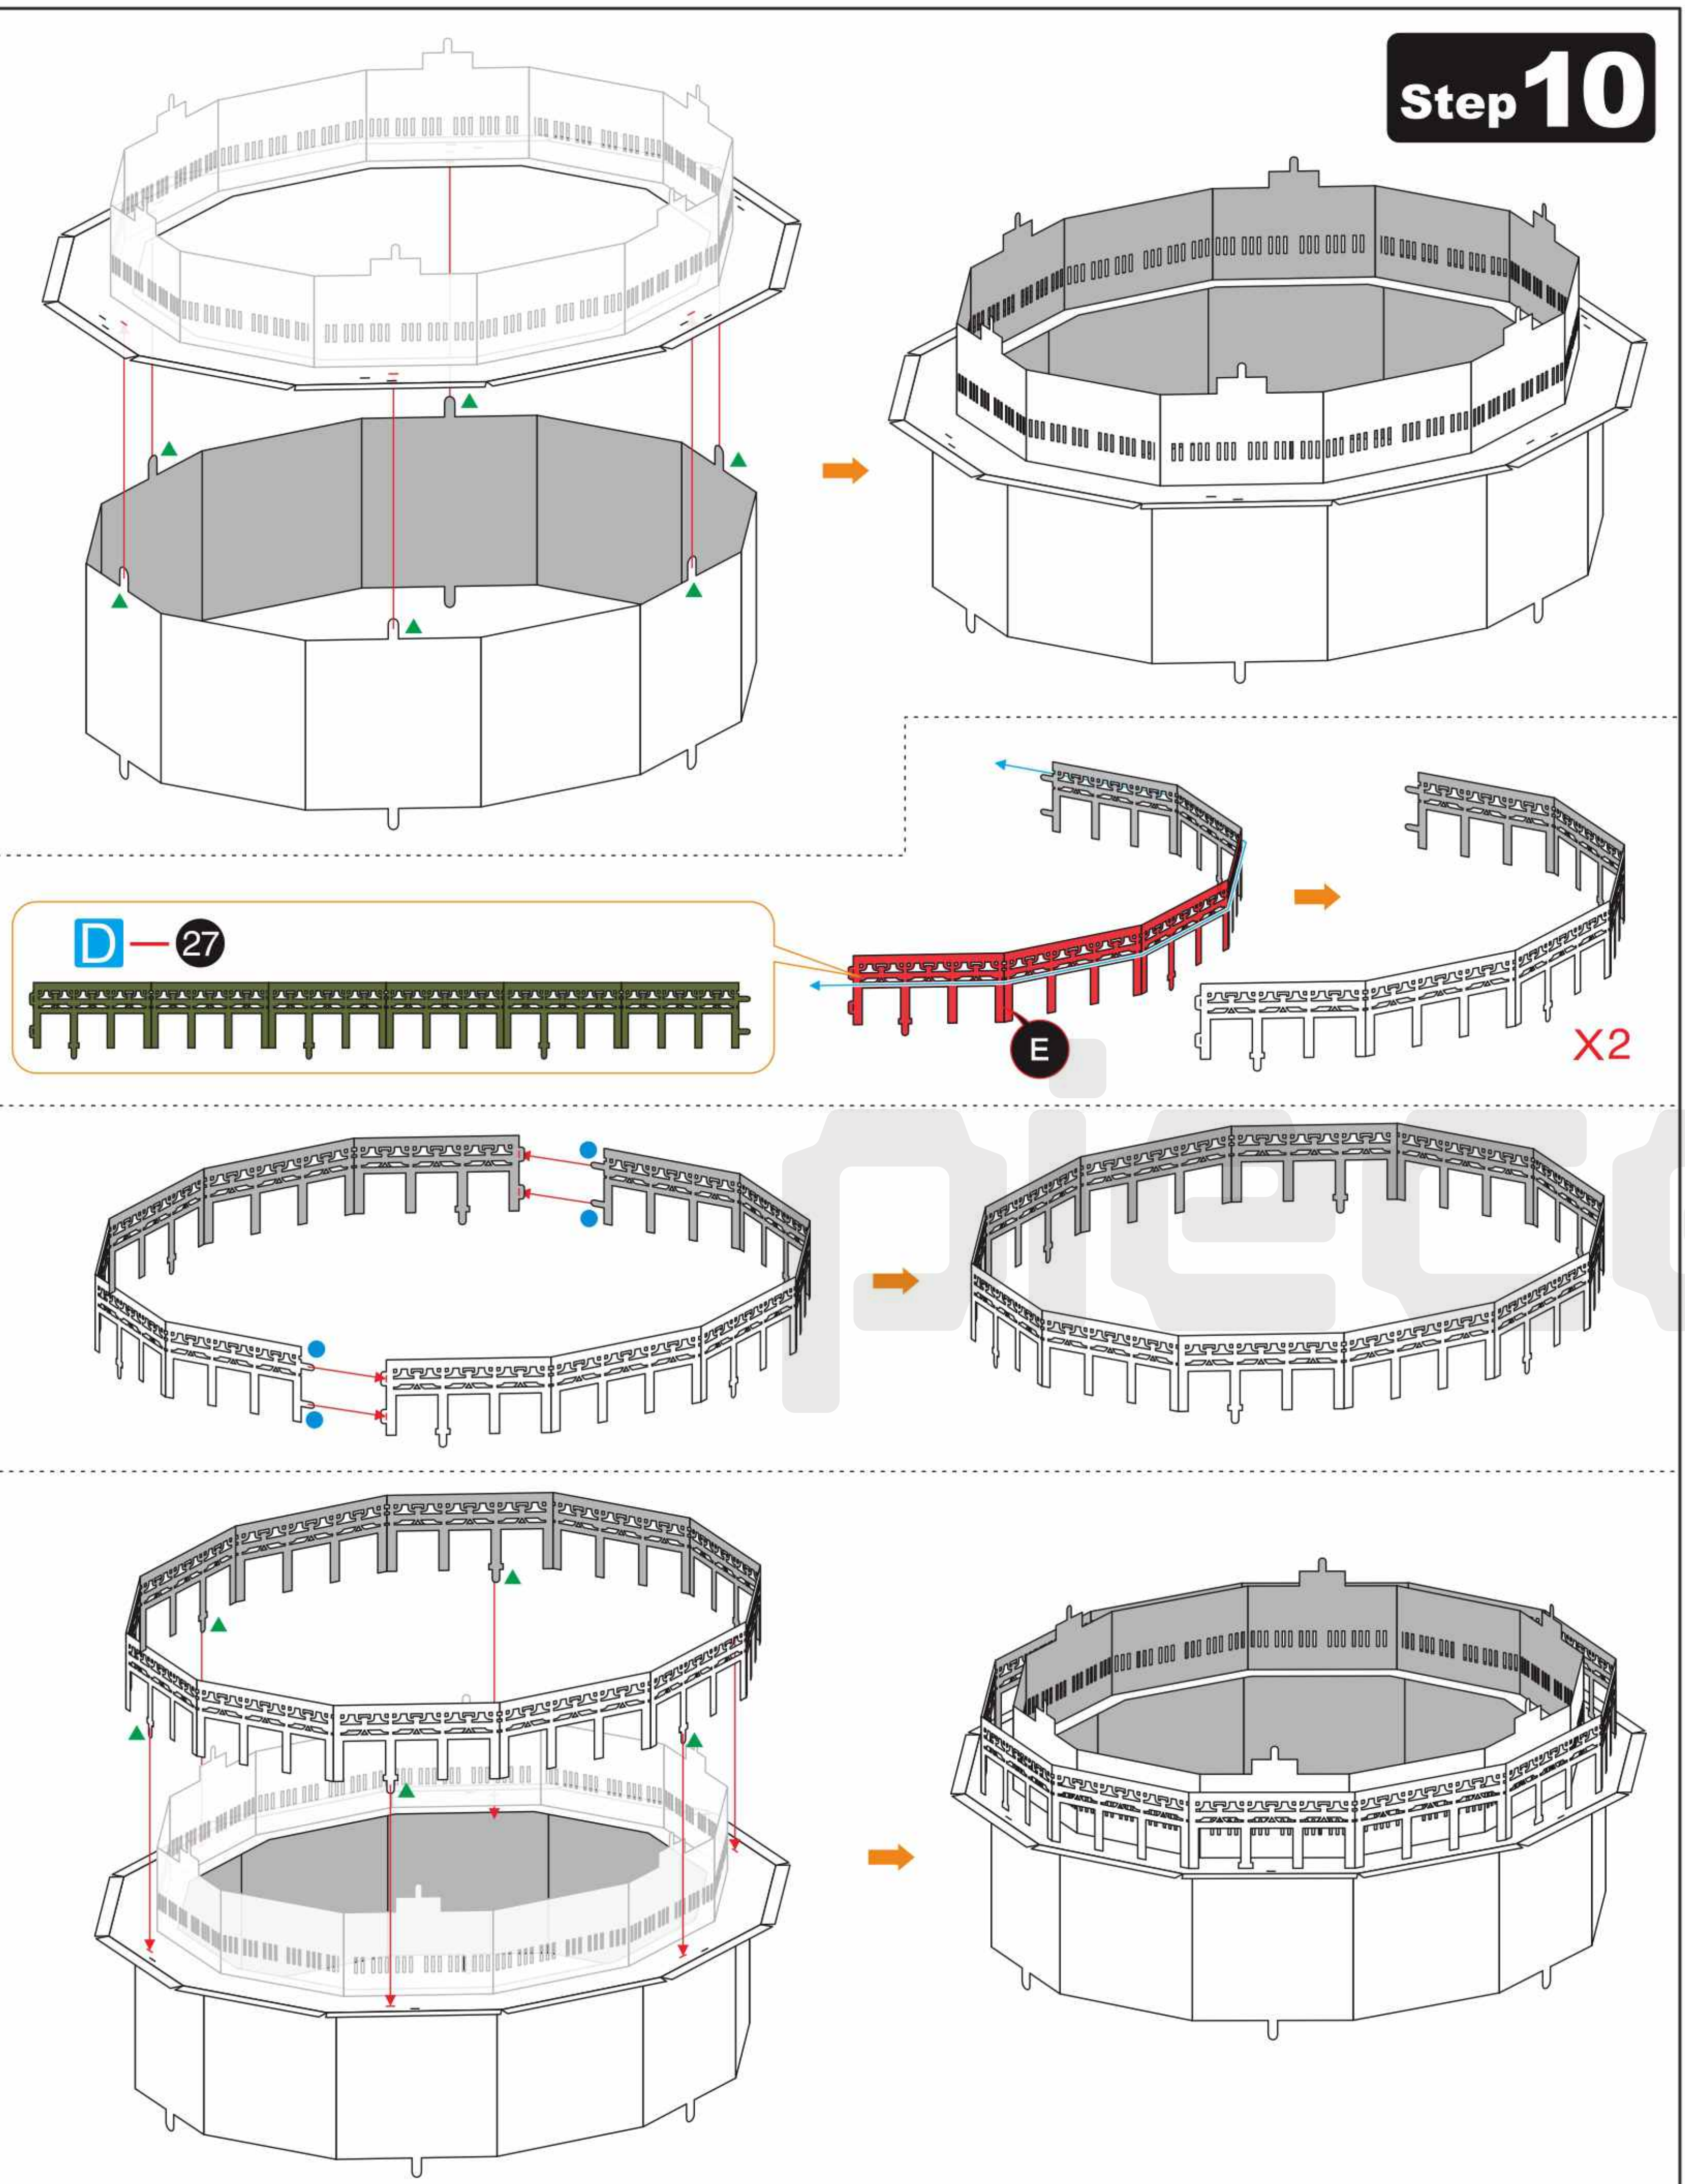


Step 12

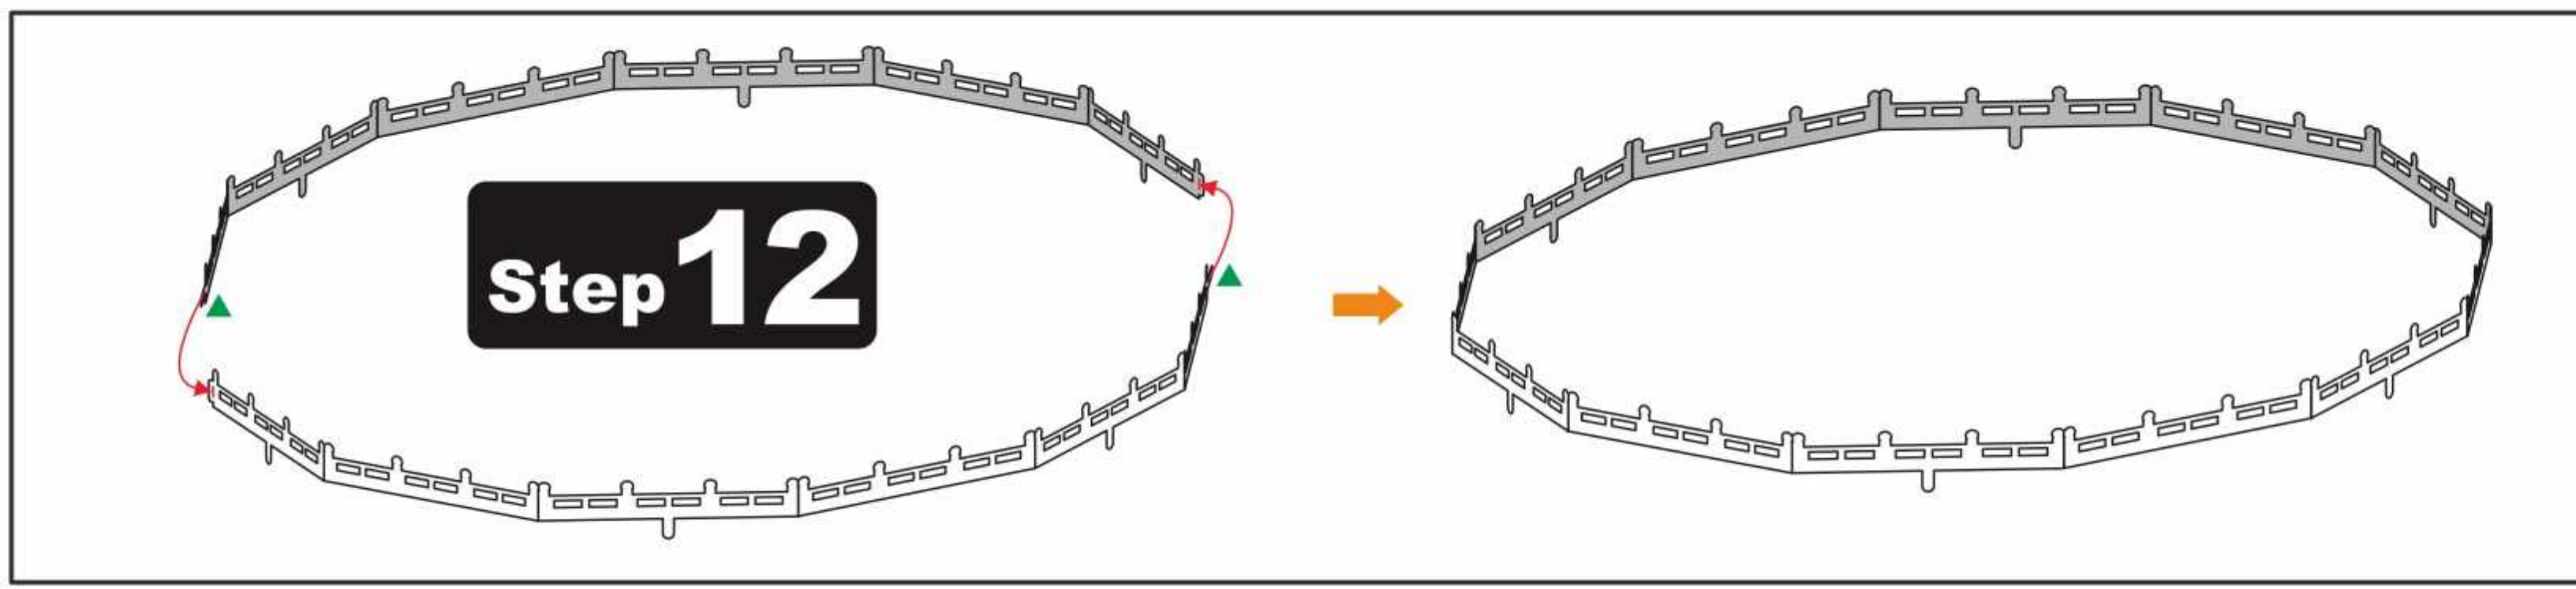


Step 13

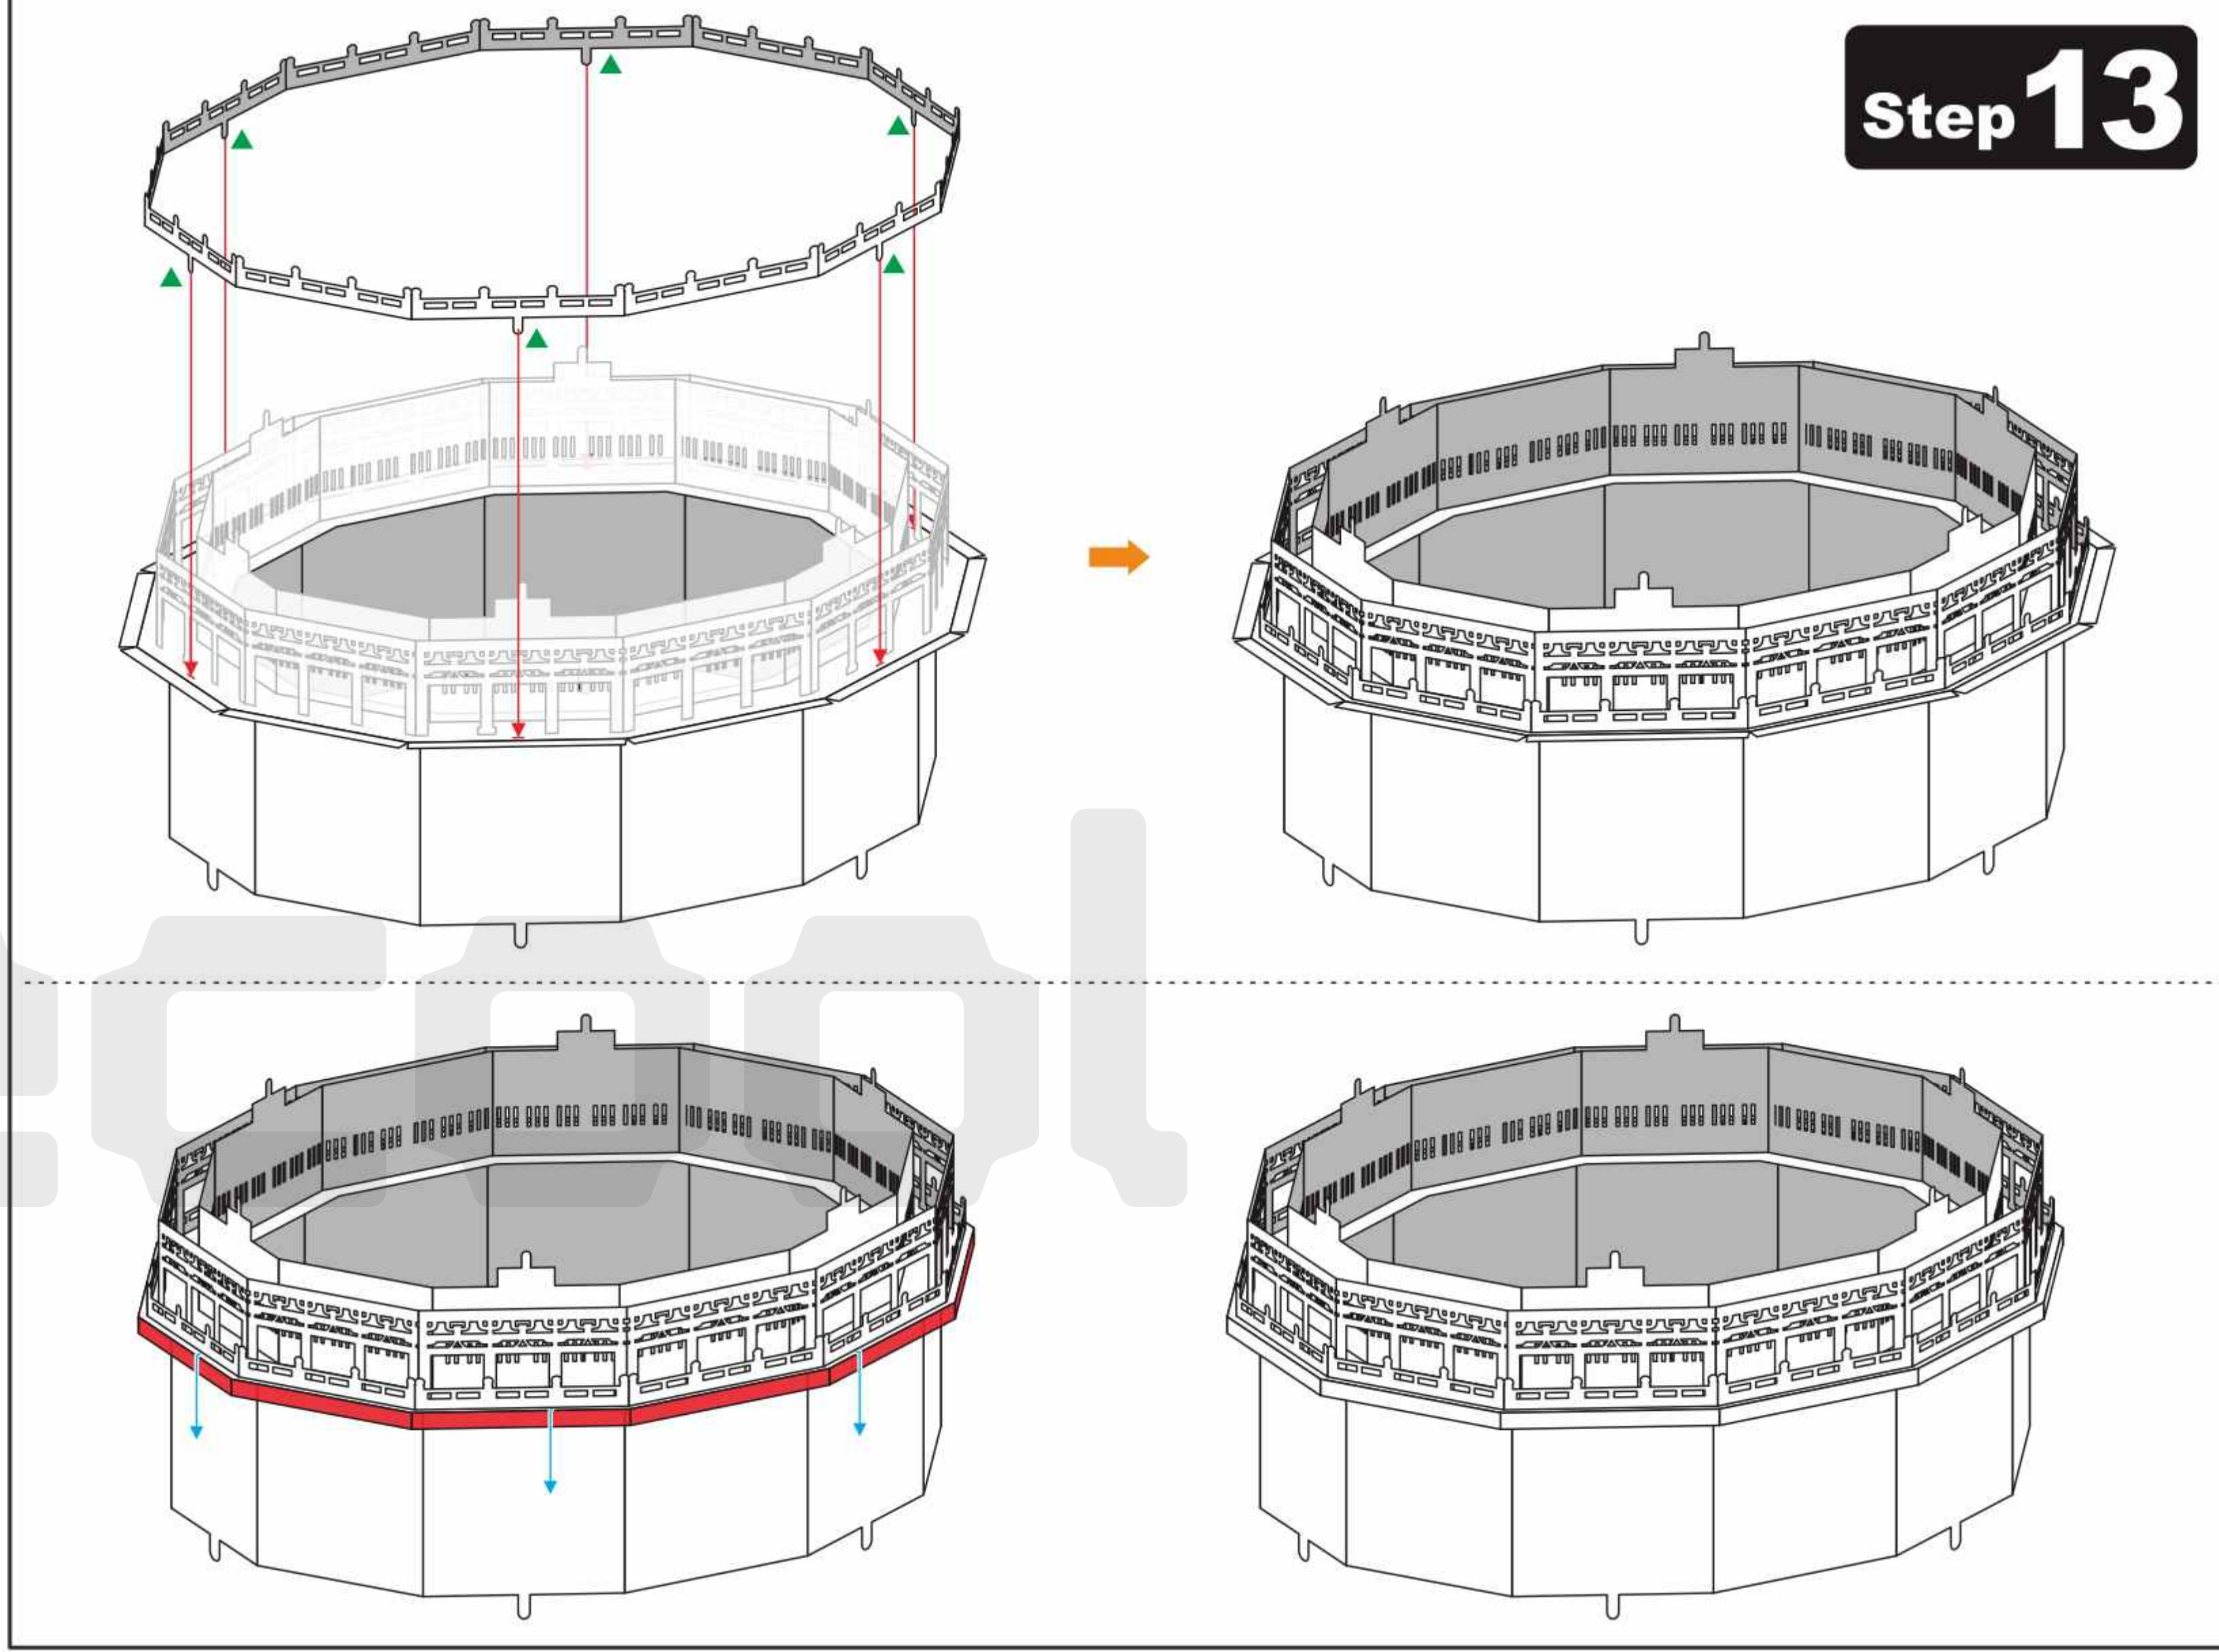


Step 14

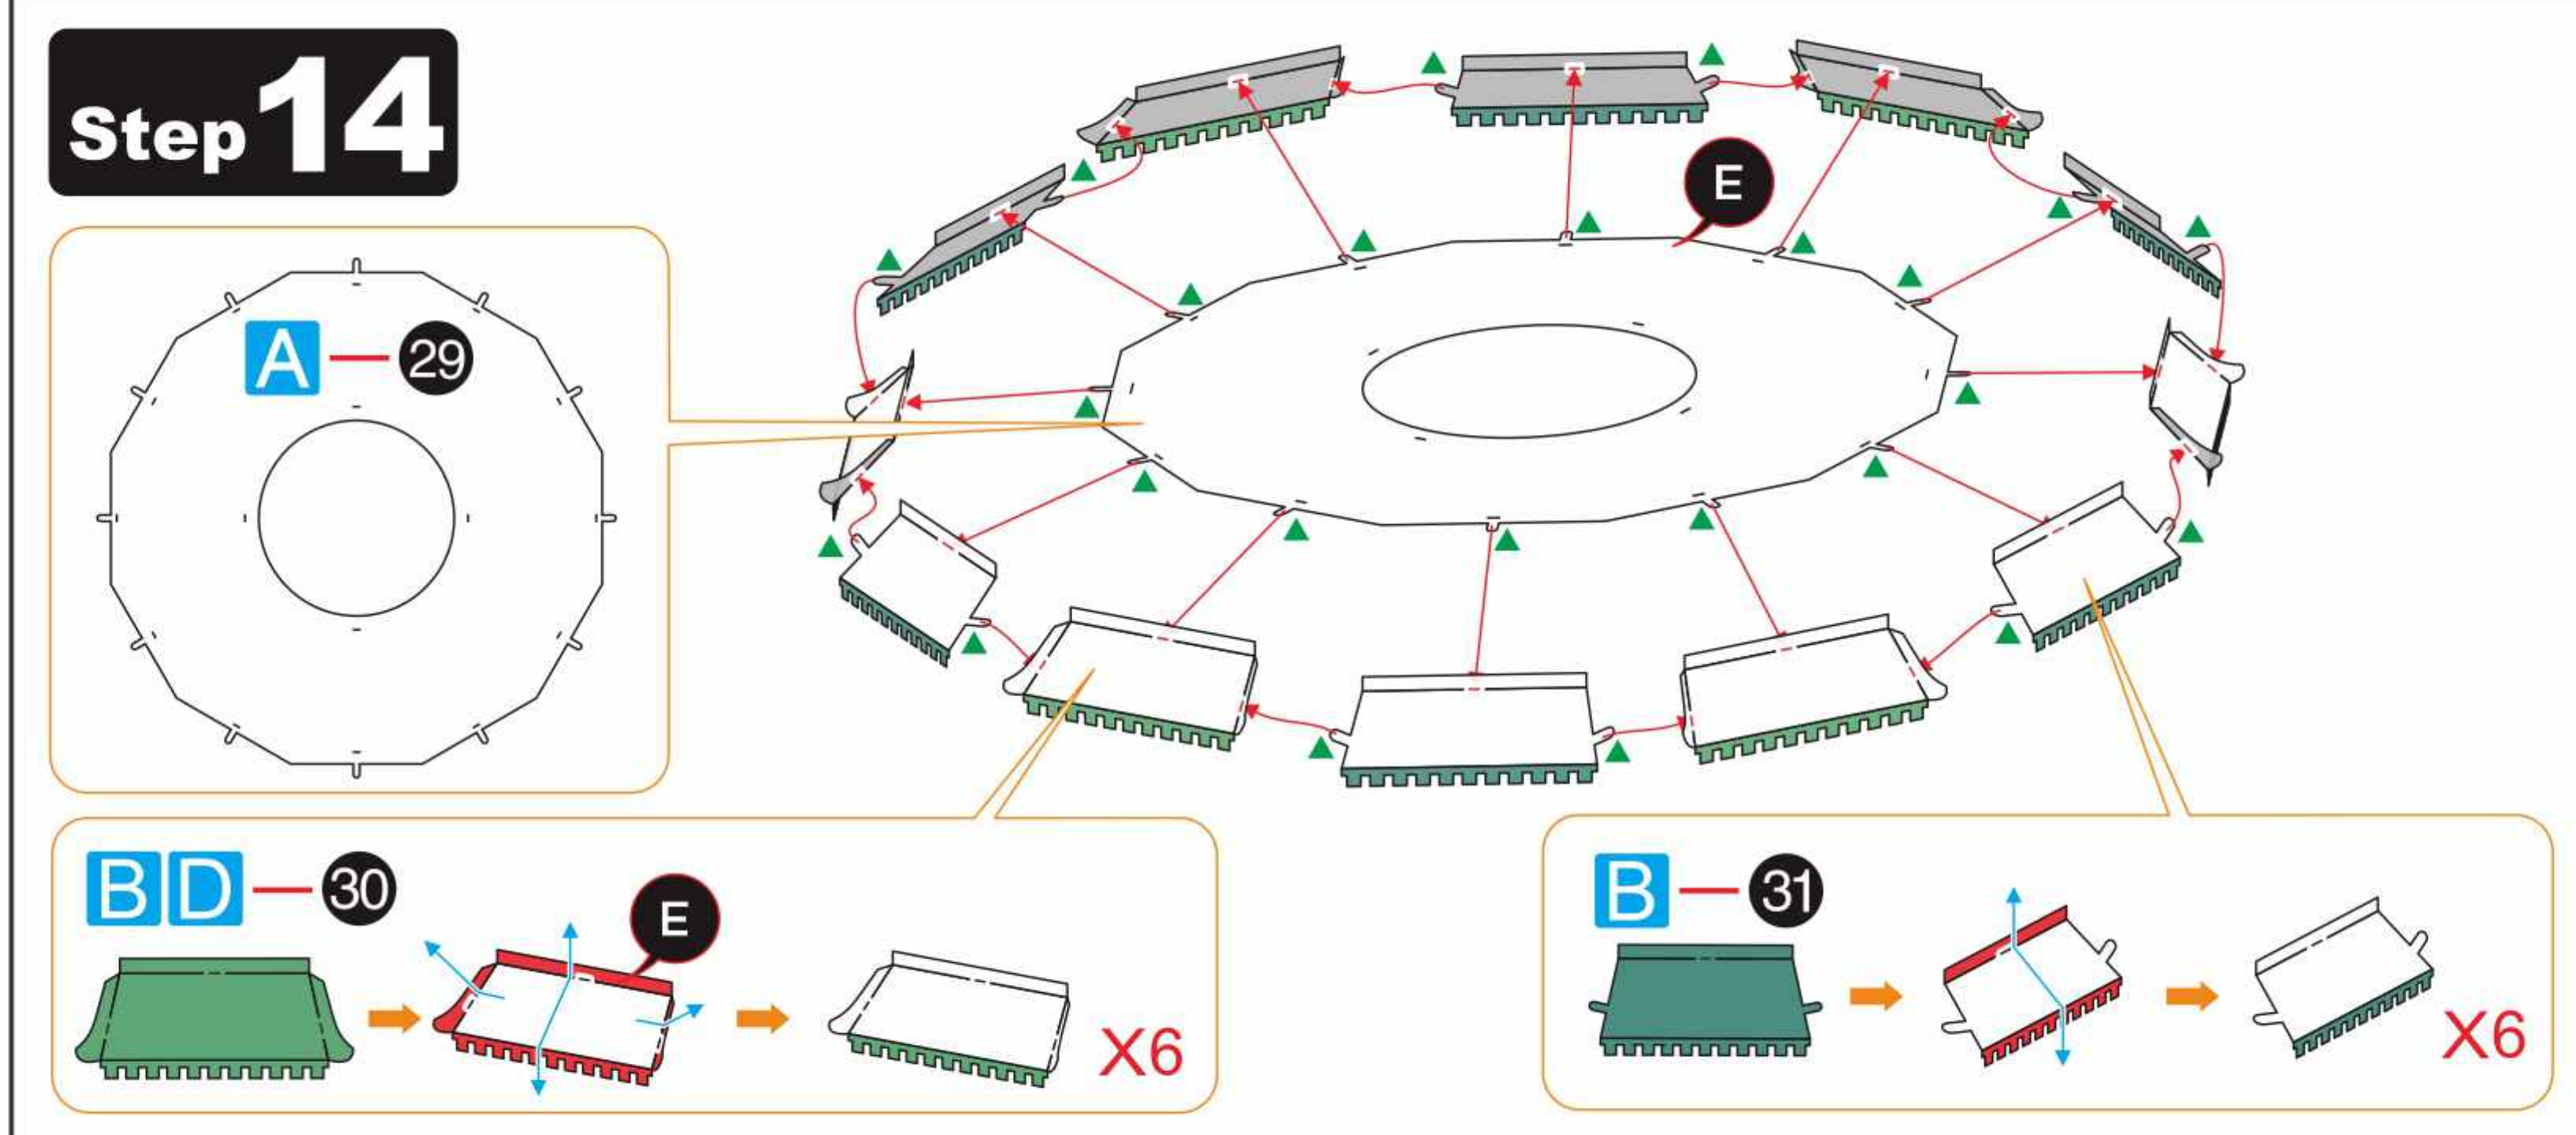


Step 11

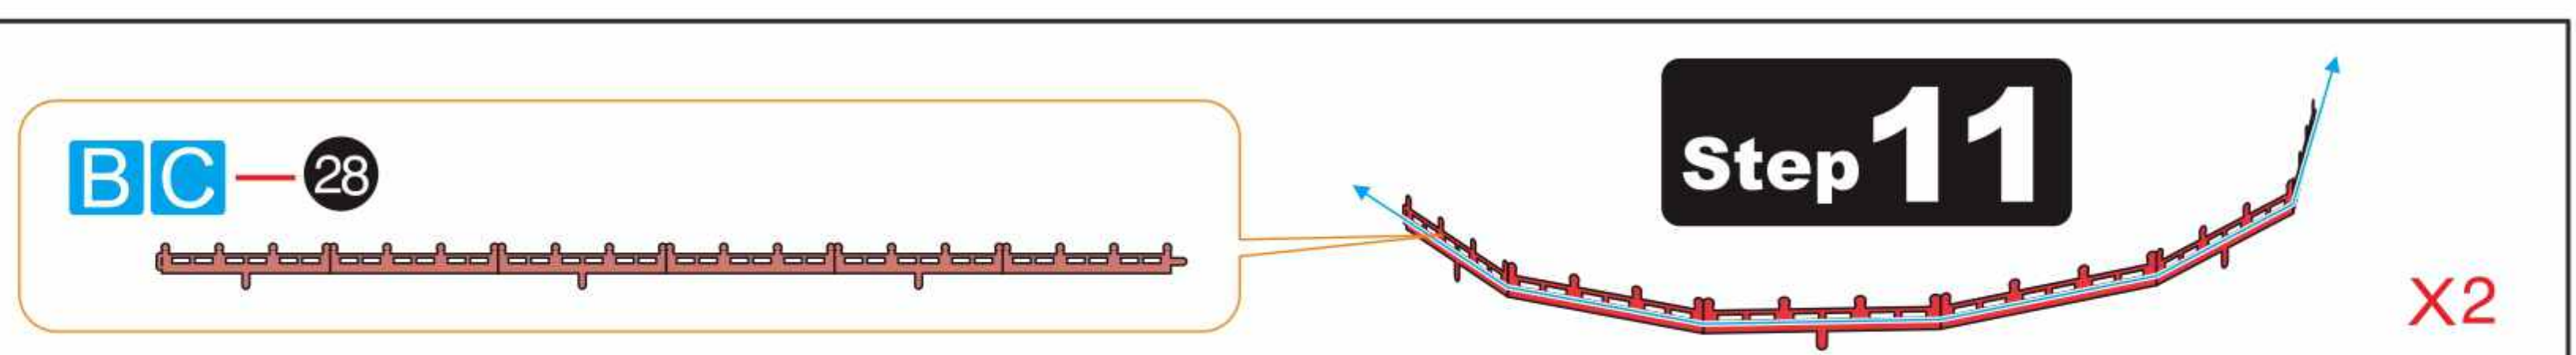


Step 15

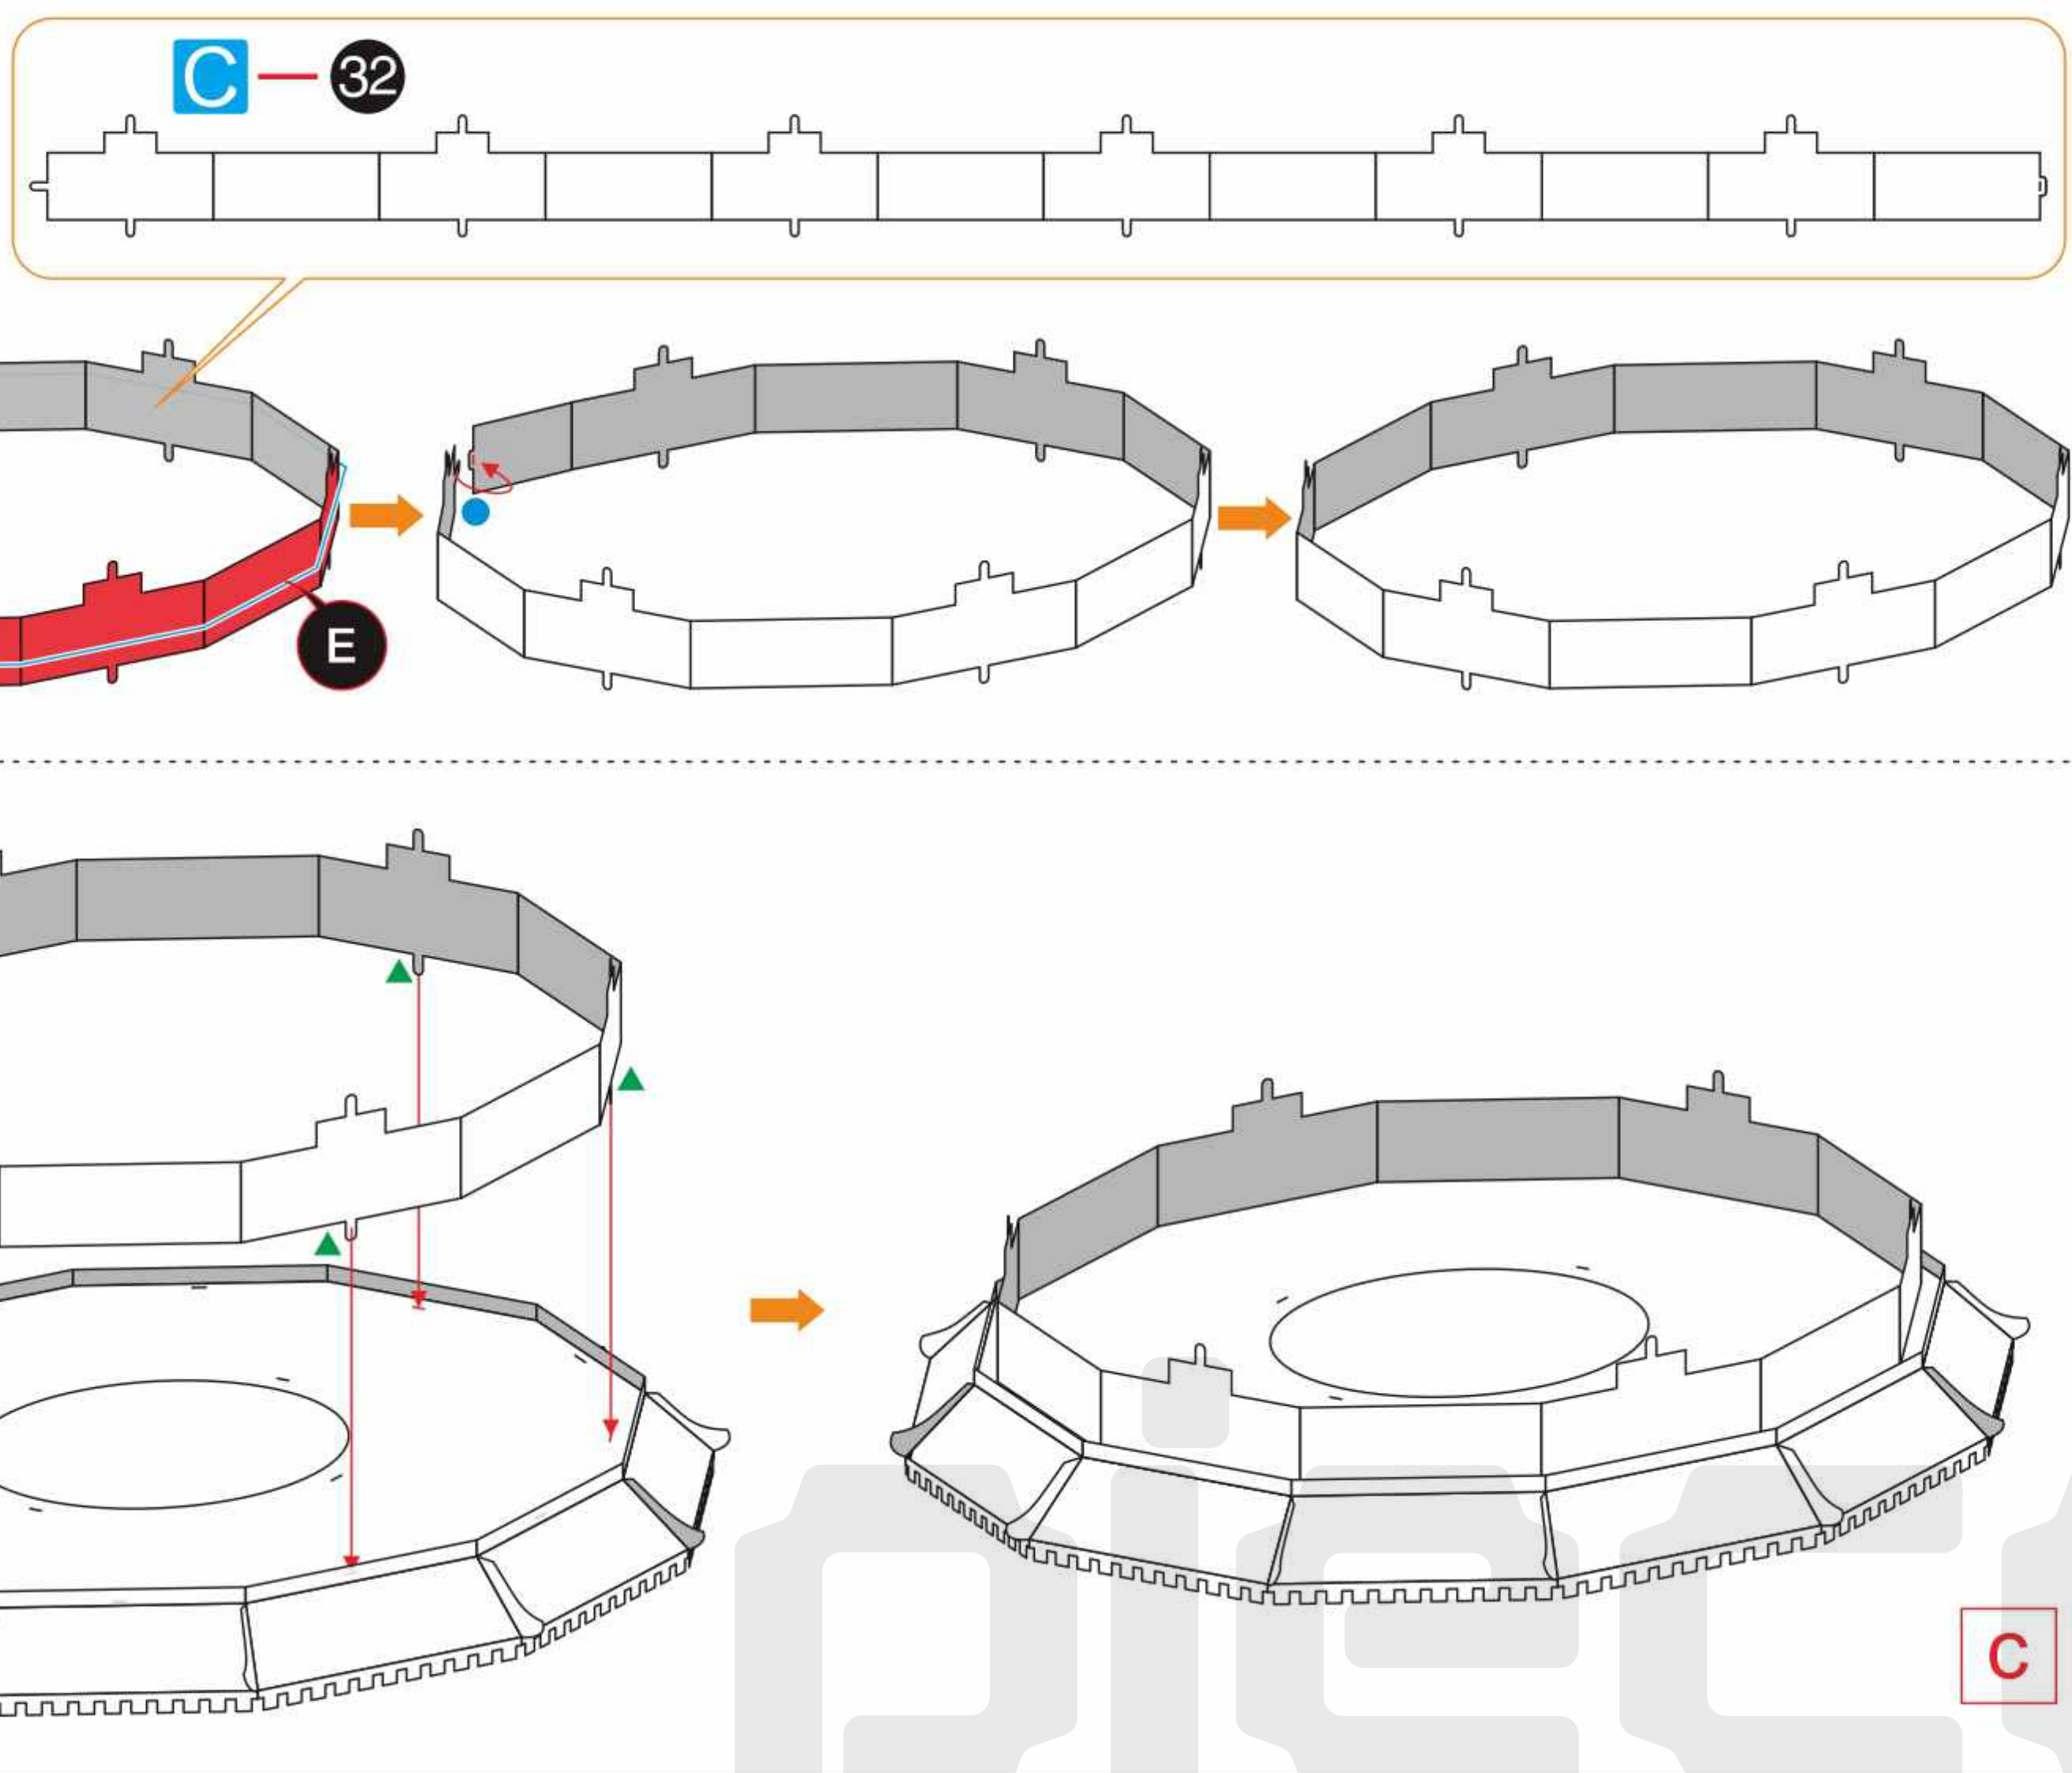


Step 16

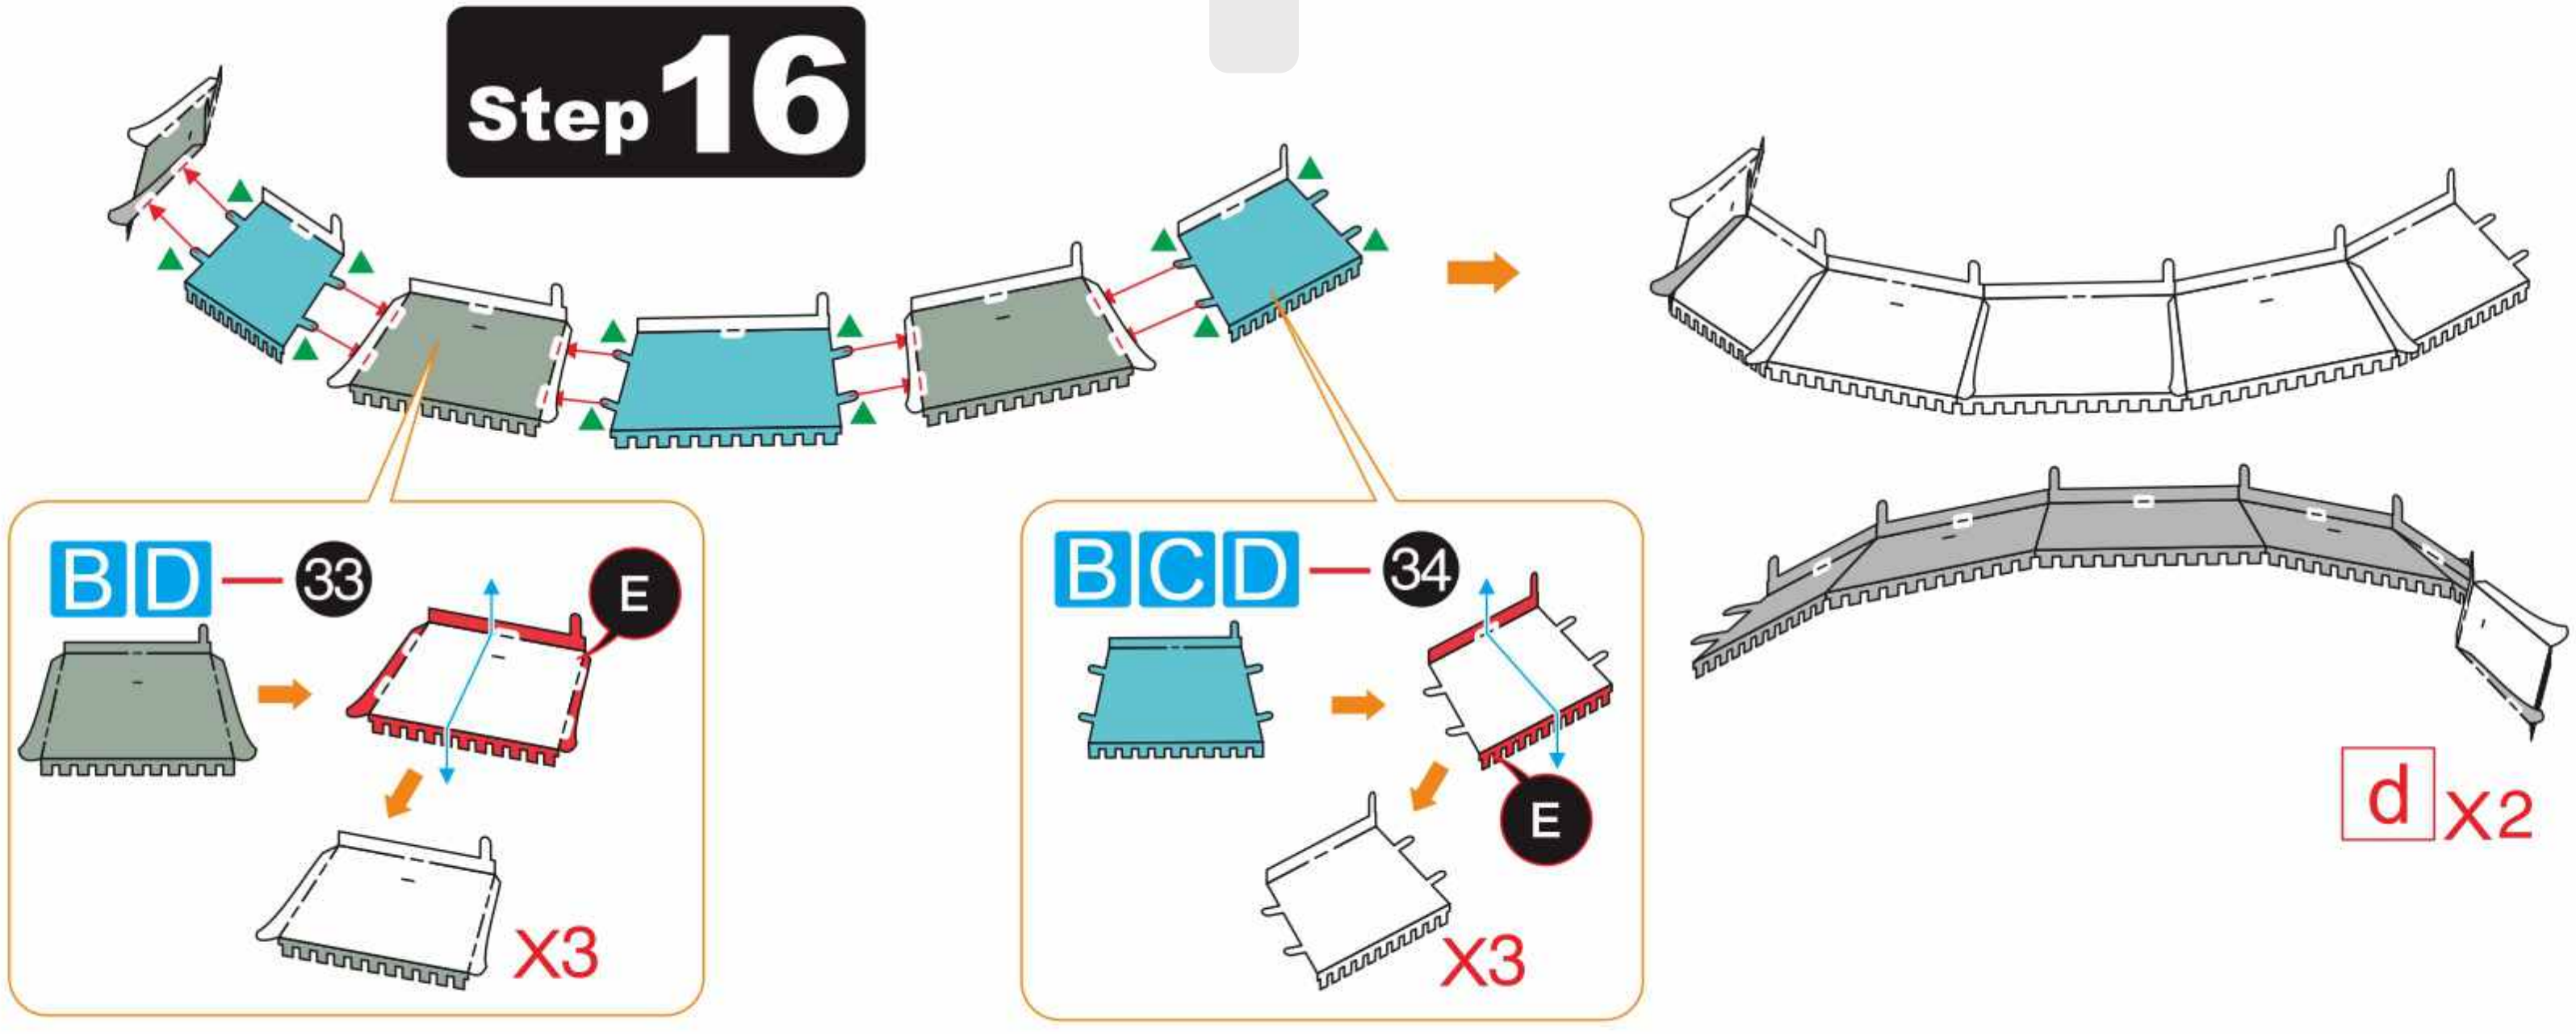


Step 17

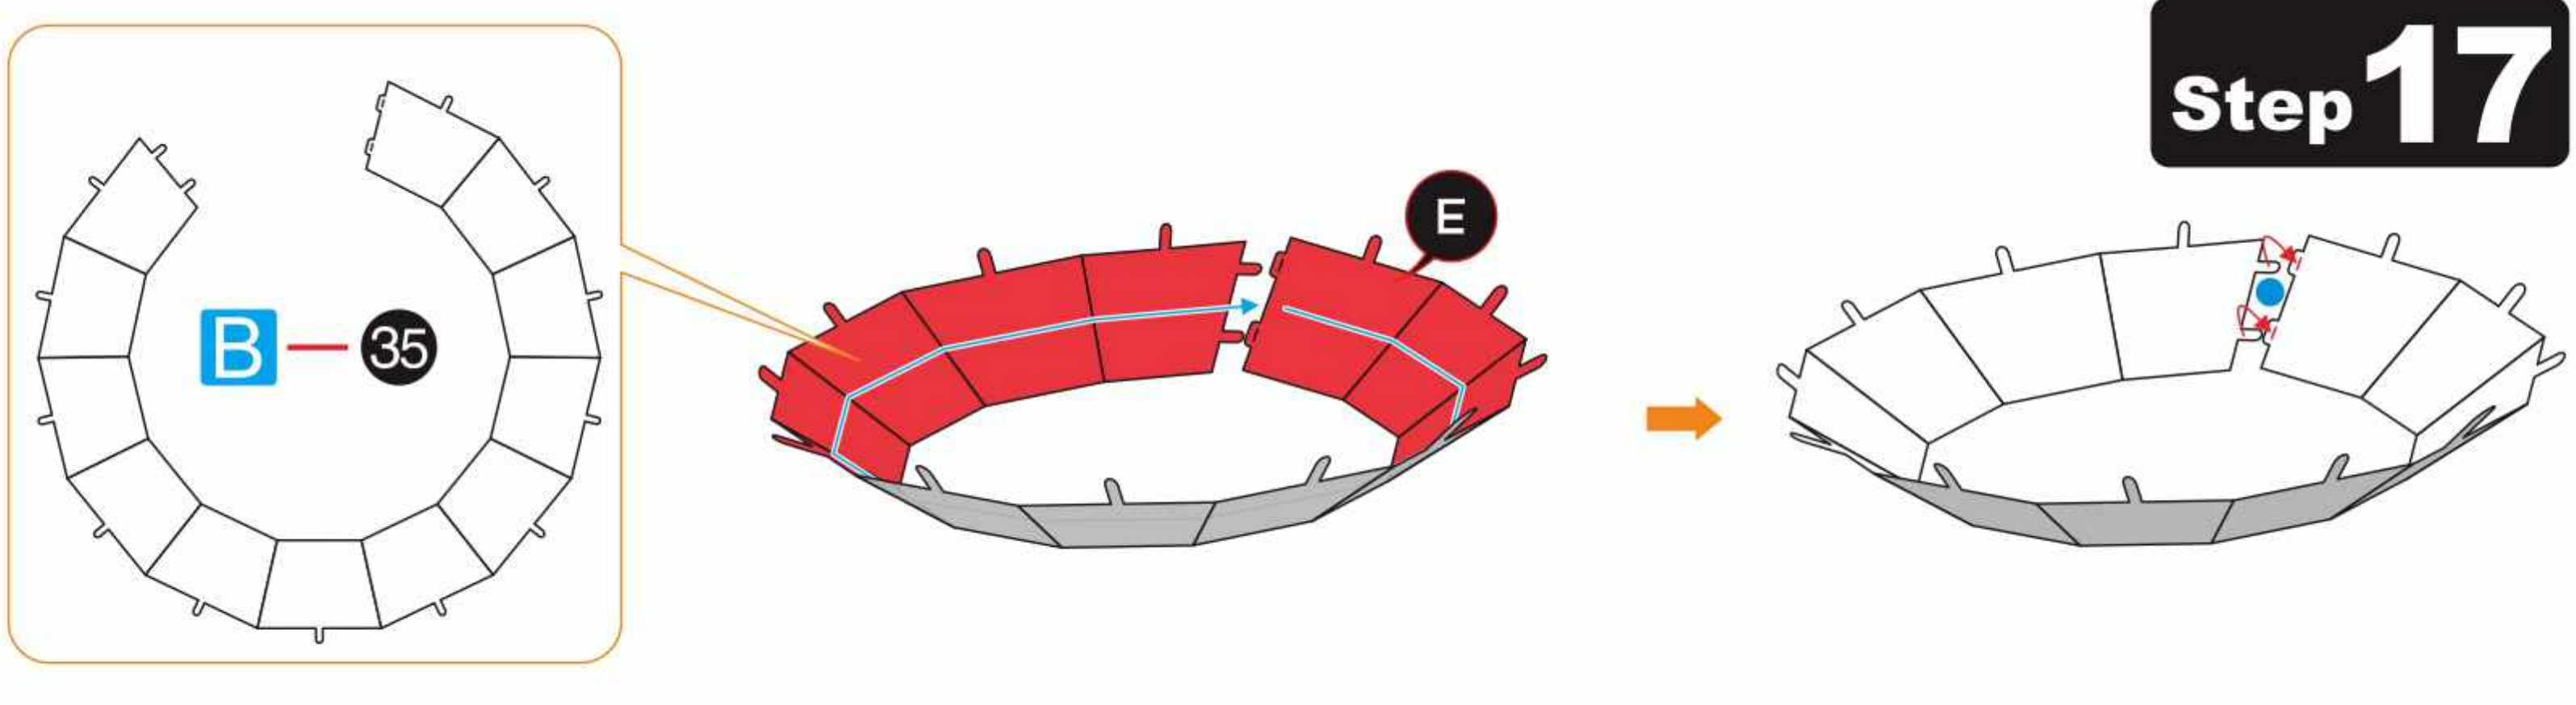

Step 18

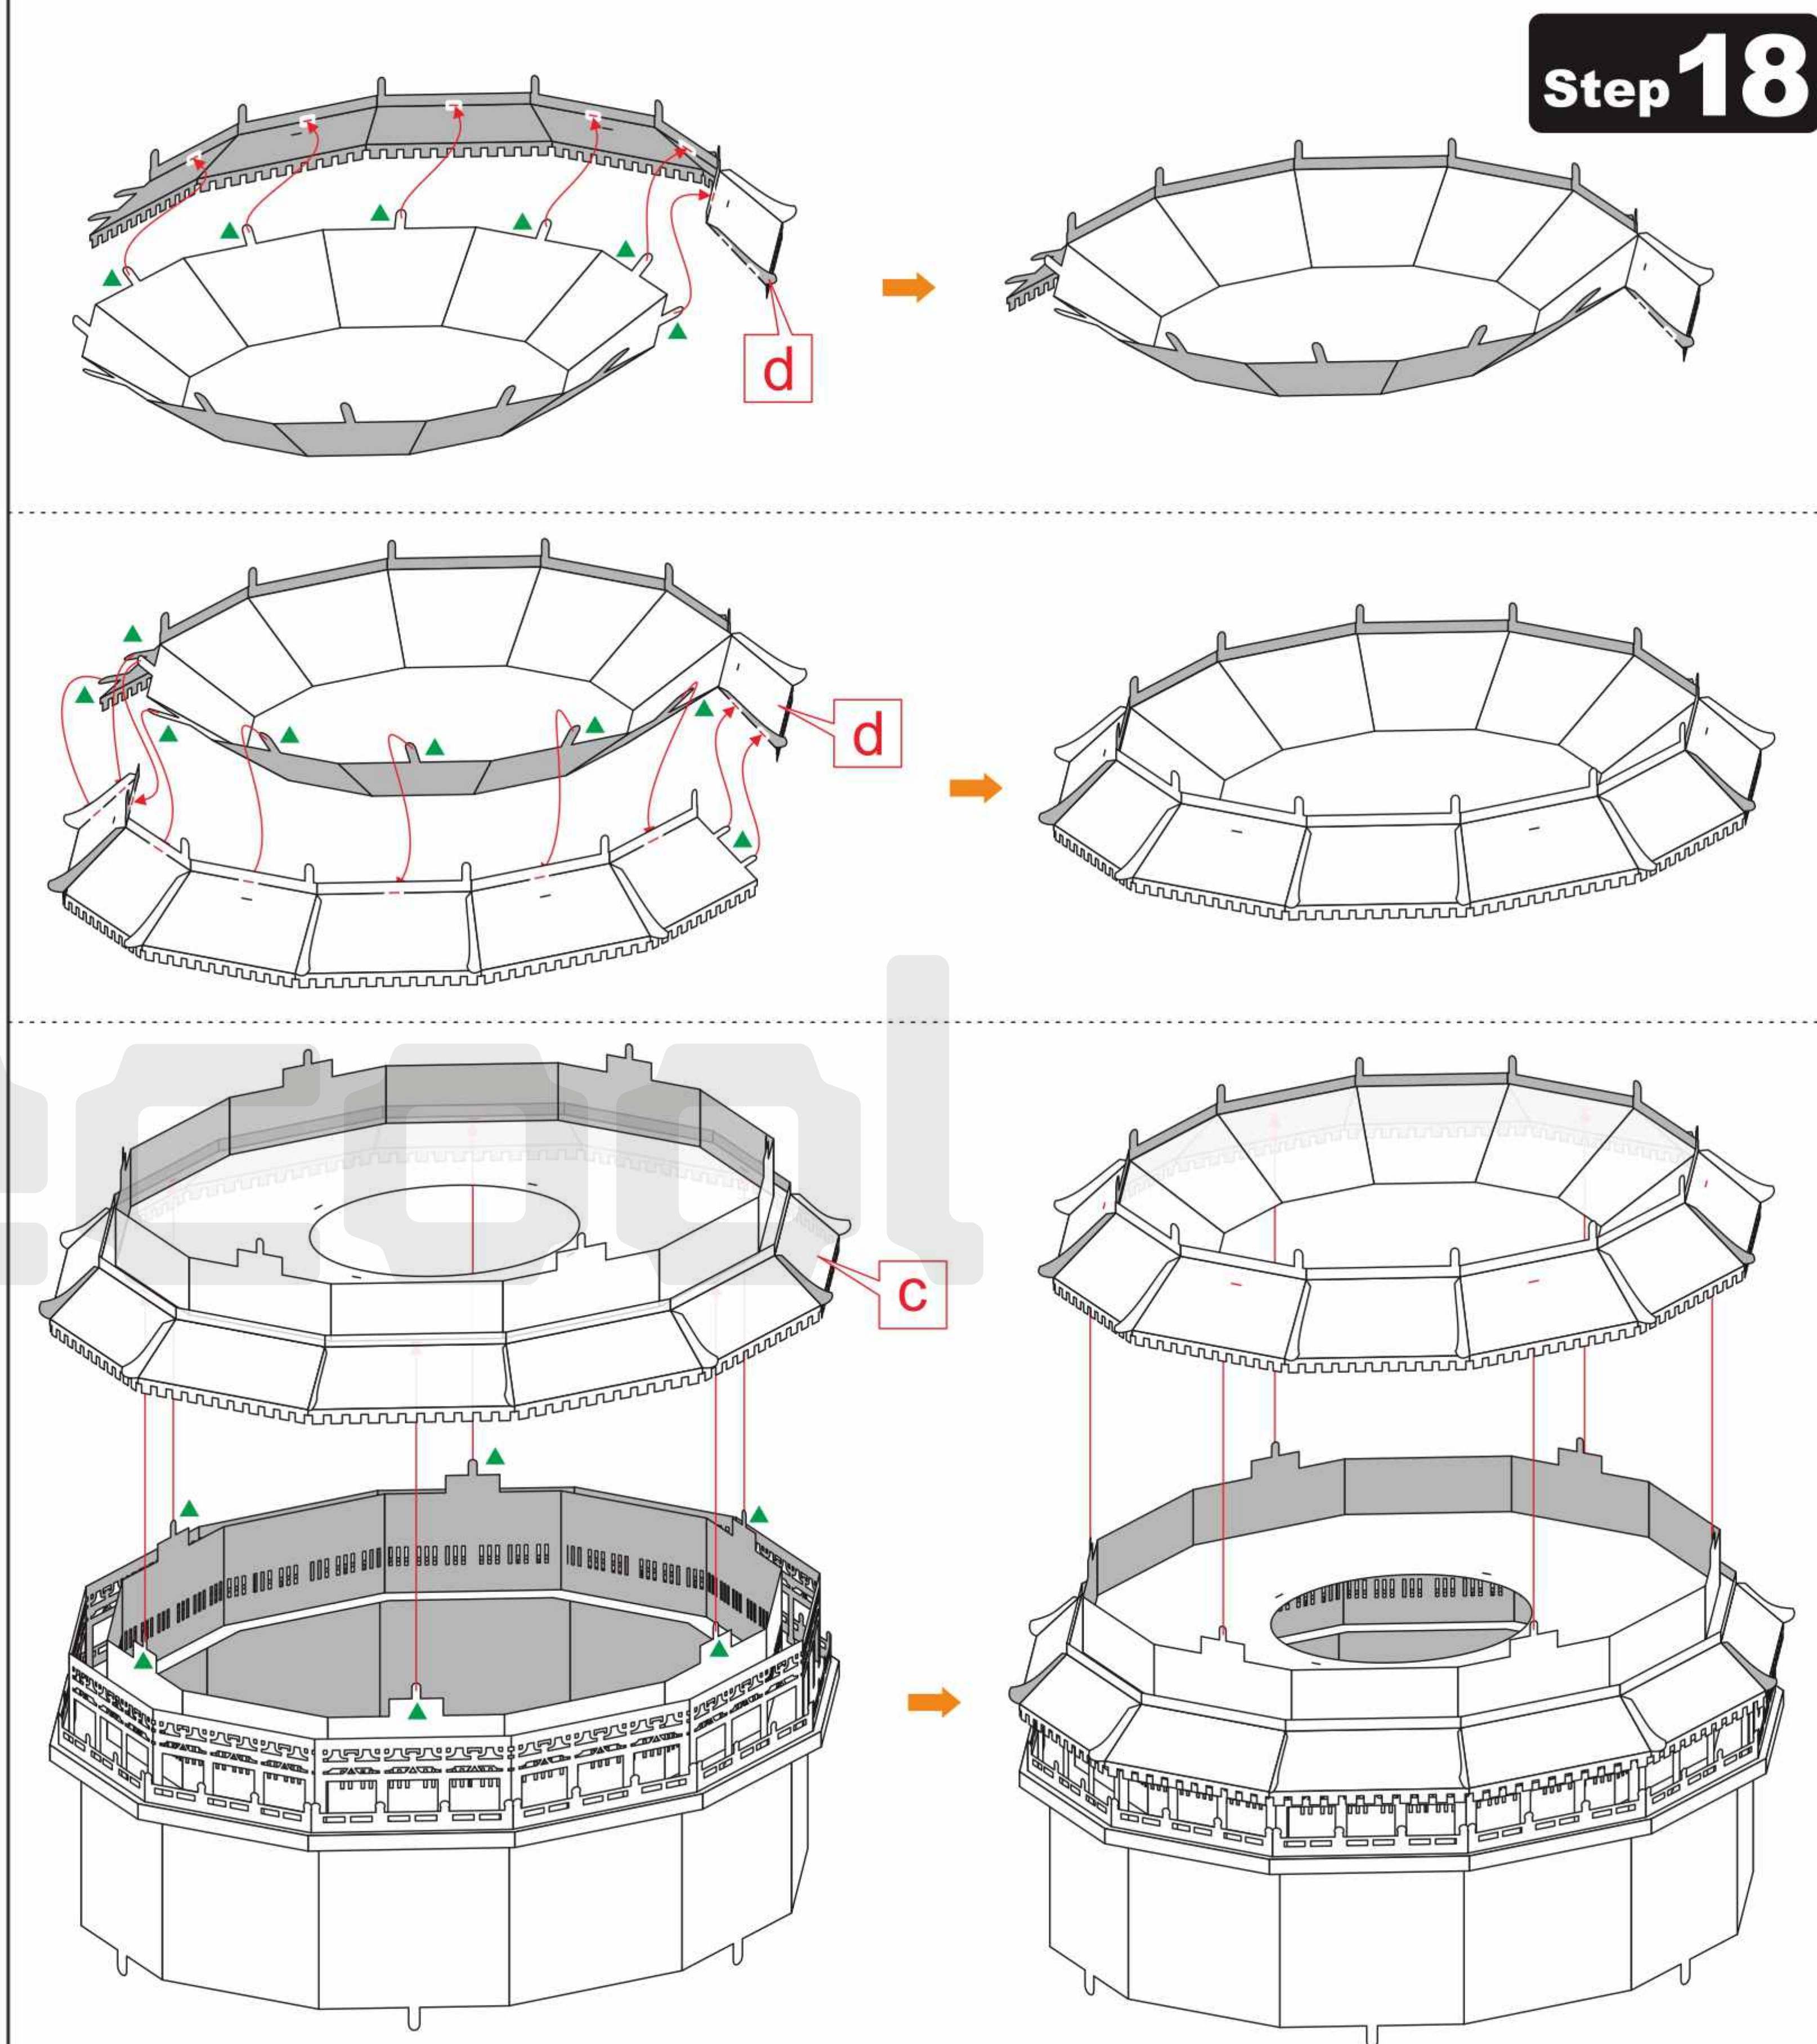


Step 19



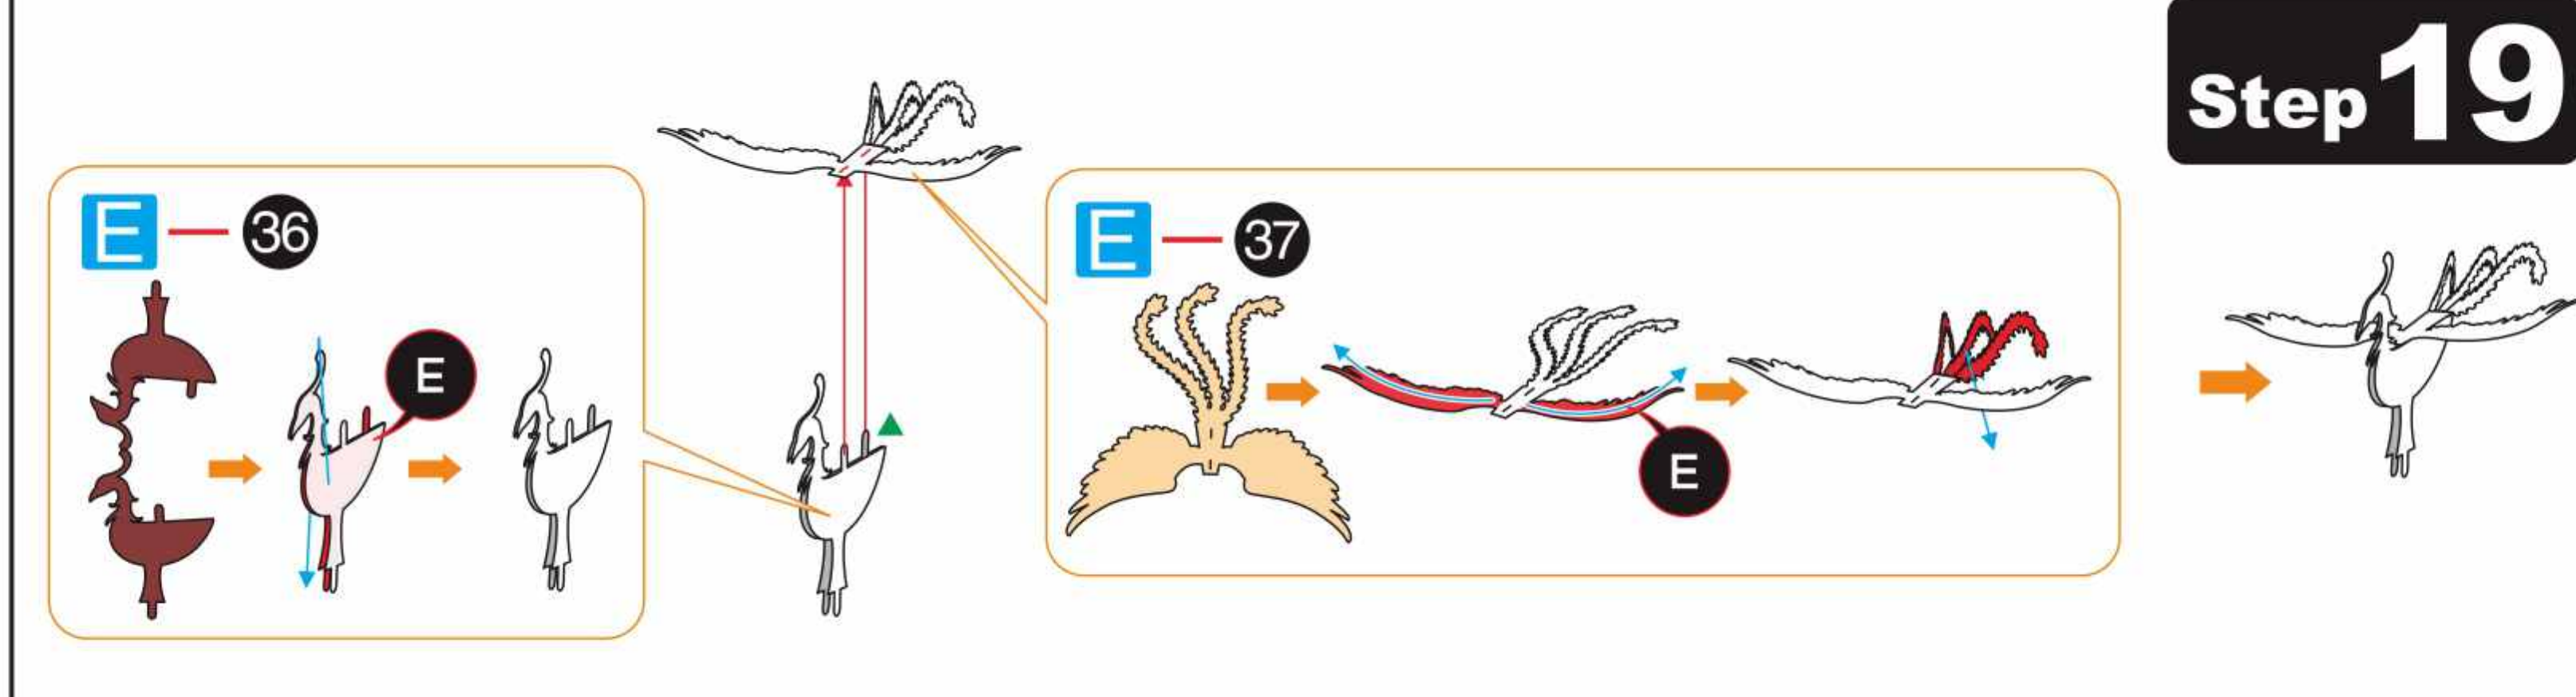


9 10
11 12



Step 20

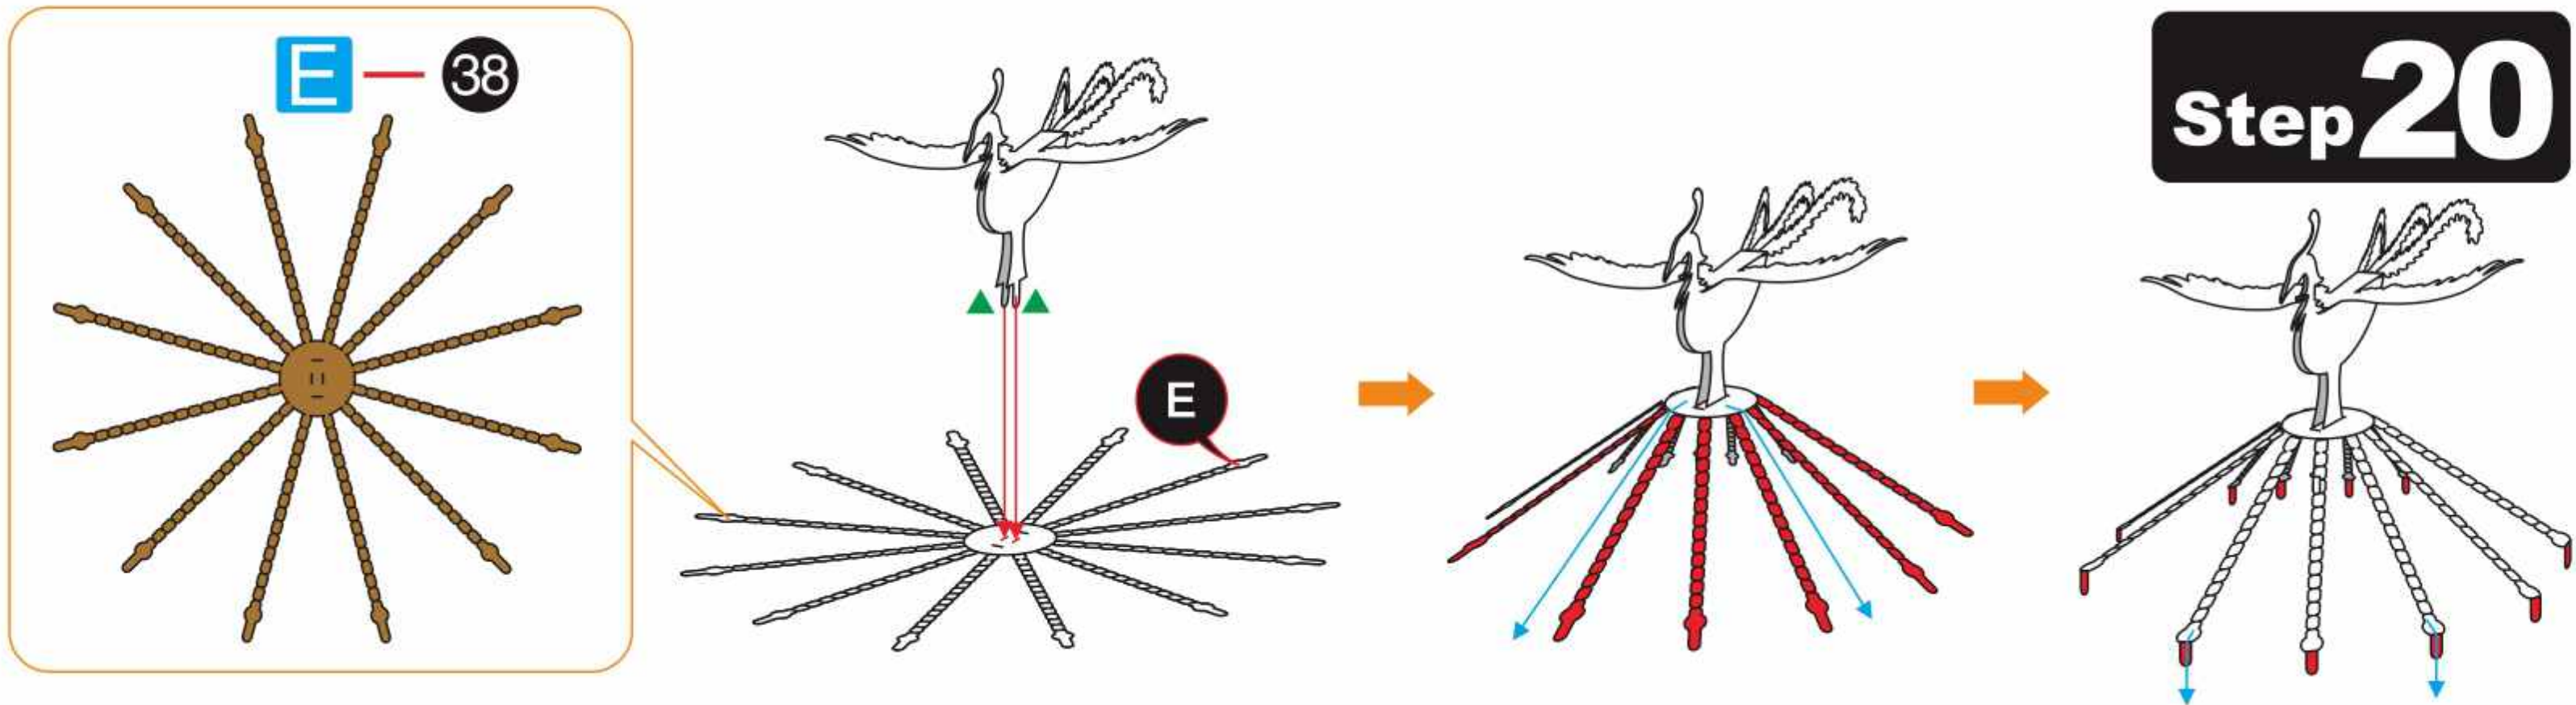


Step 21

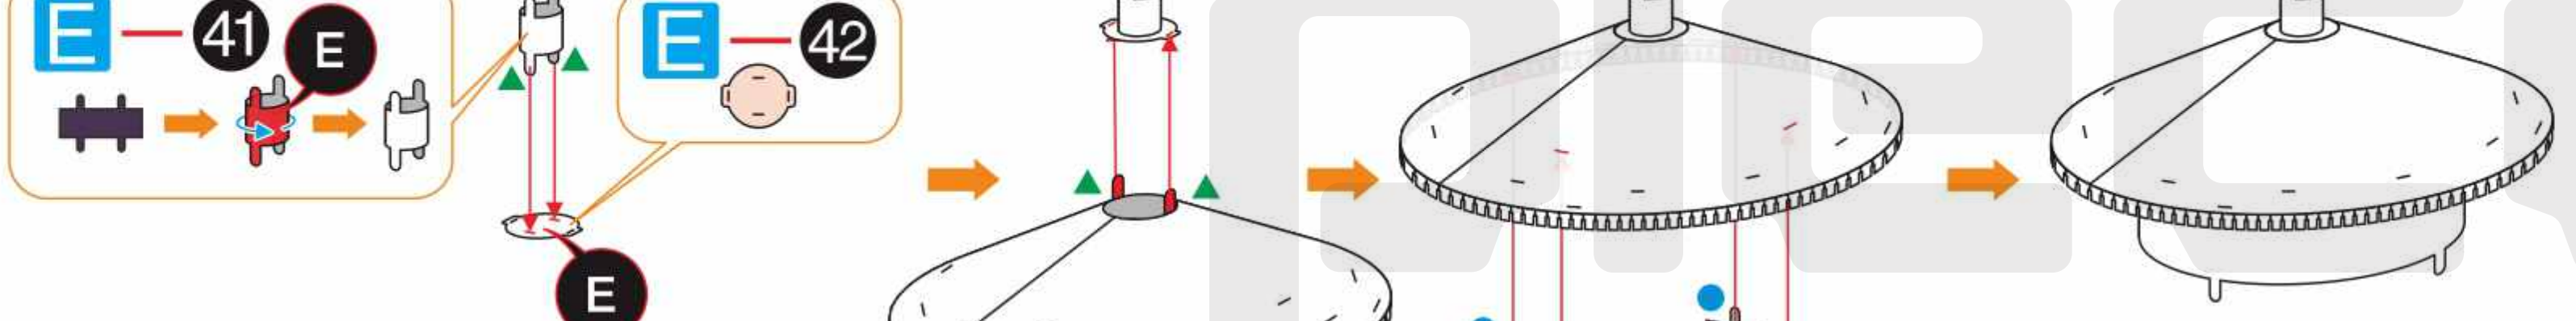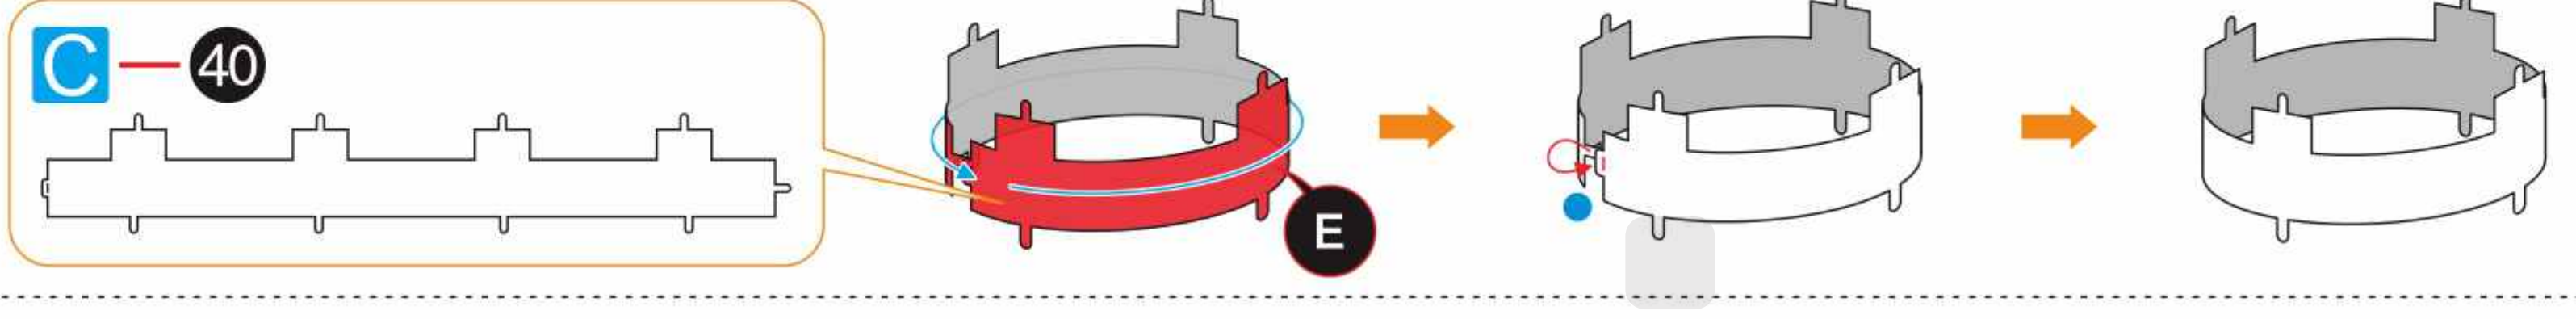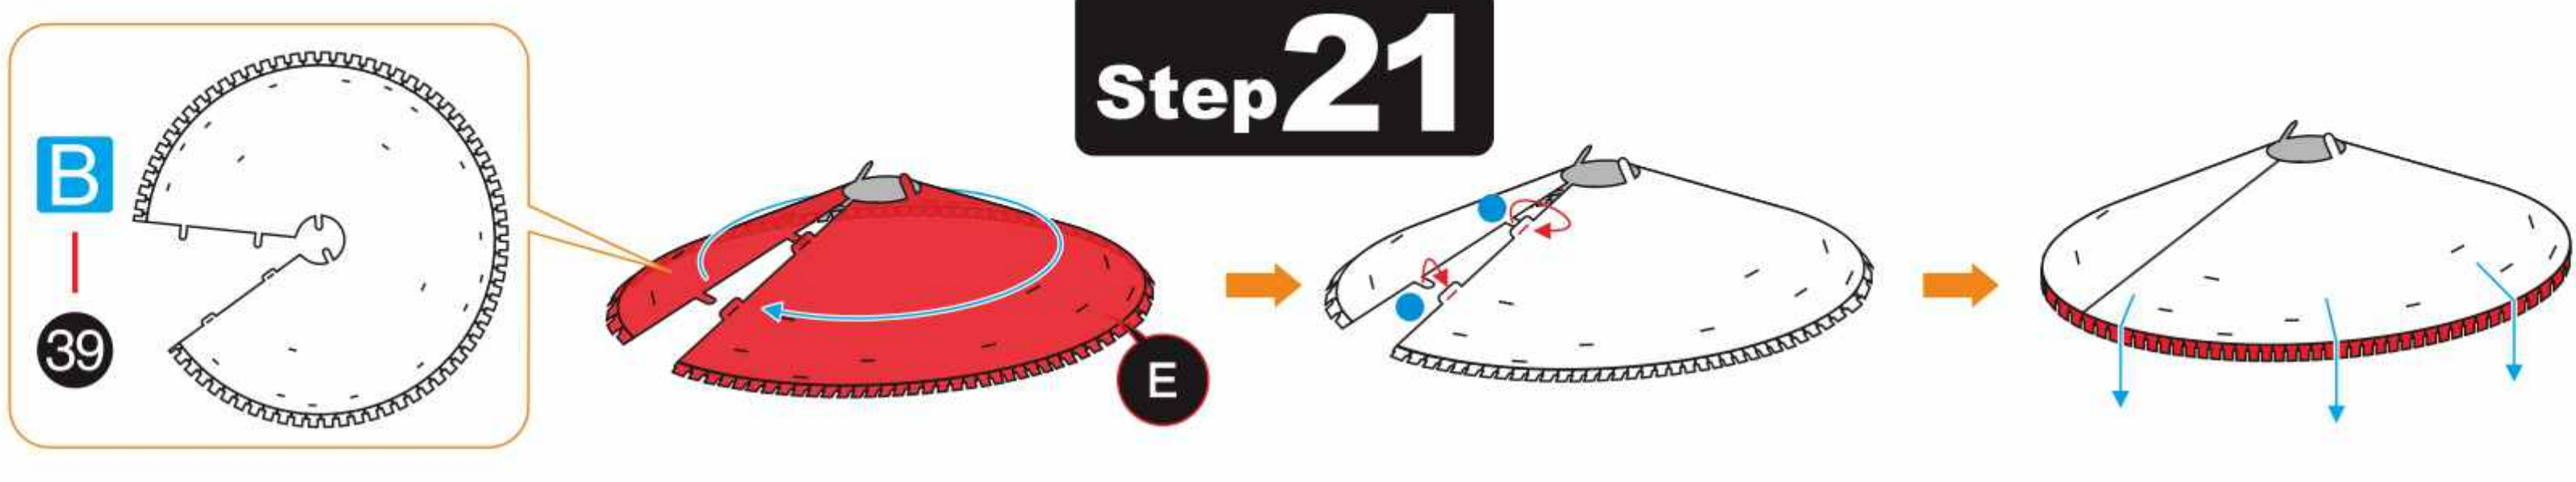


Step 22

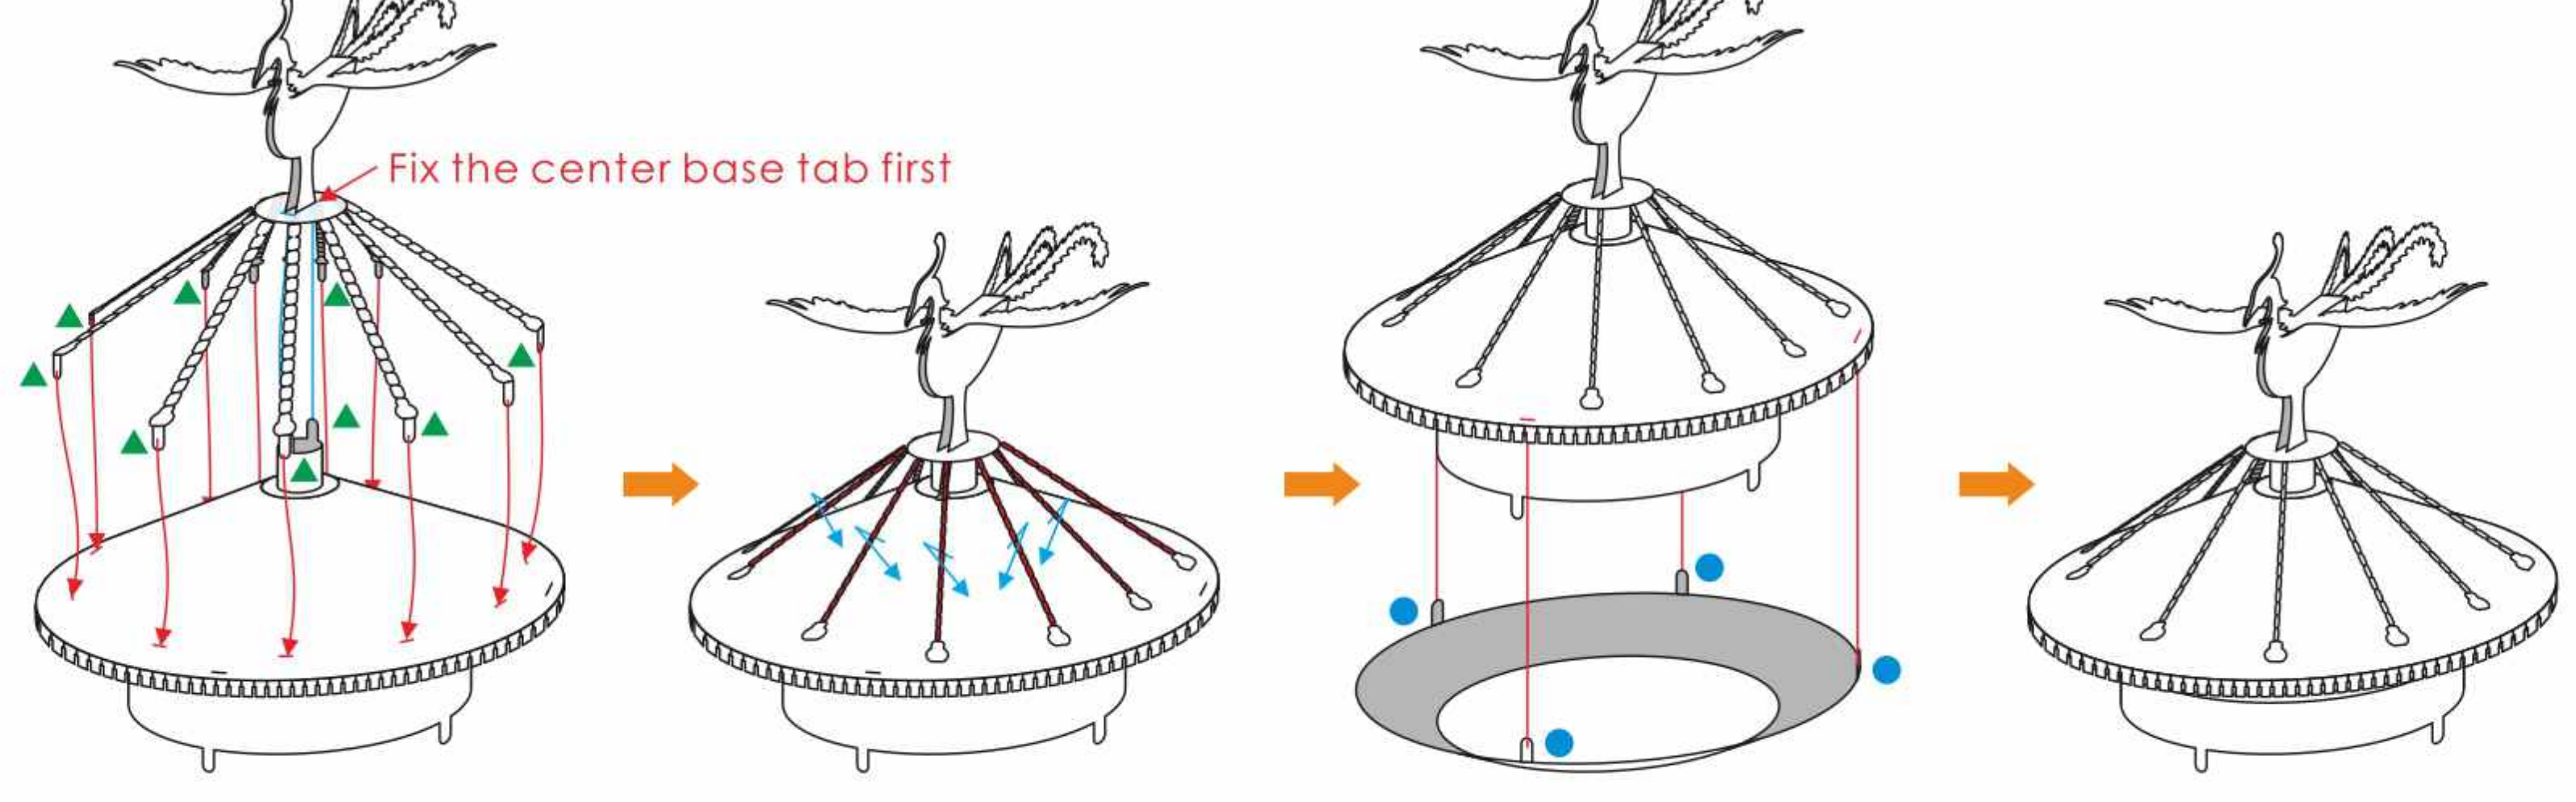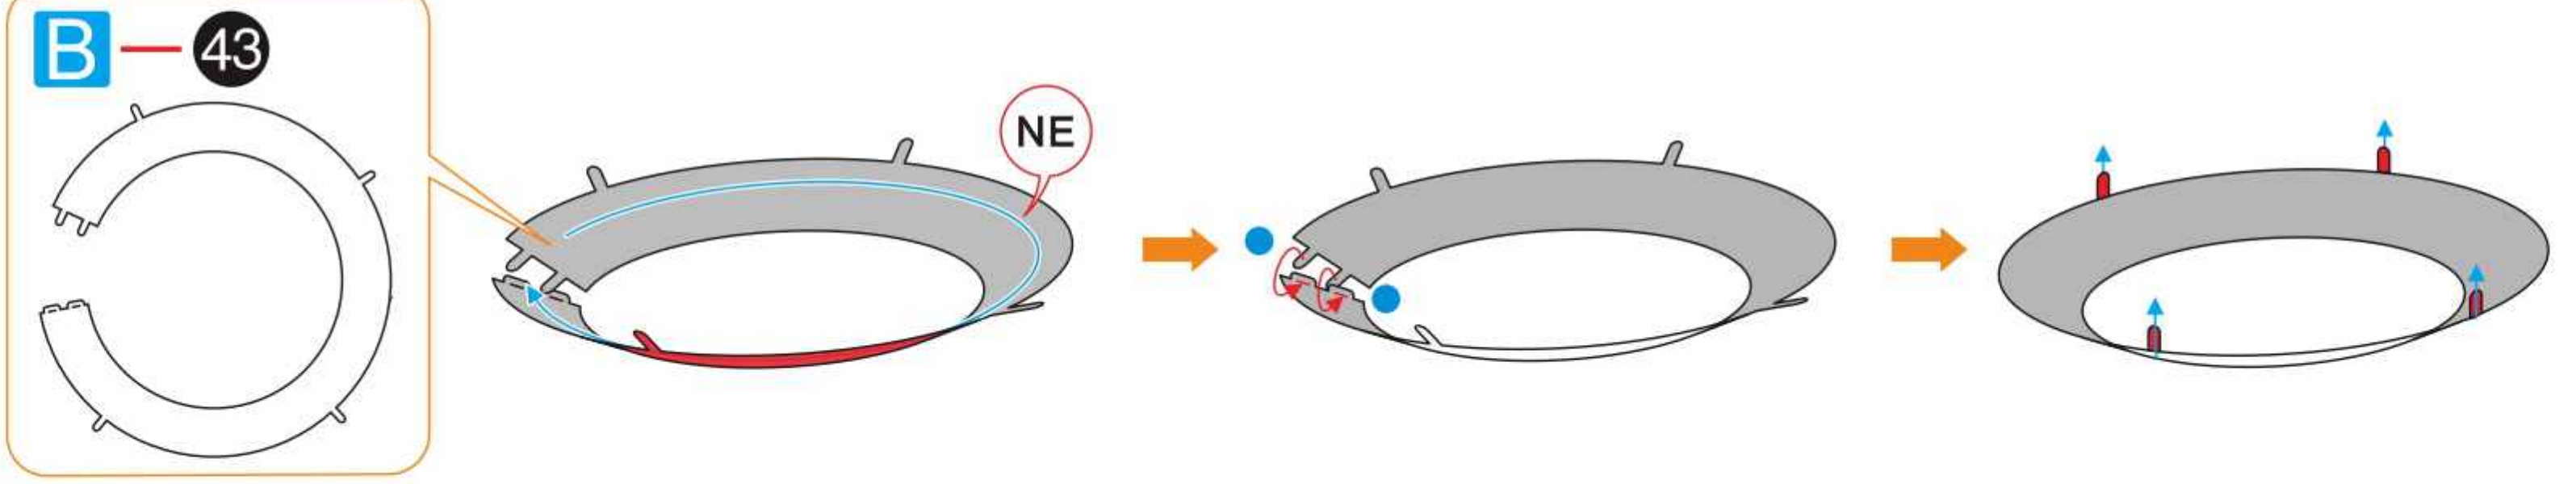


Step 23

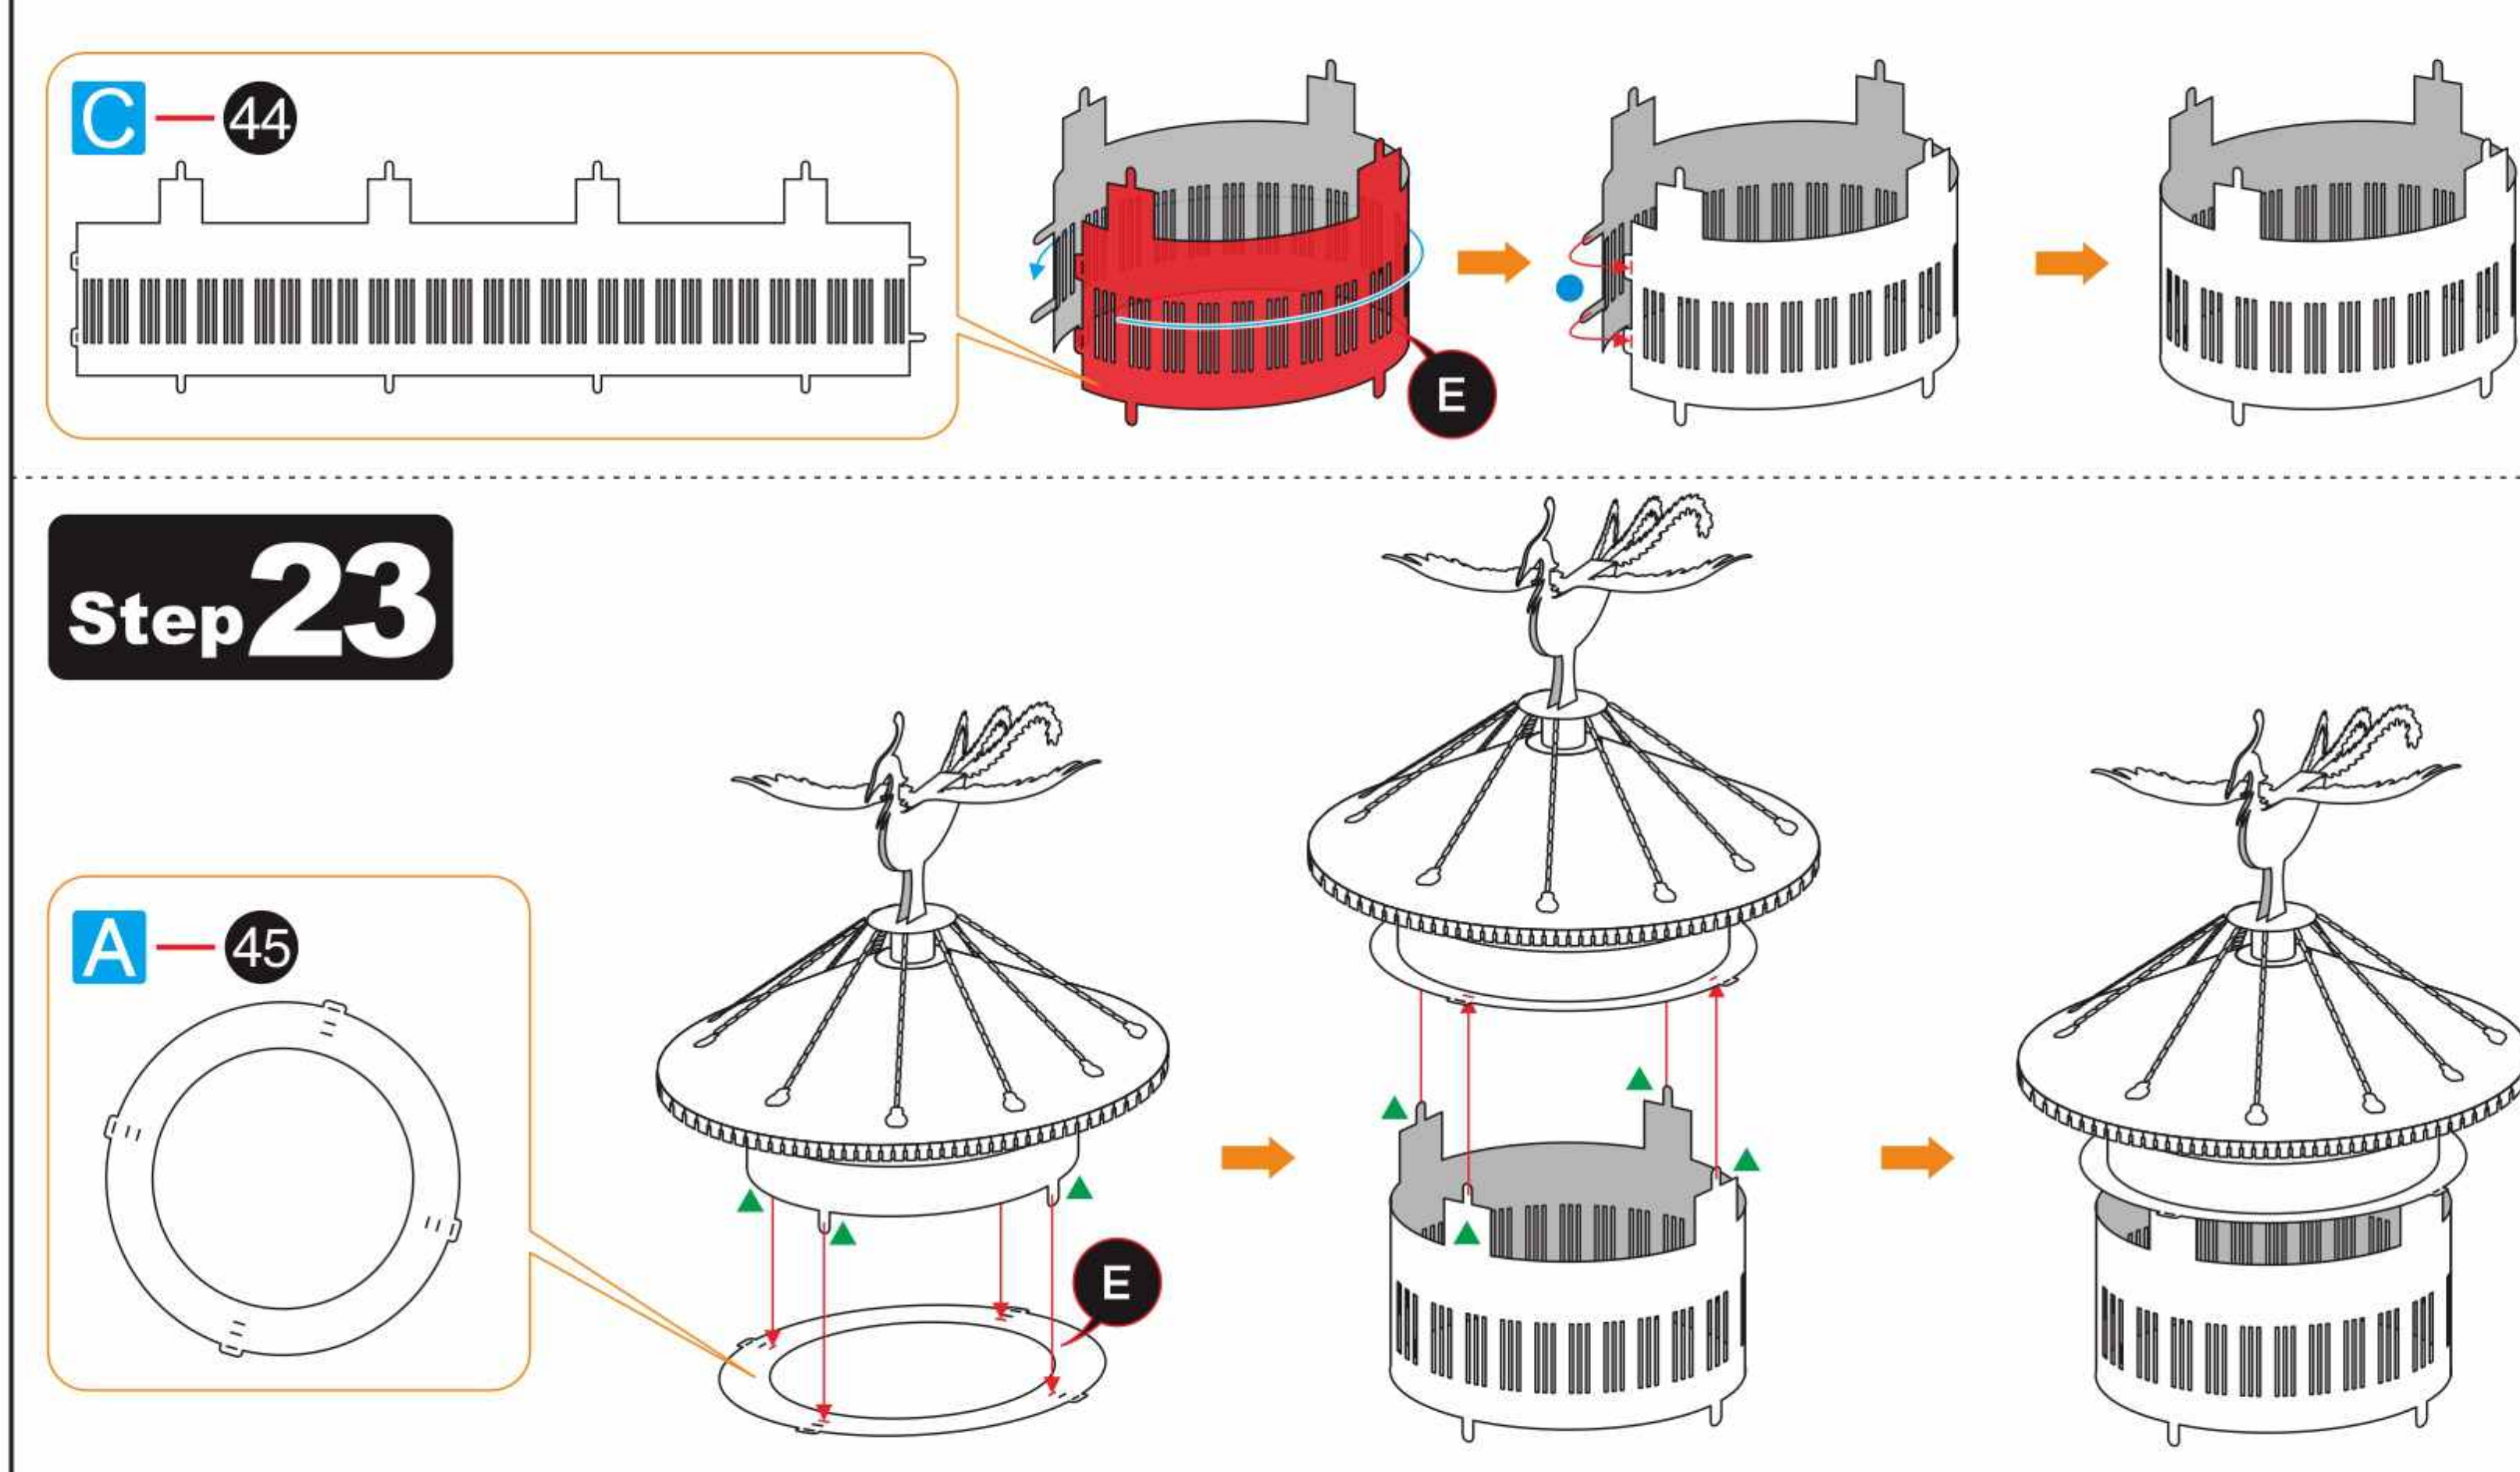


Step 24

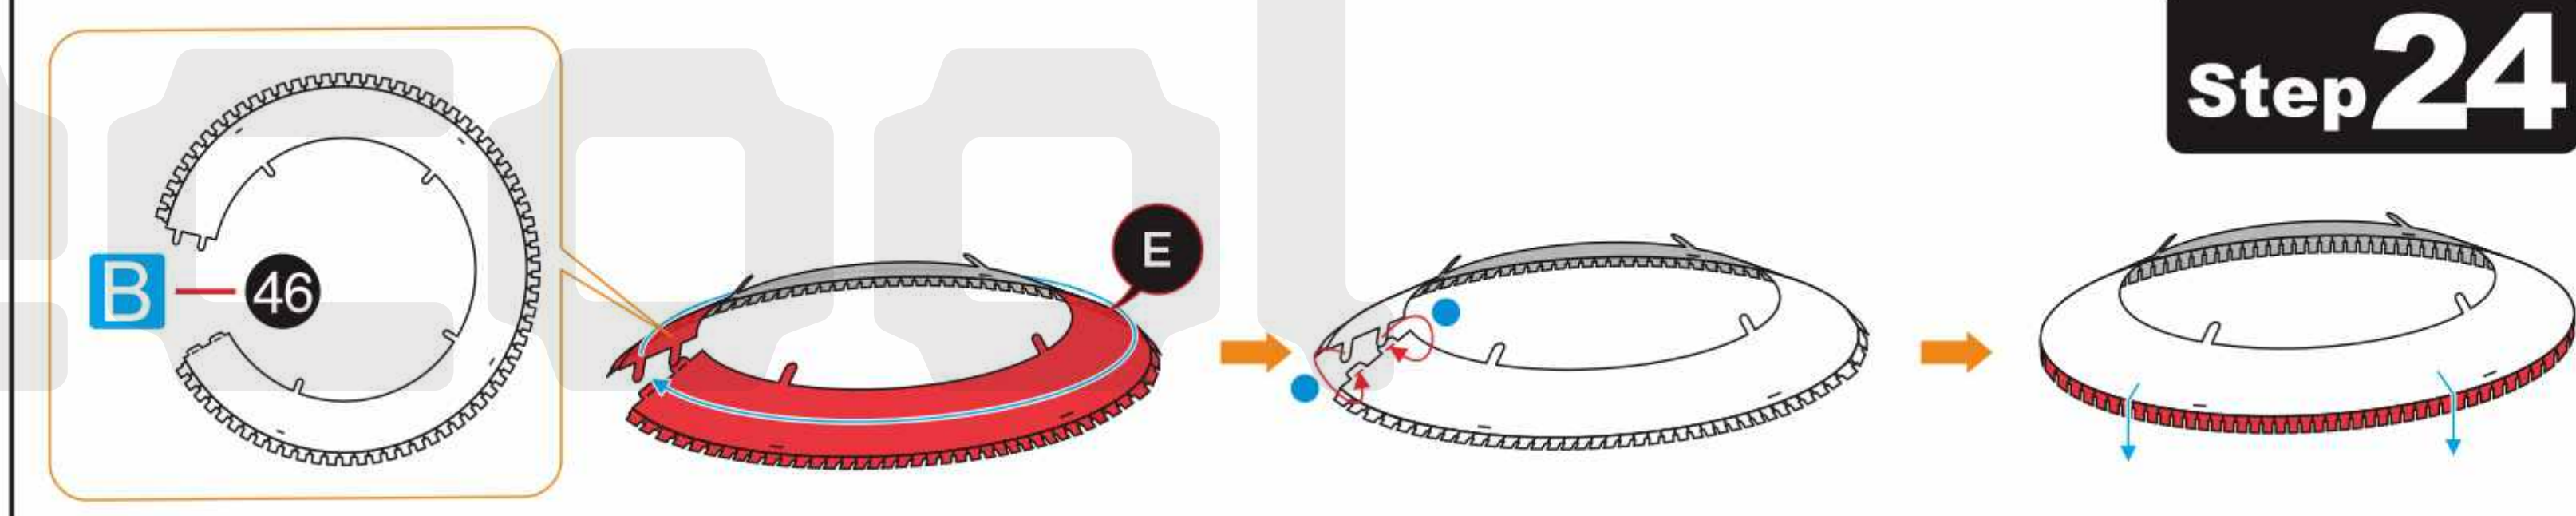


Step 25







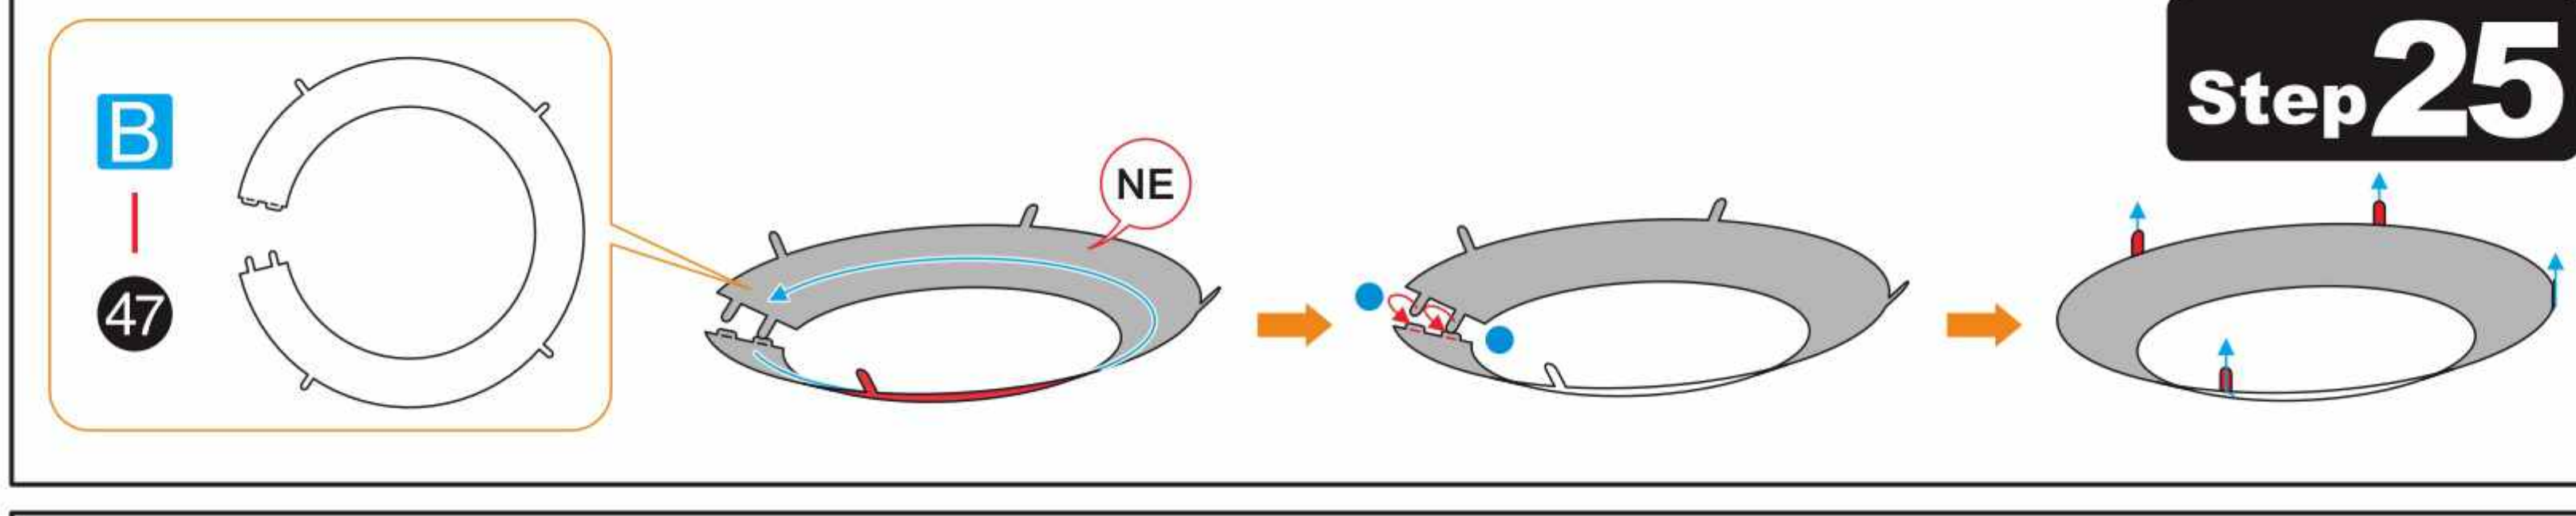


Step 26

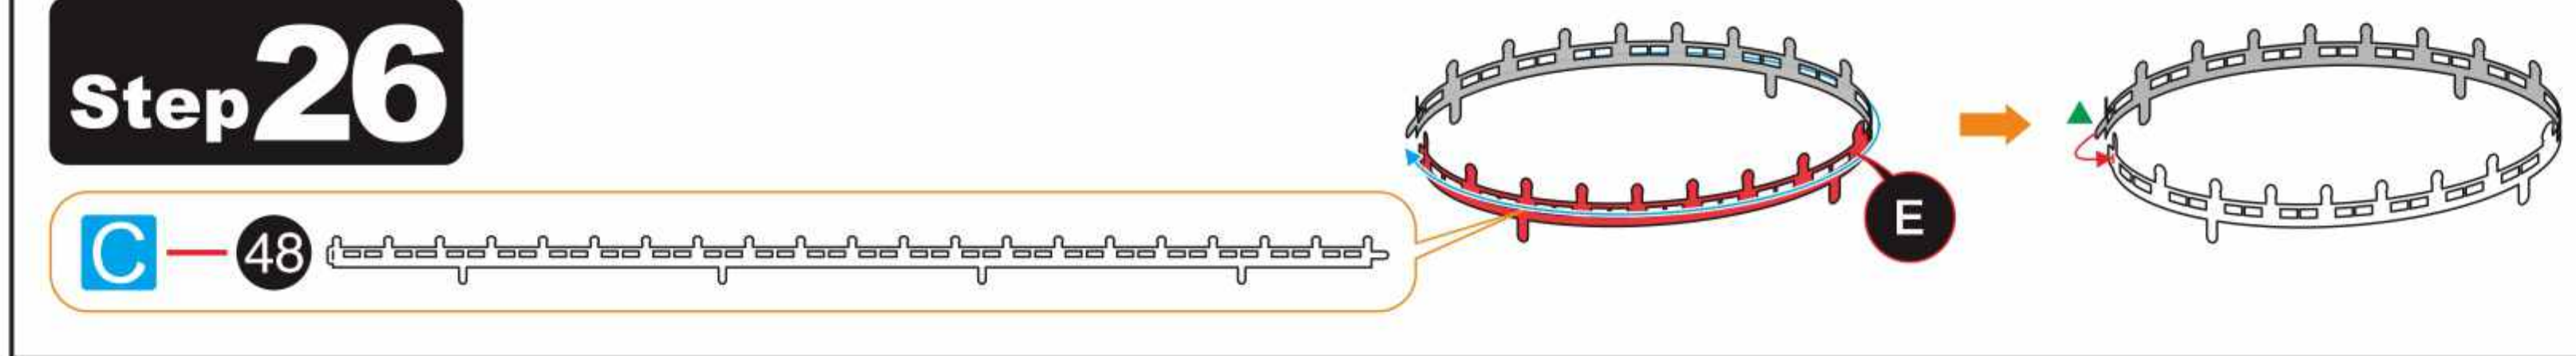


Step 27

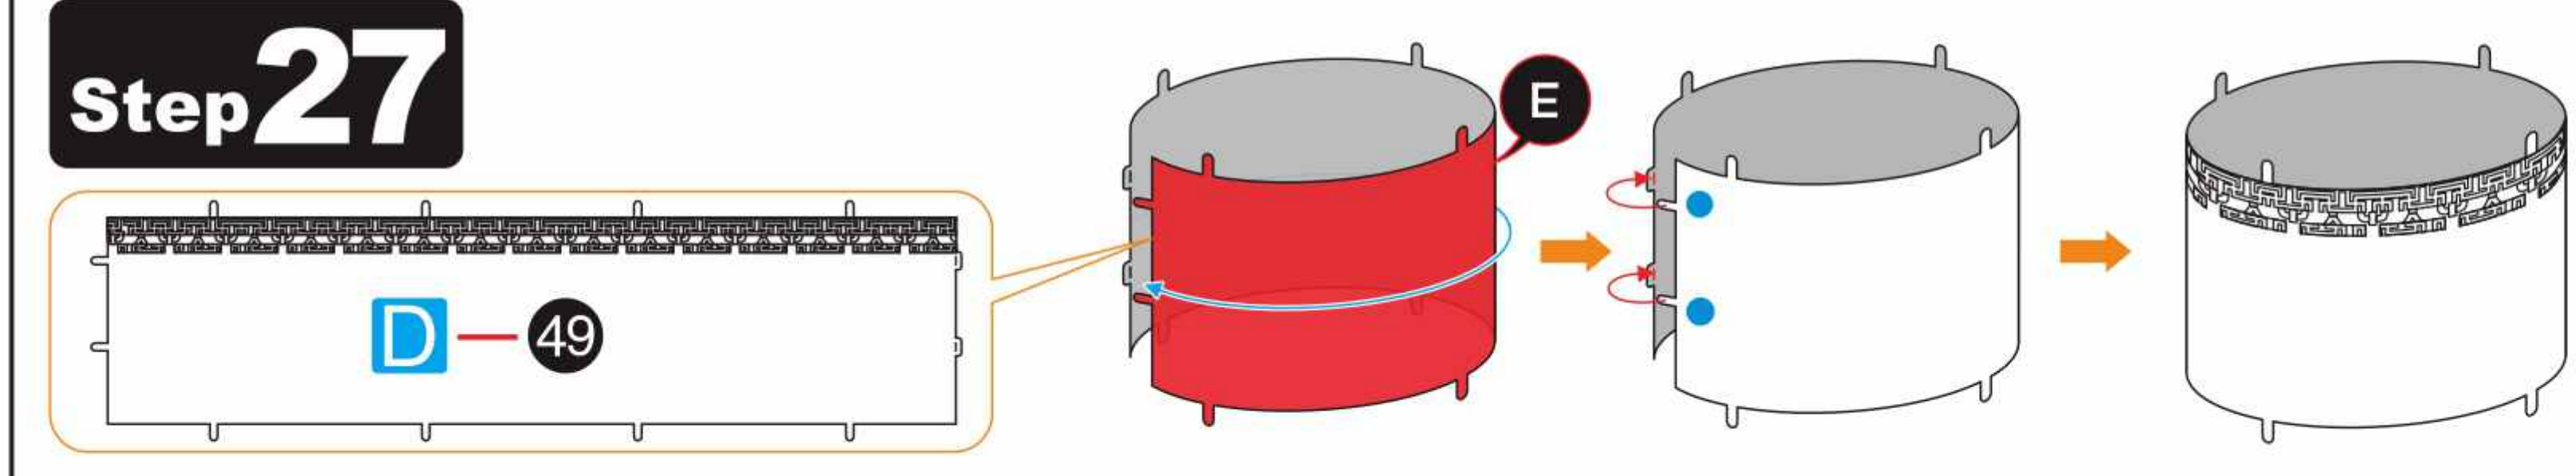

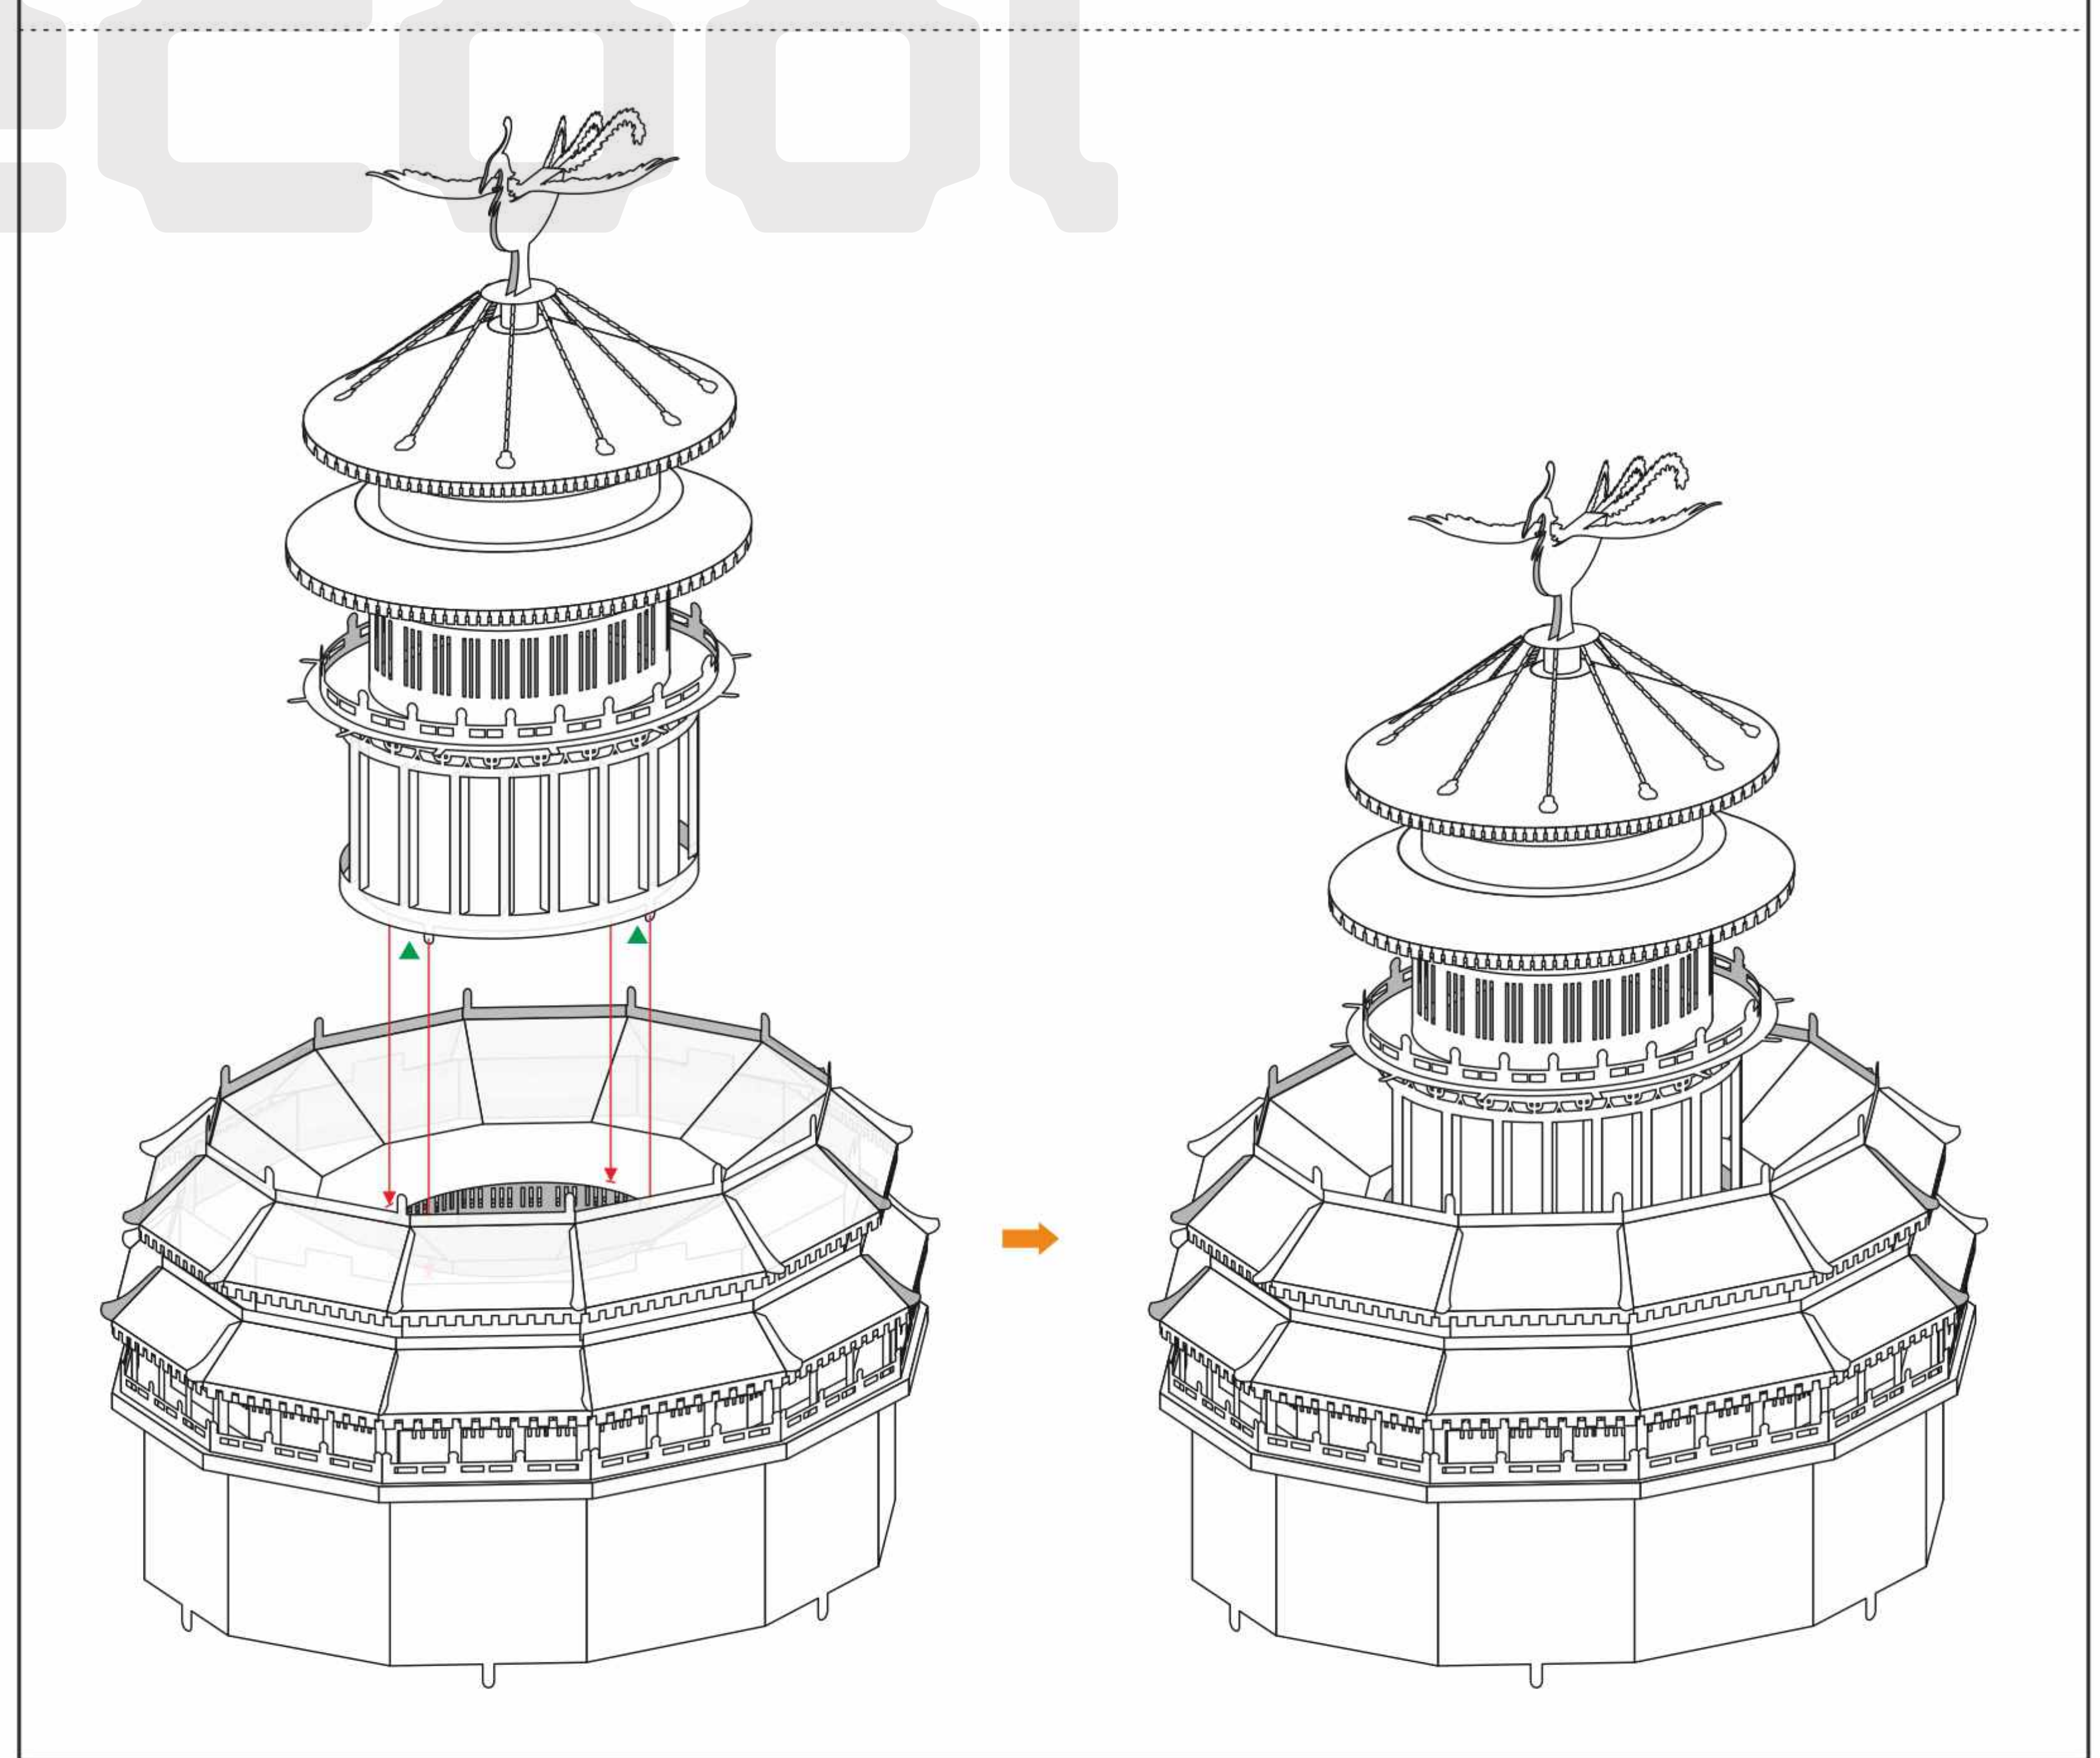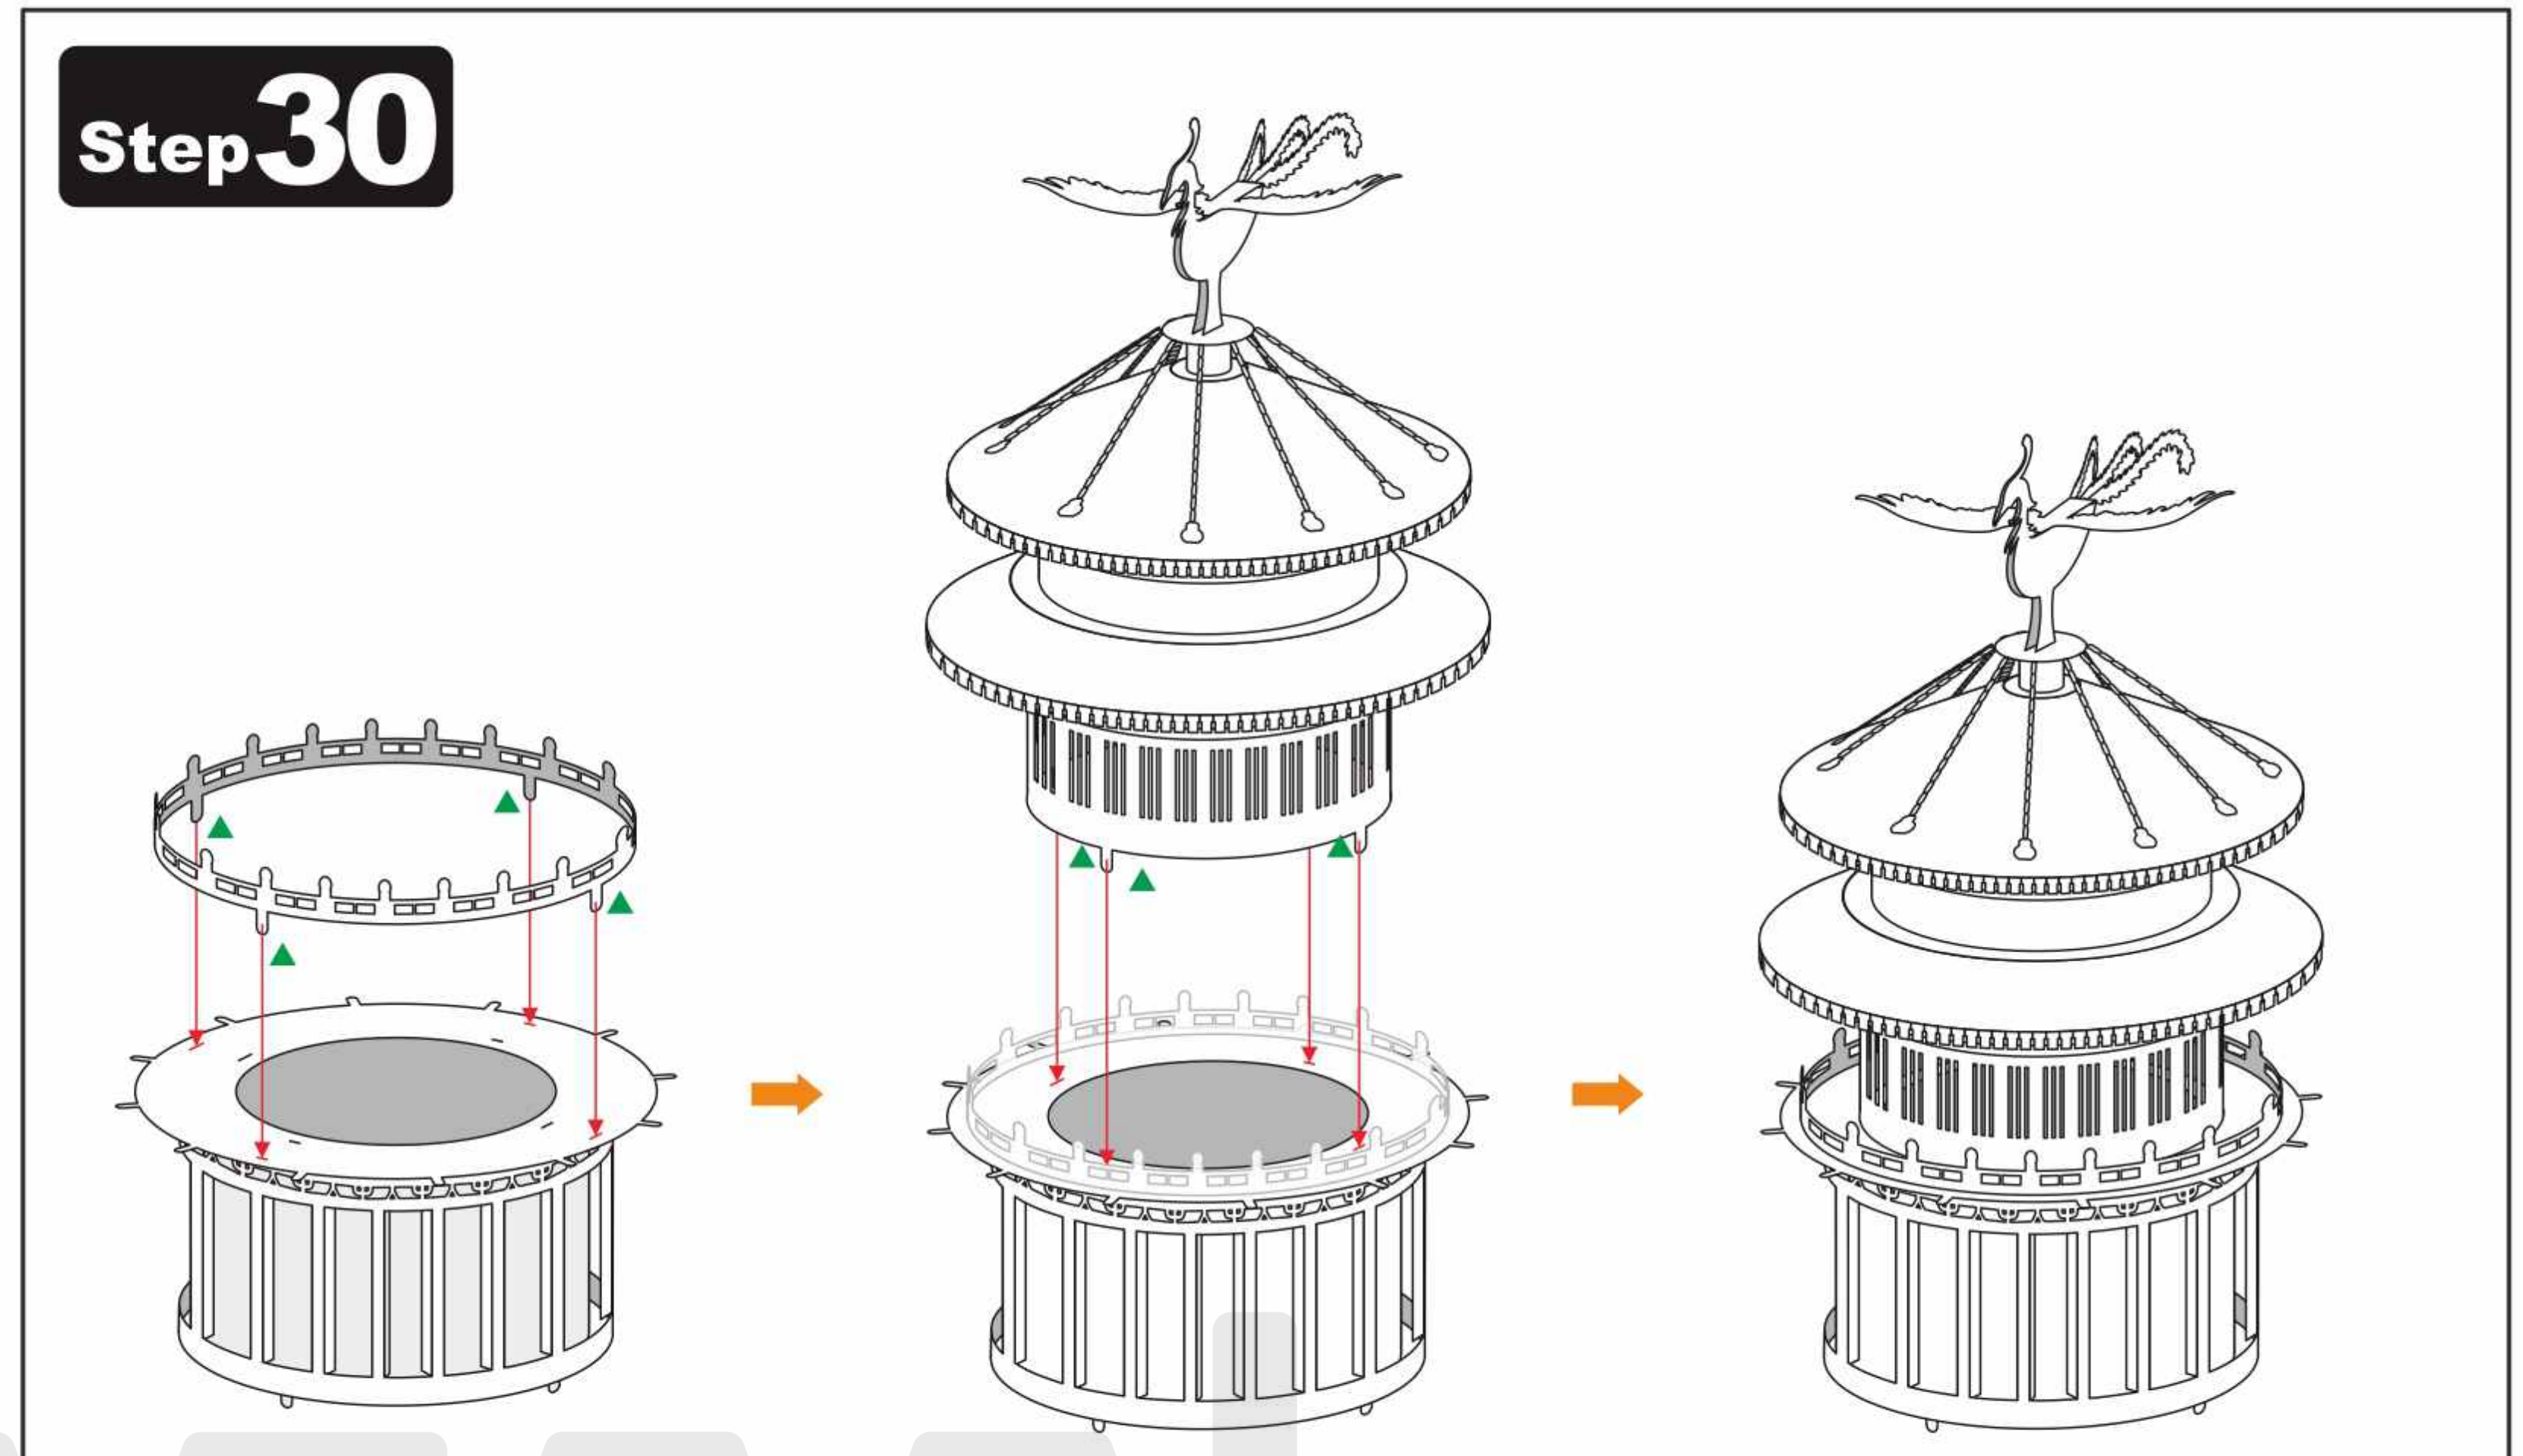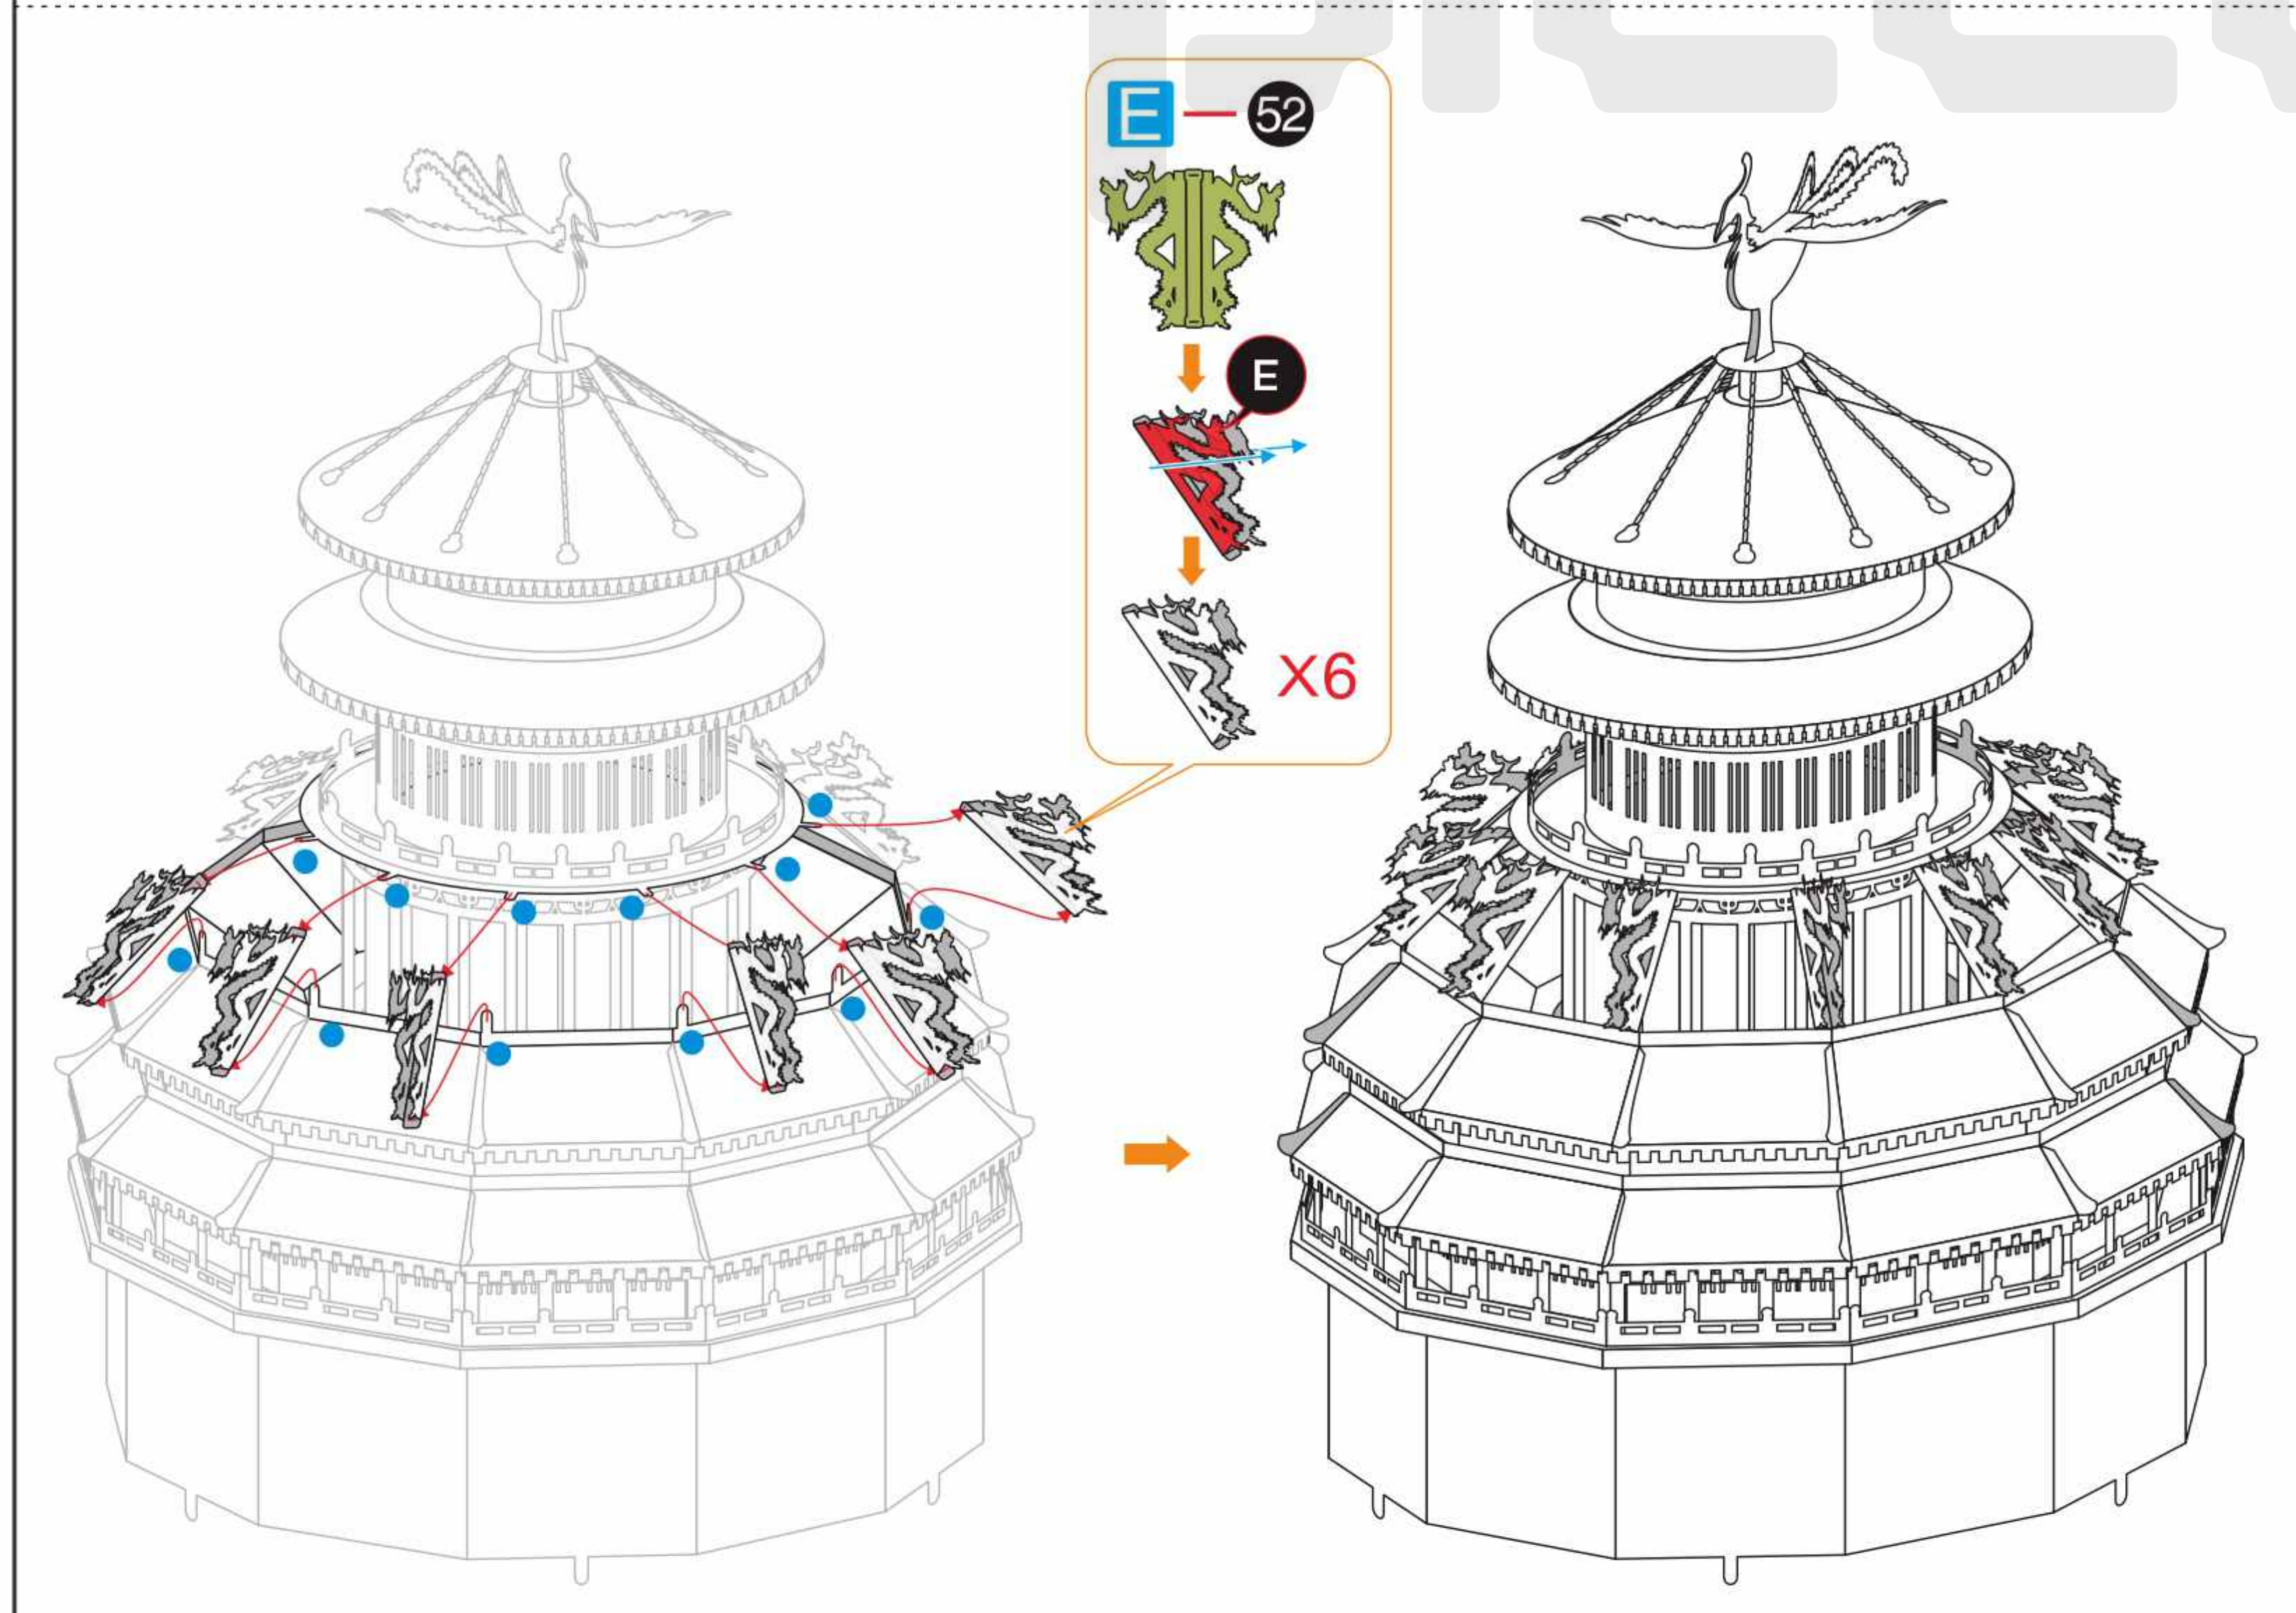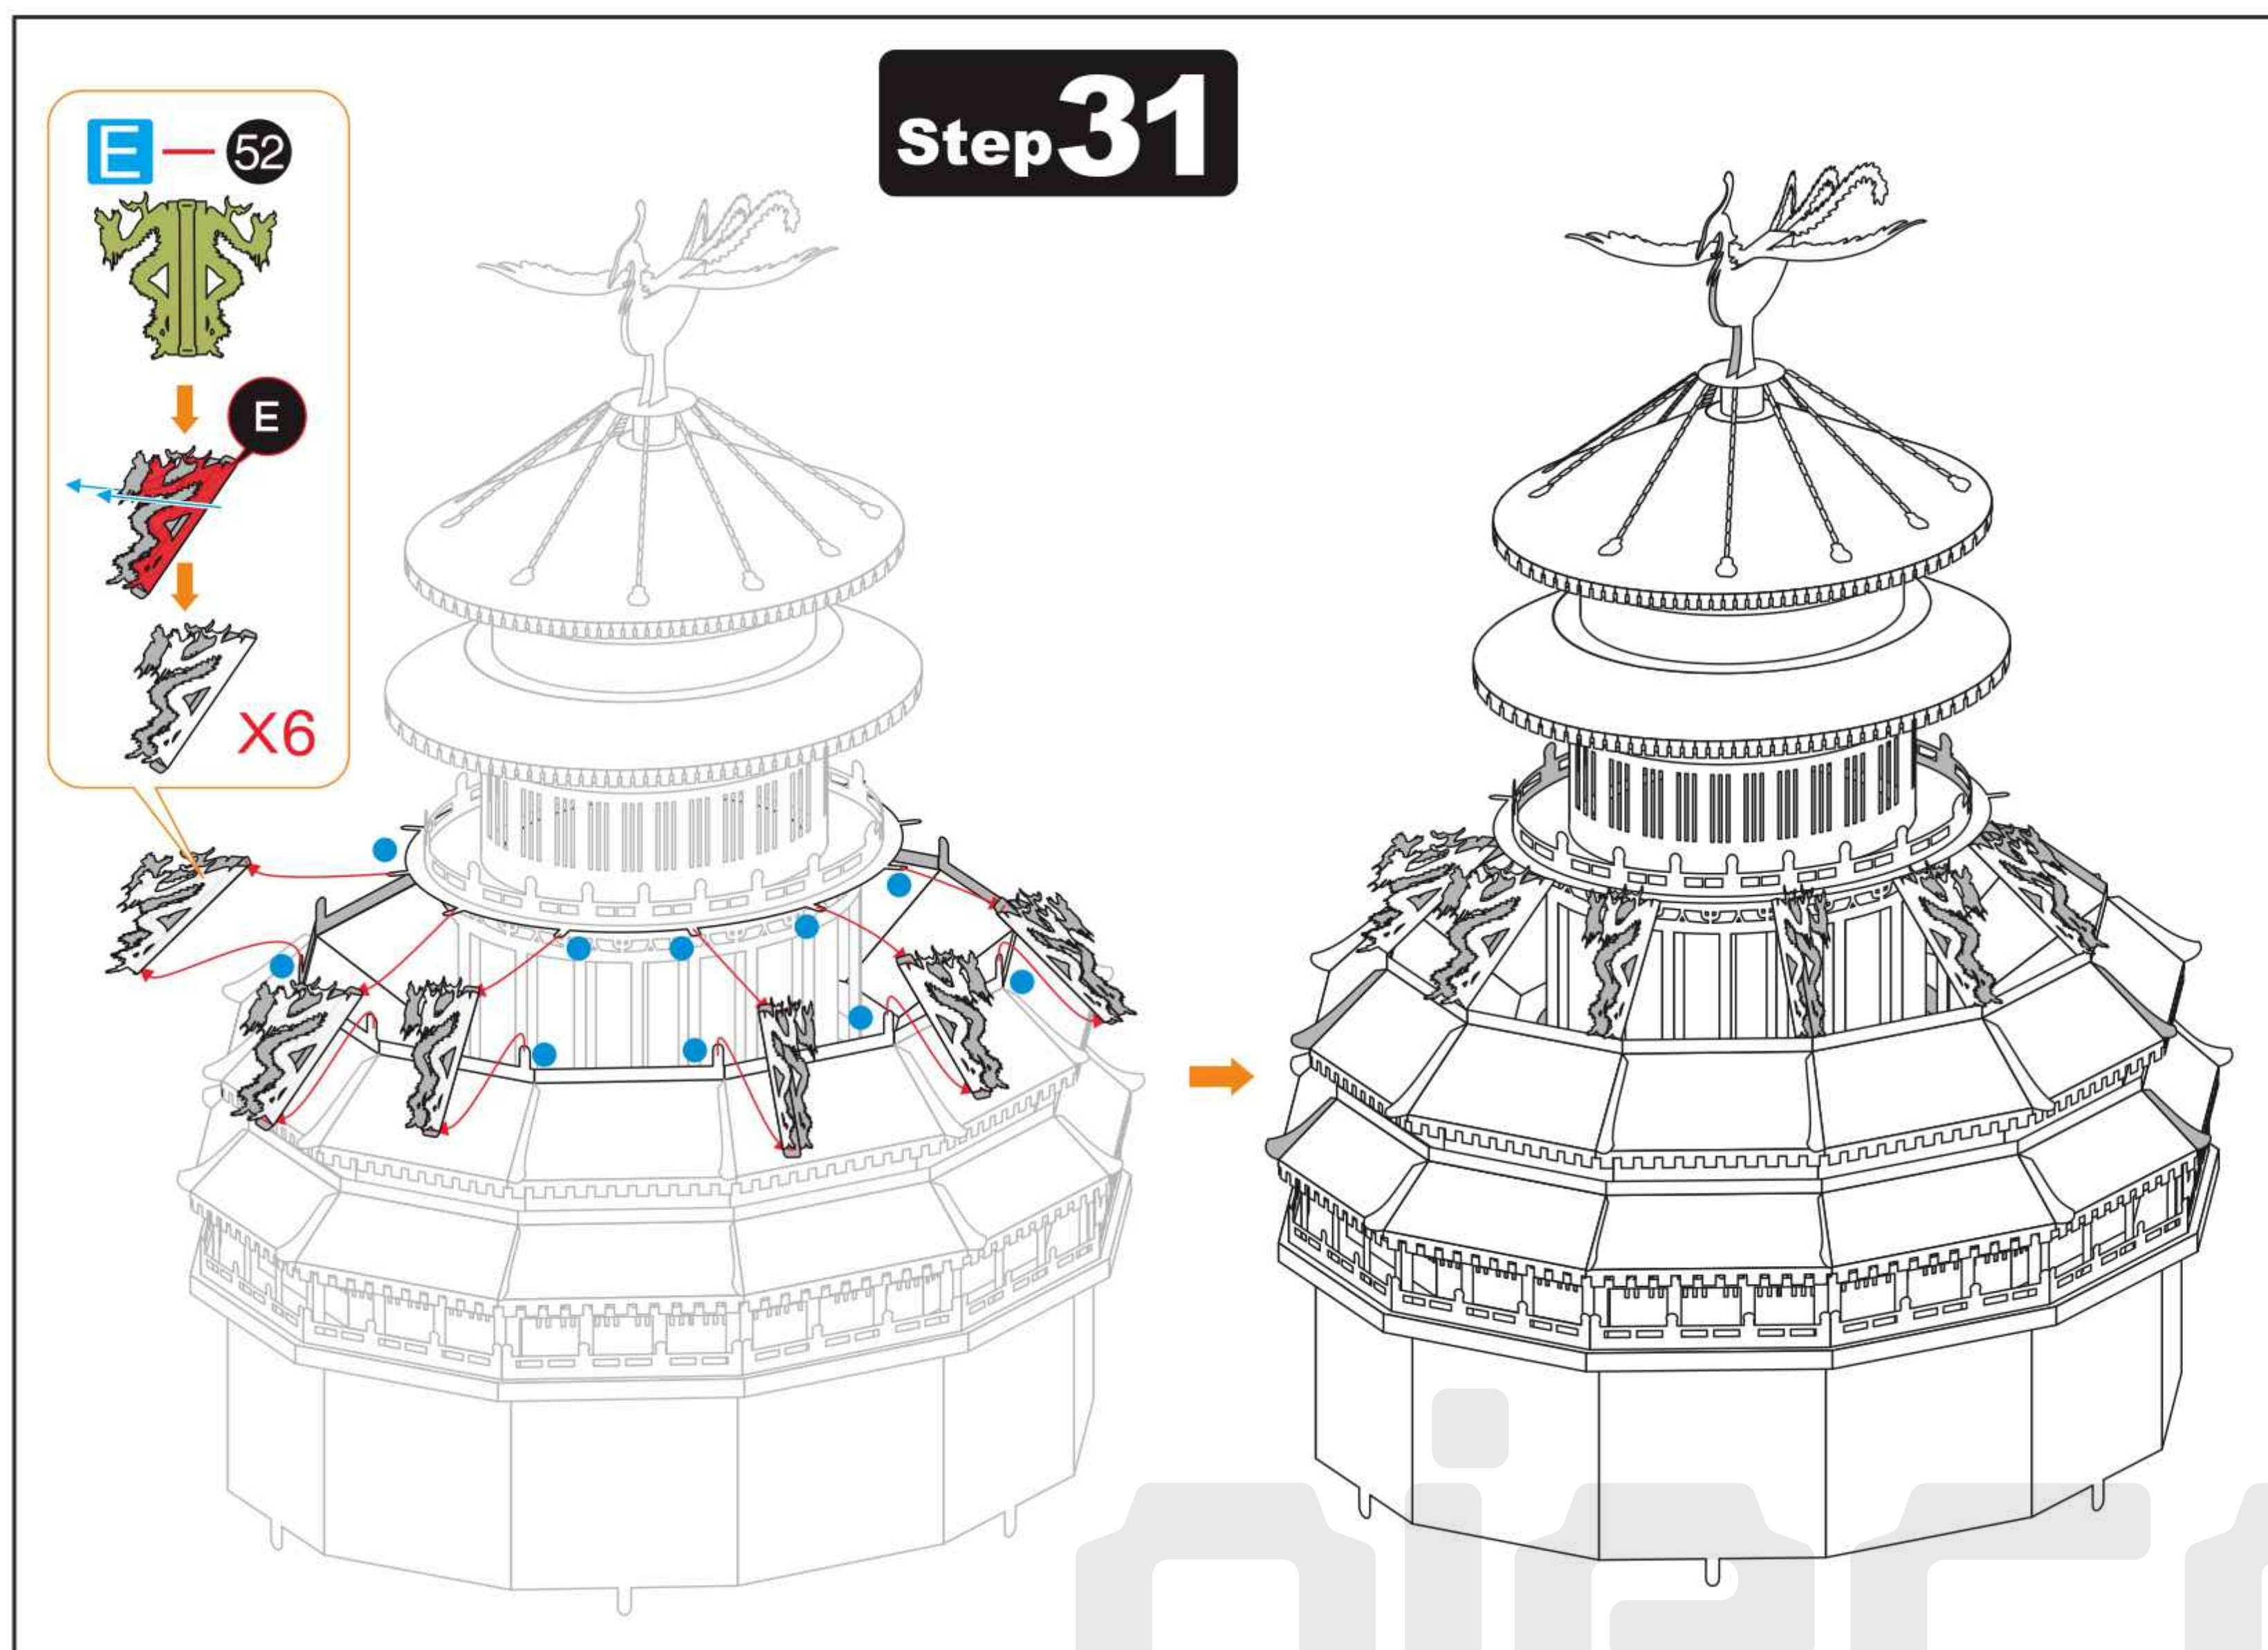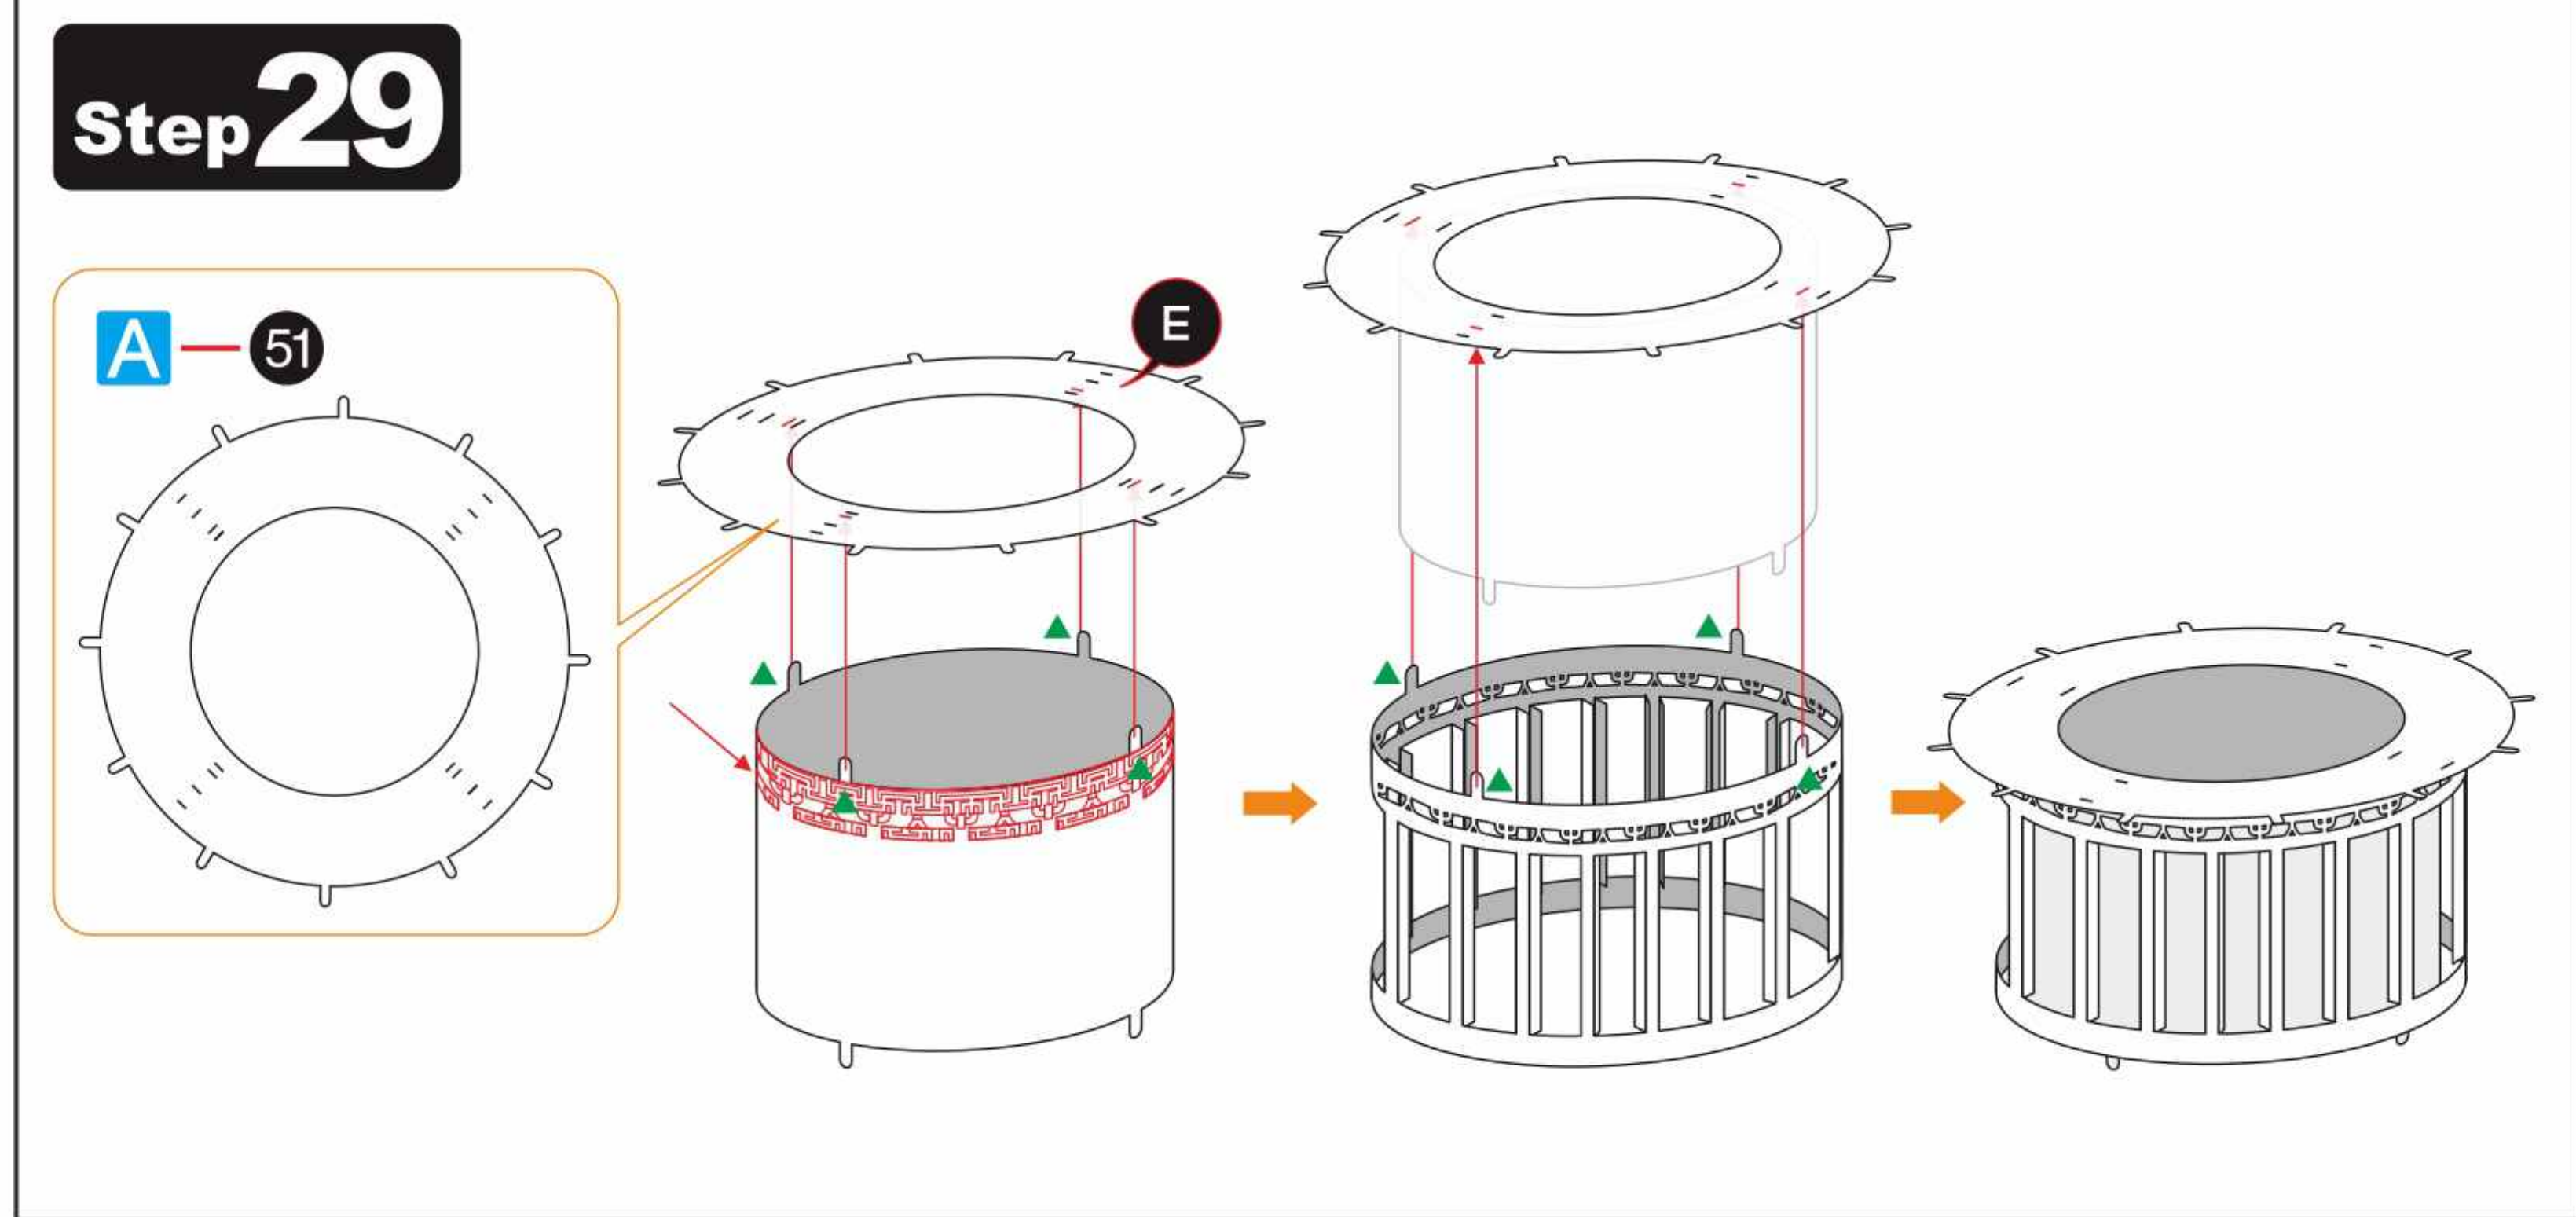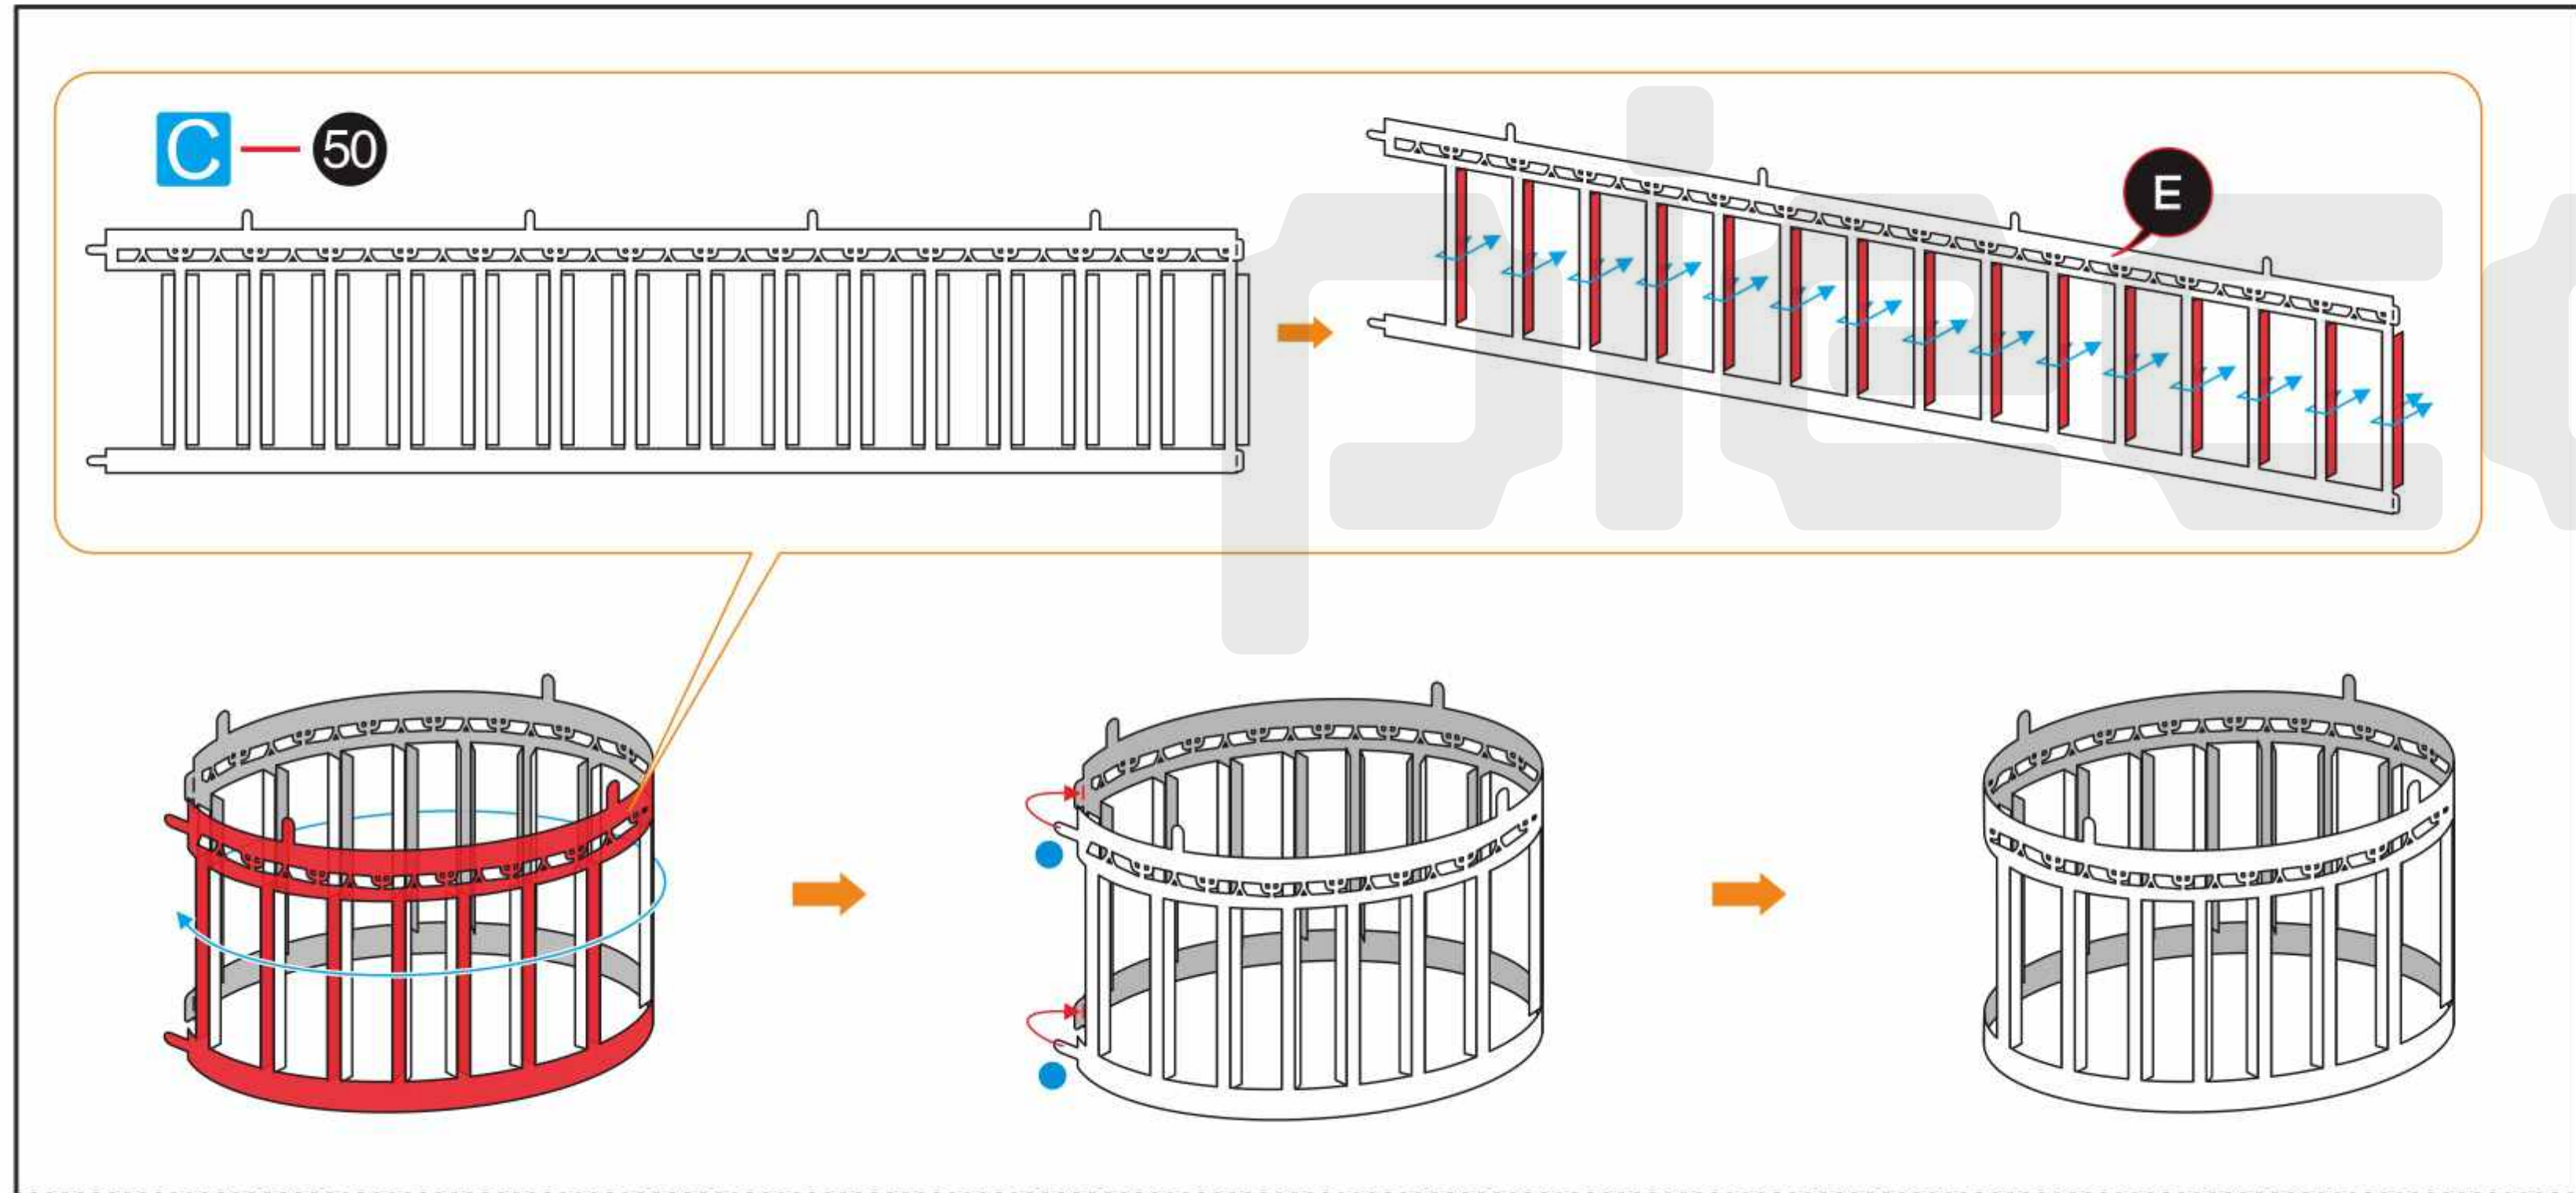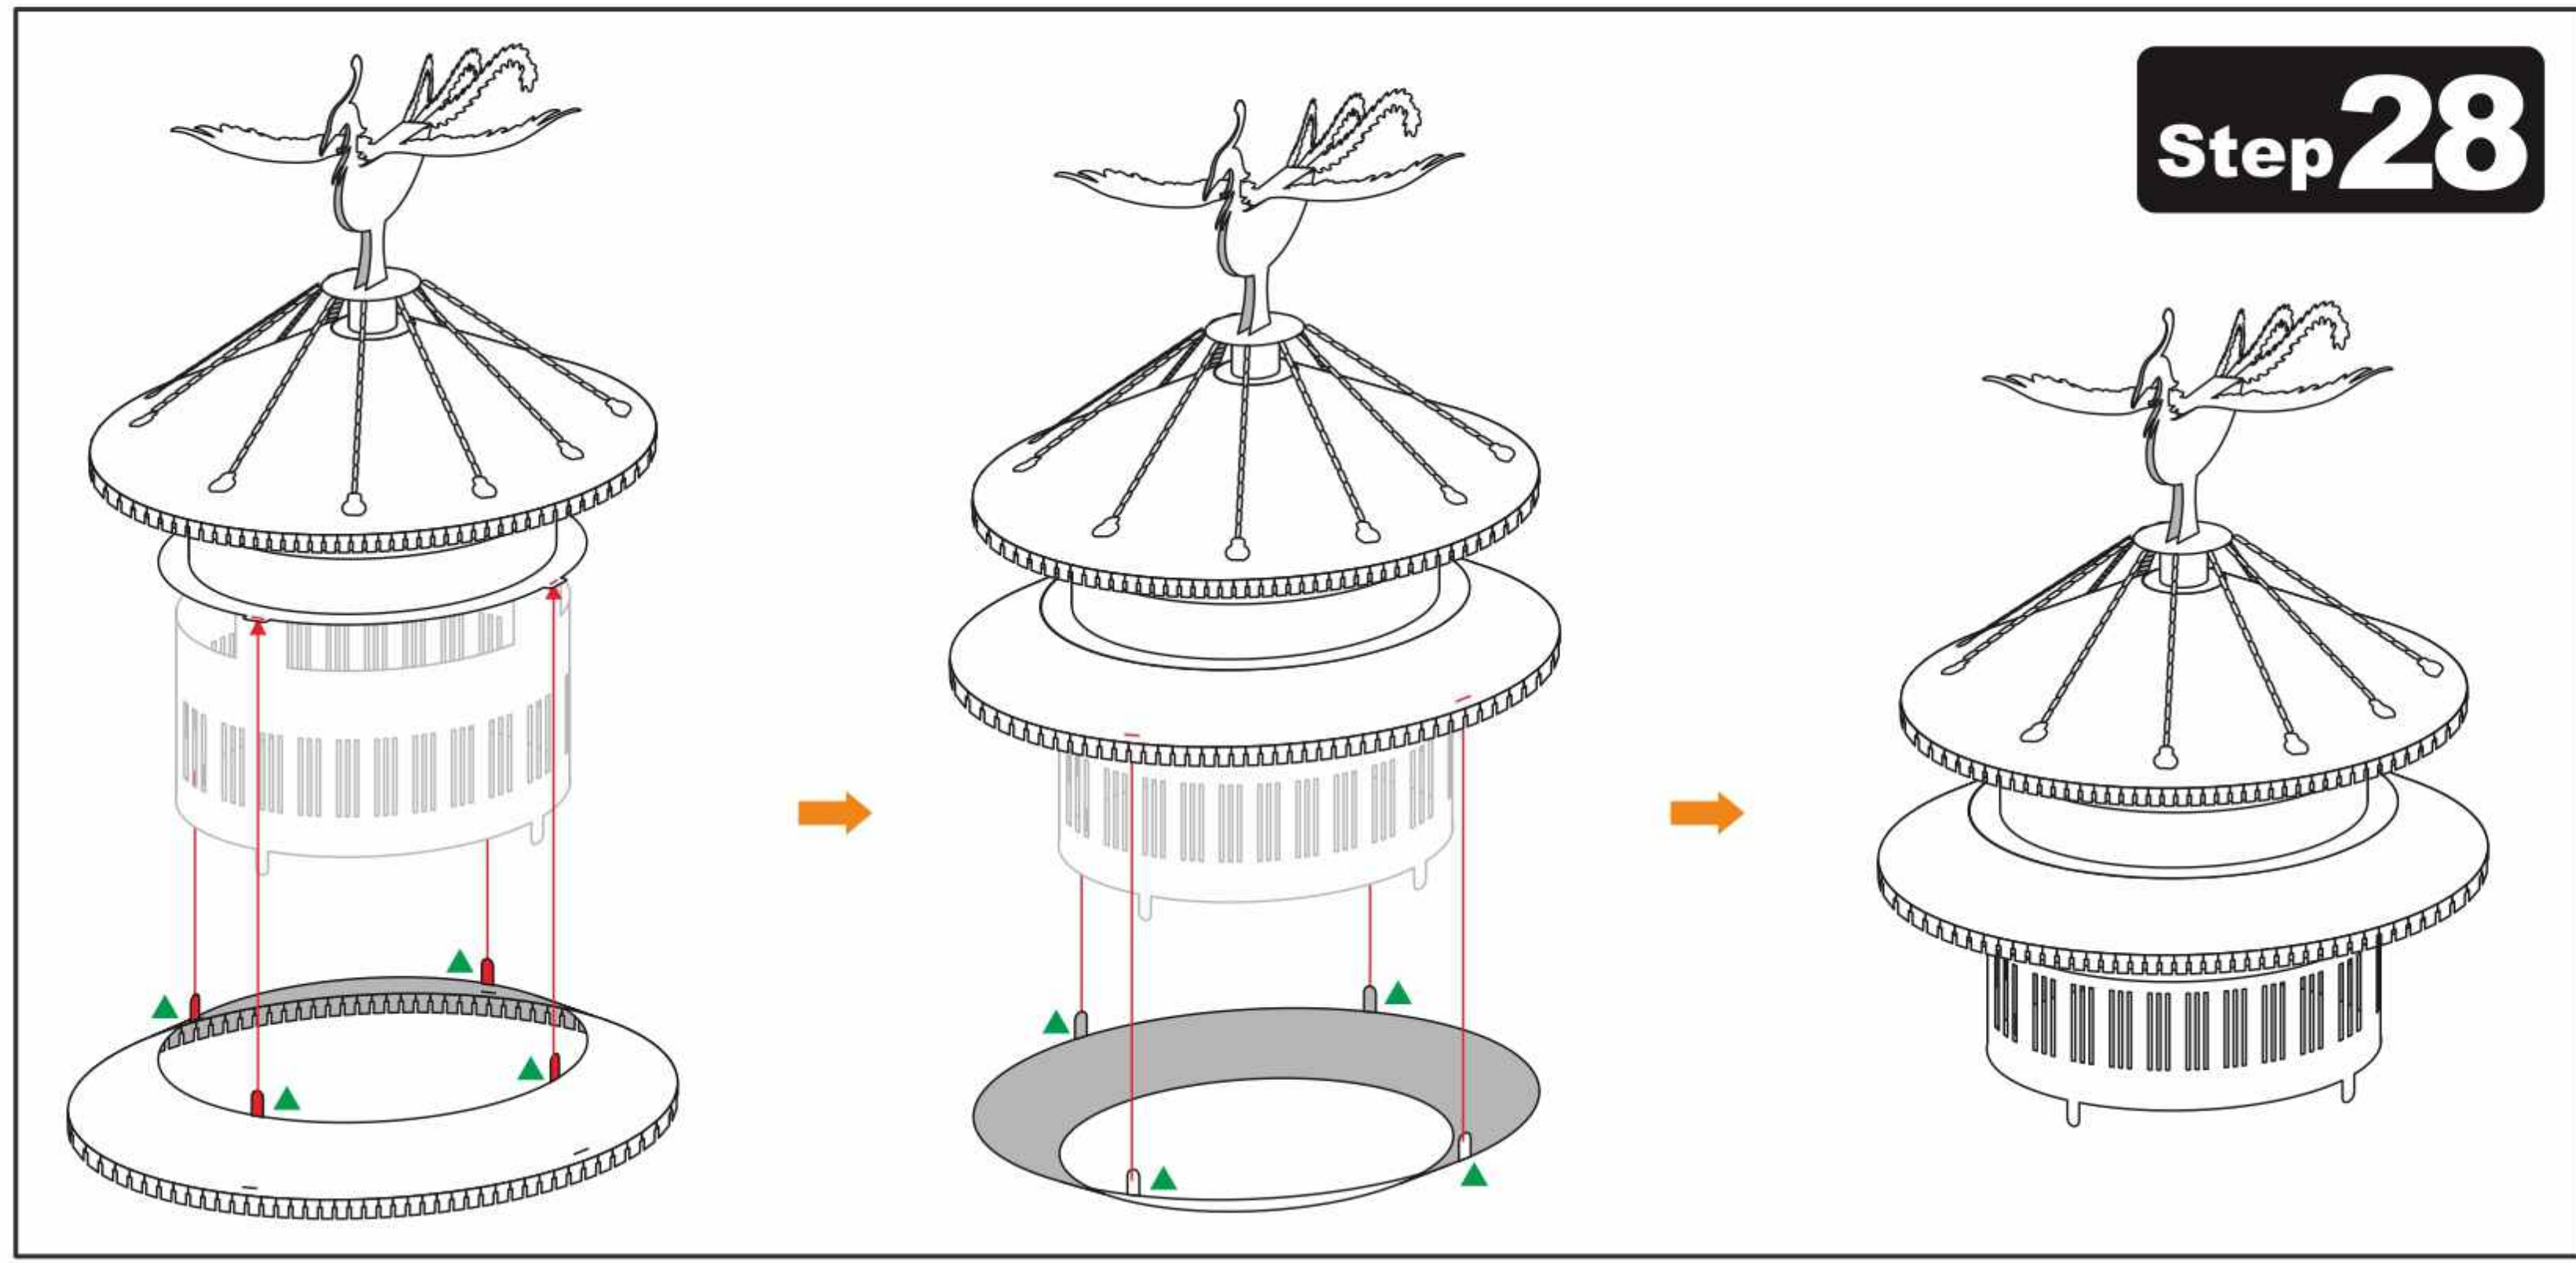

13 14
15 16

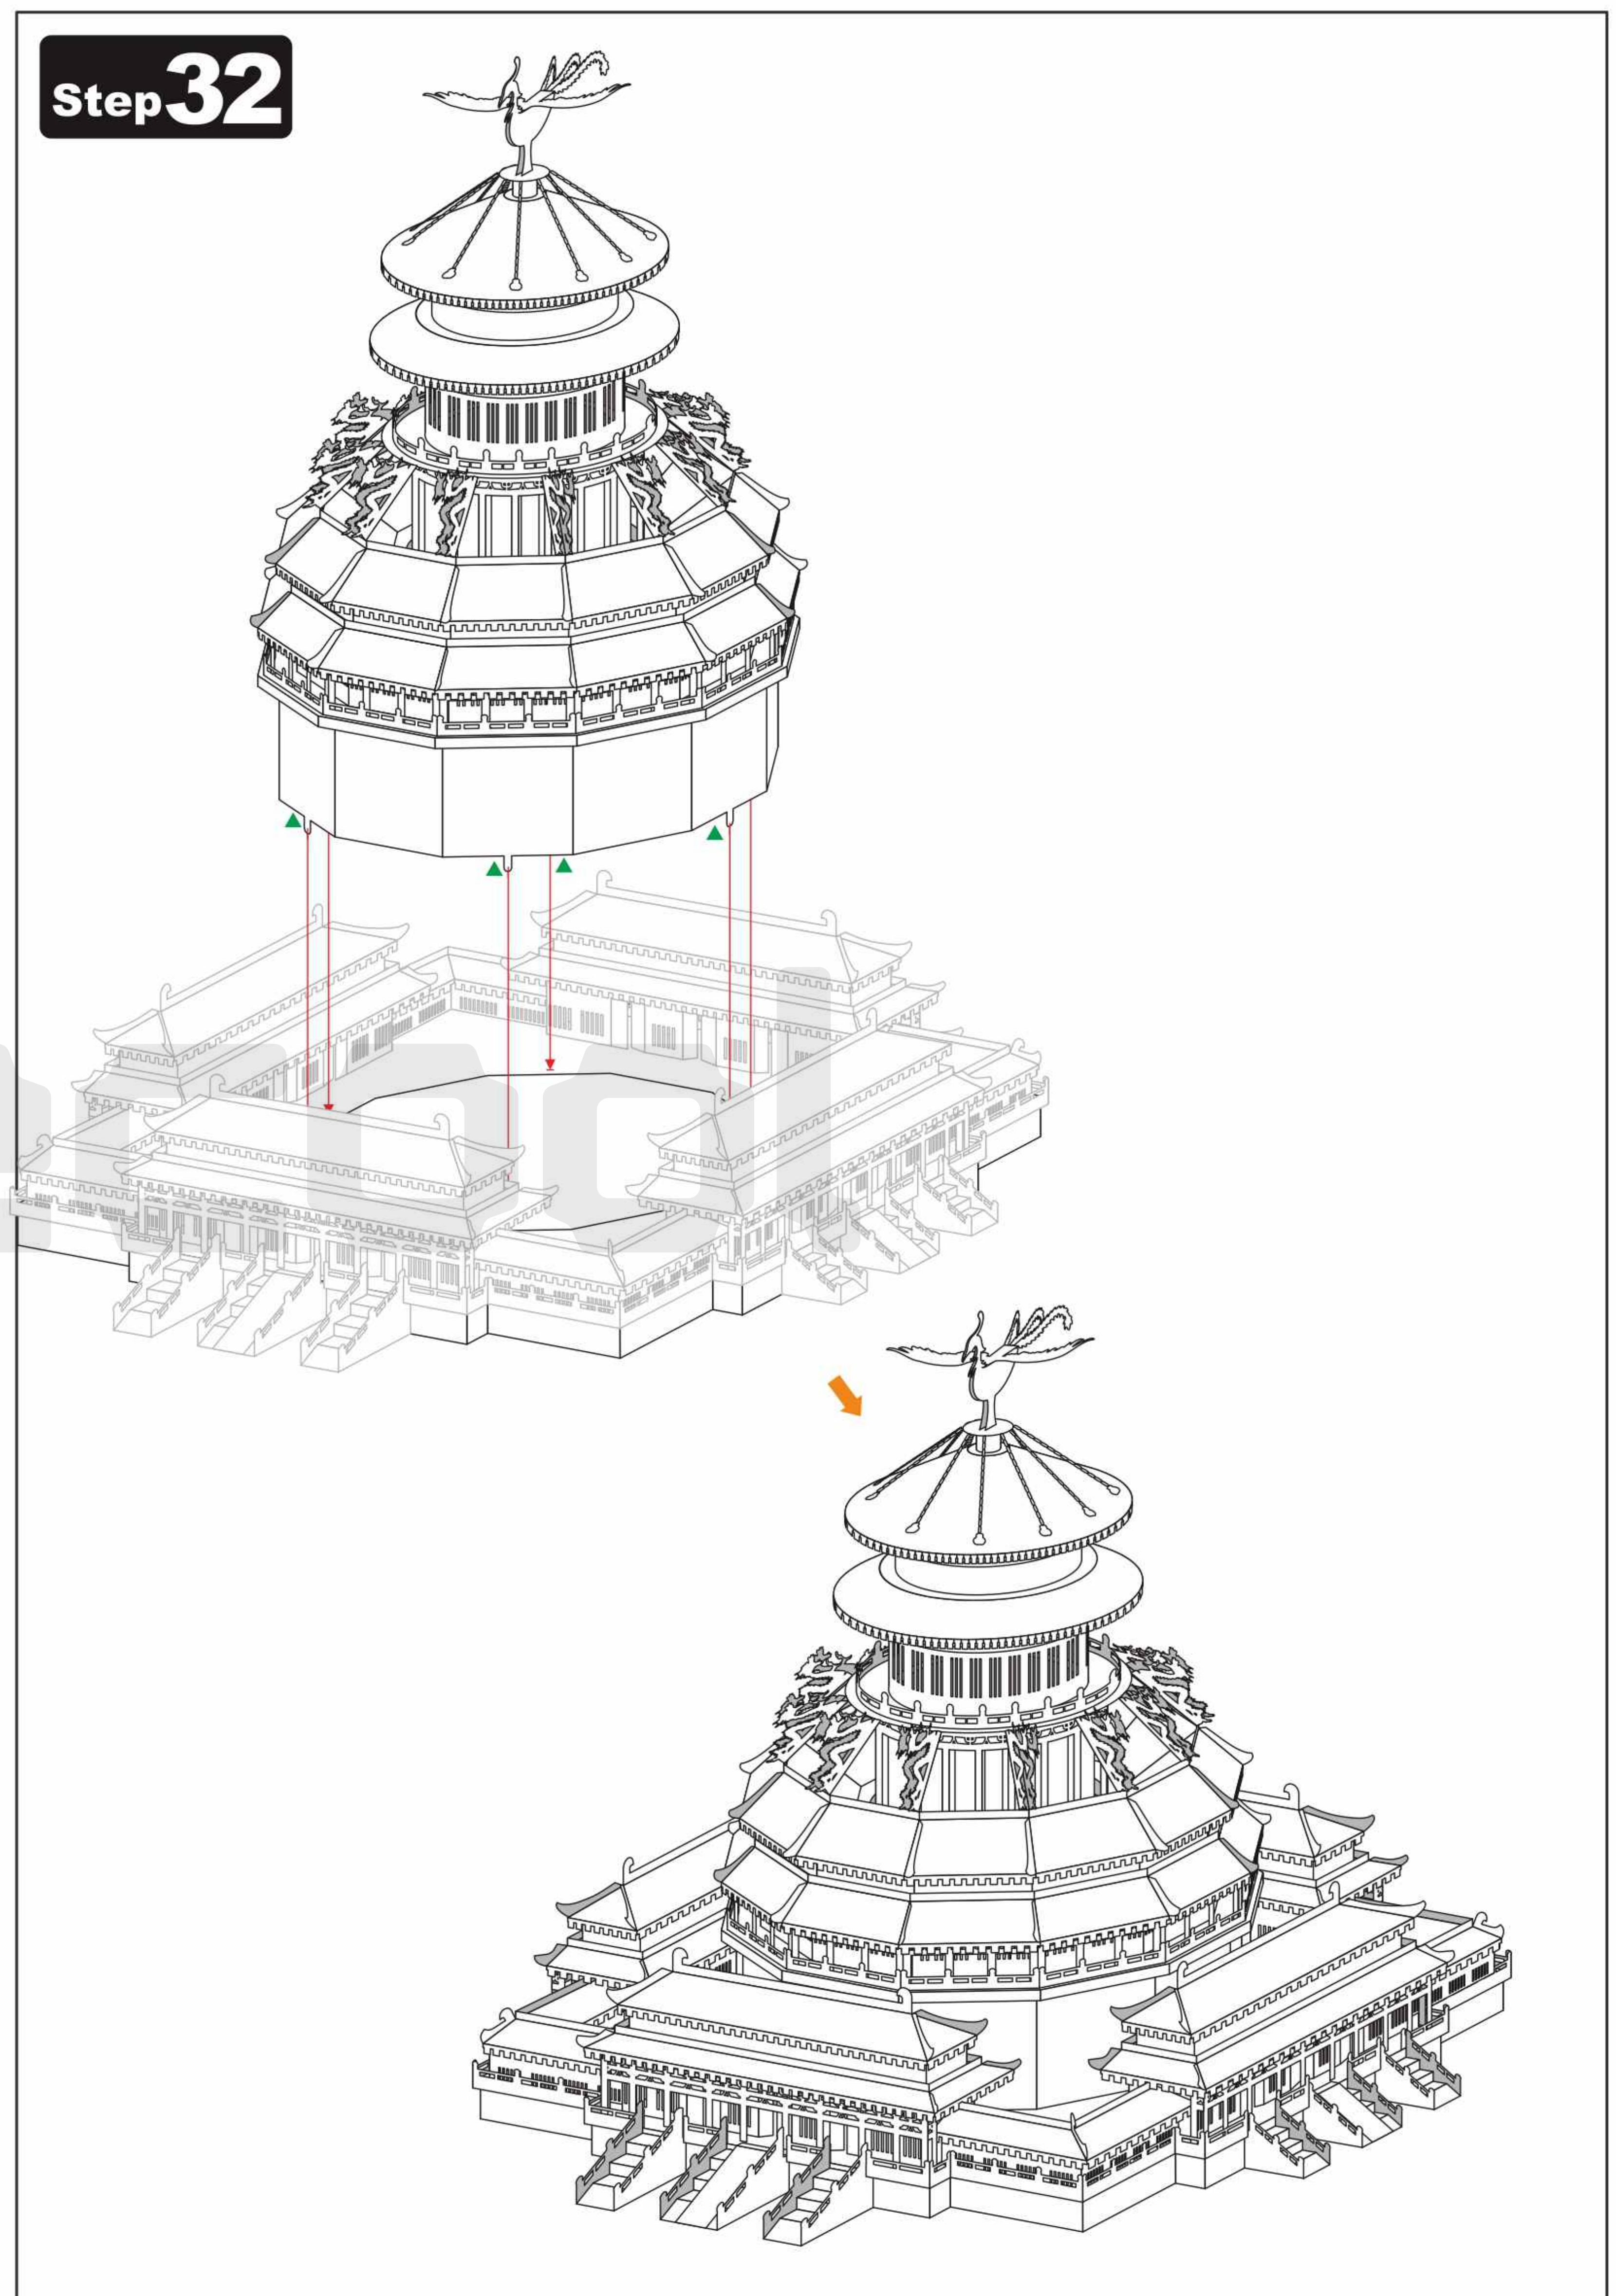

piececool

ZIWEI PALACE HP158


Metal Sheet

Sketch Map

© WIST PLASTIC & METAL TECHNOLOGY LIMITED. ALL RIGHTS RESERVED.
CP-PART-HP158#-A1-2020.06.17


Metal Sheet

A

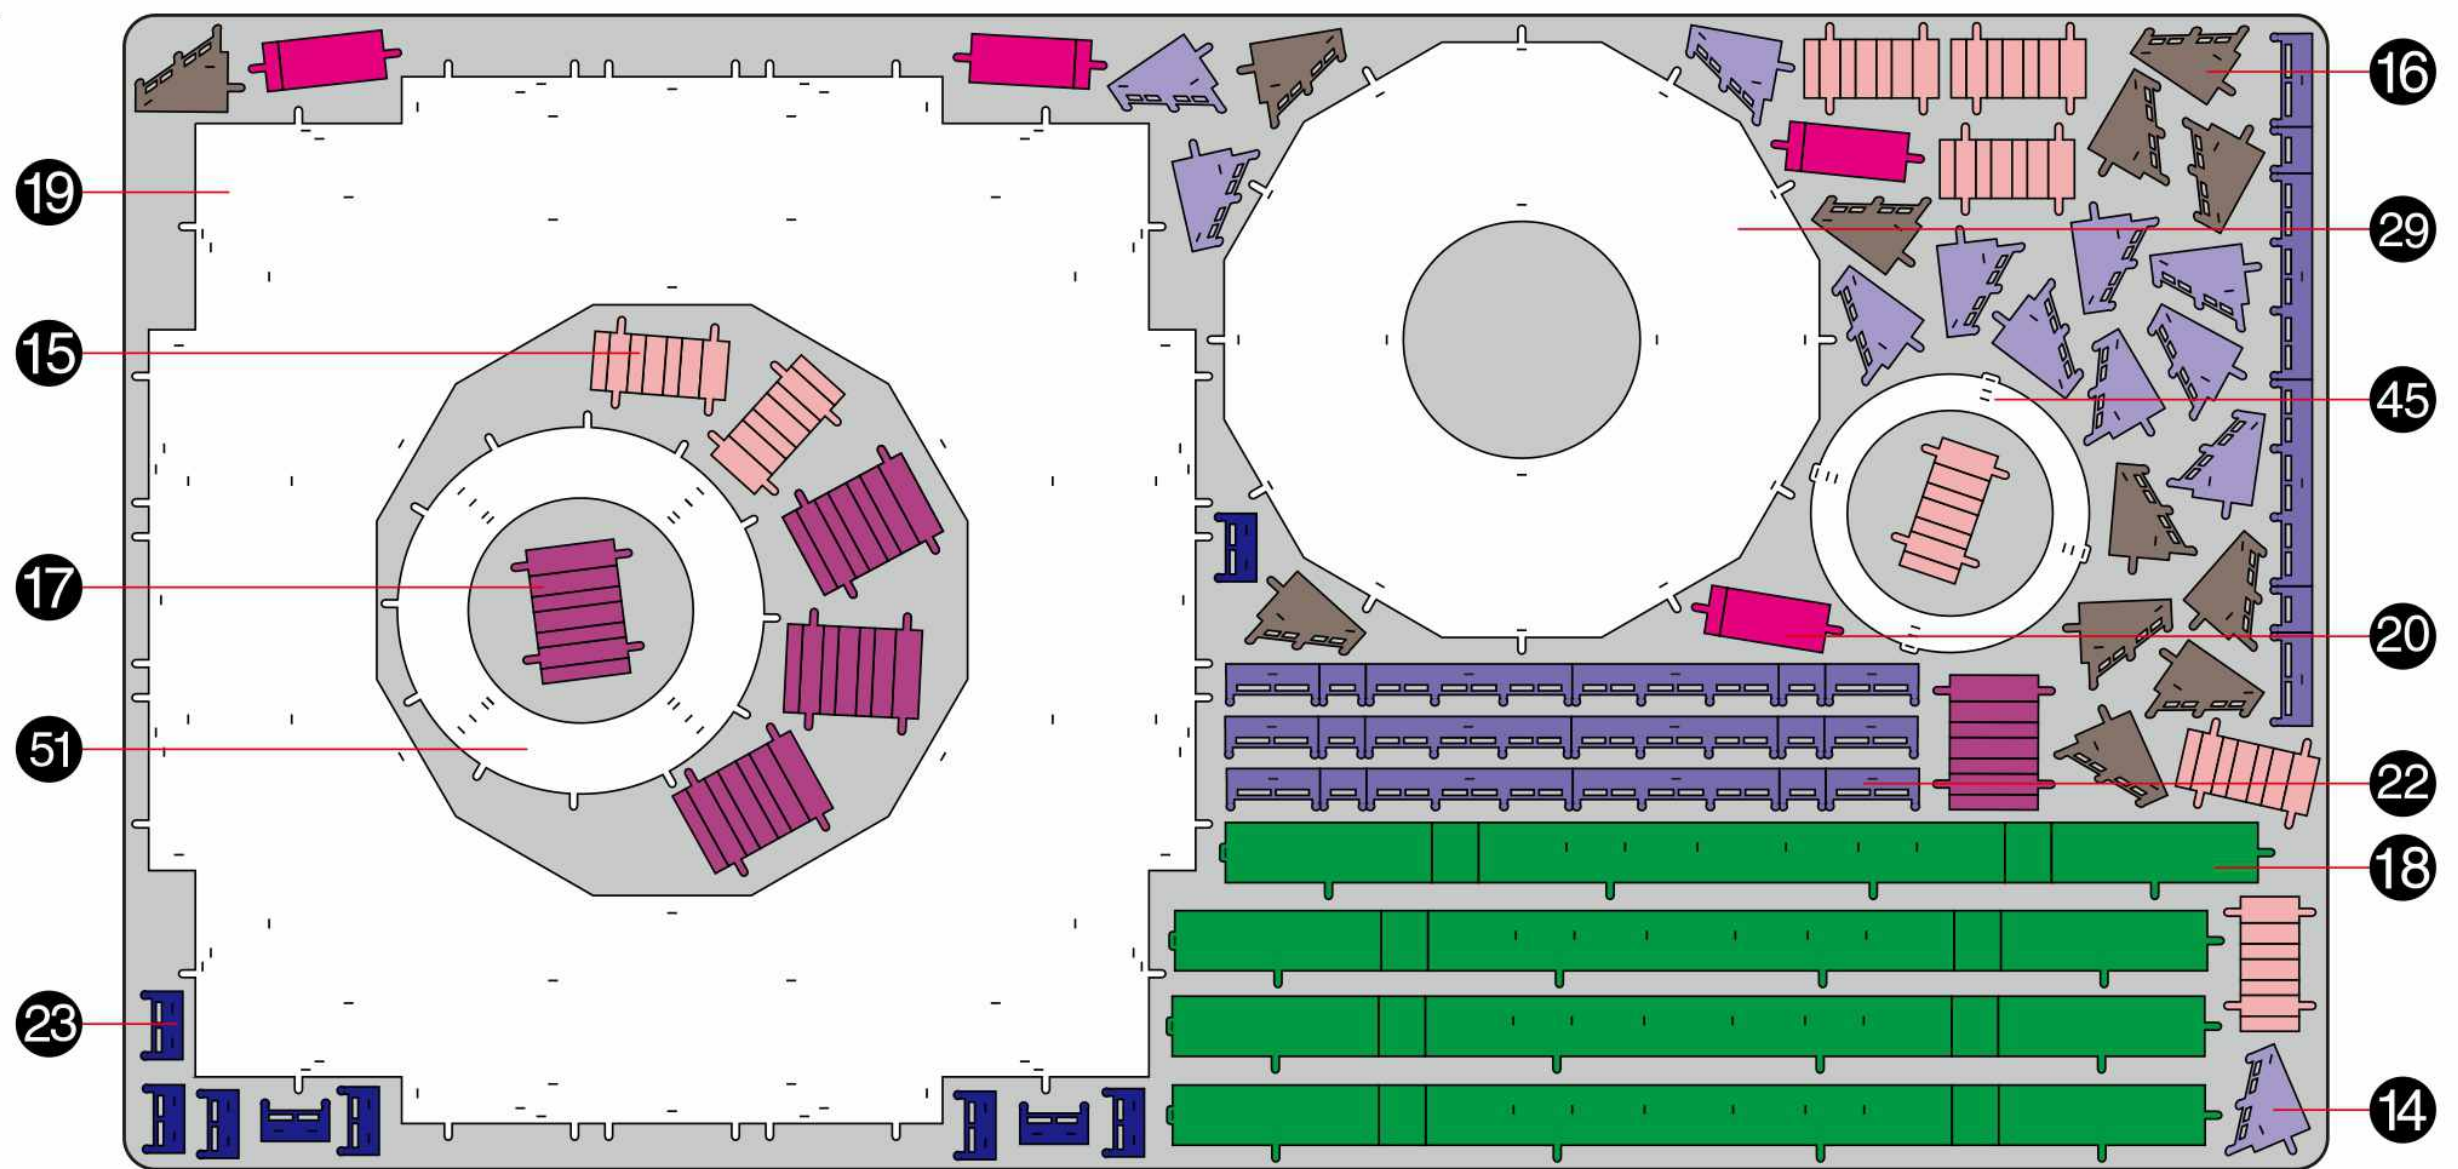


Metal Sheet


B

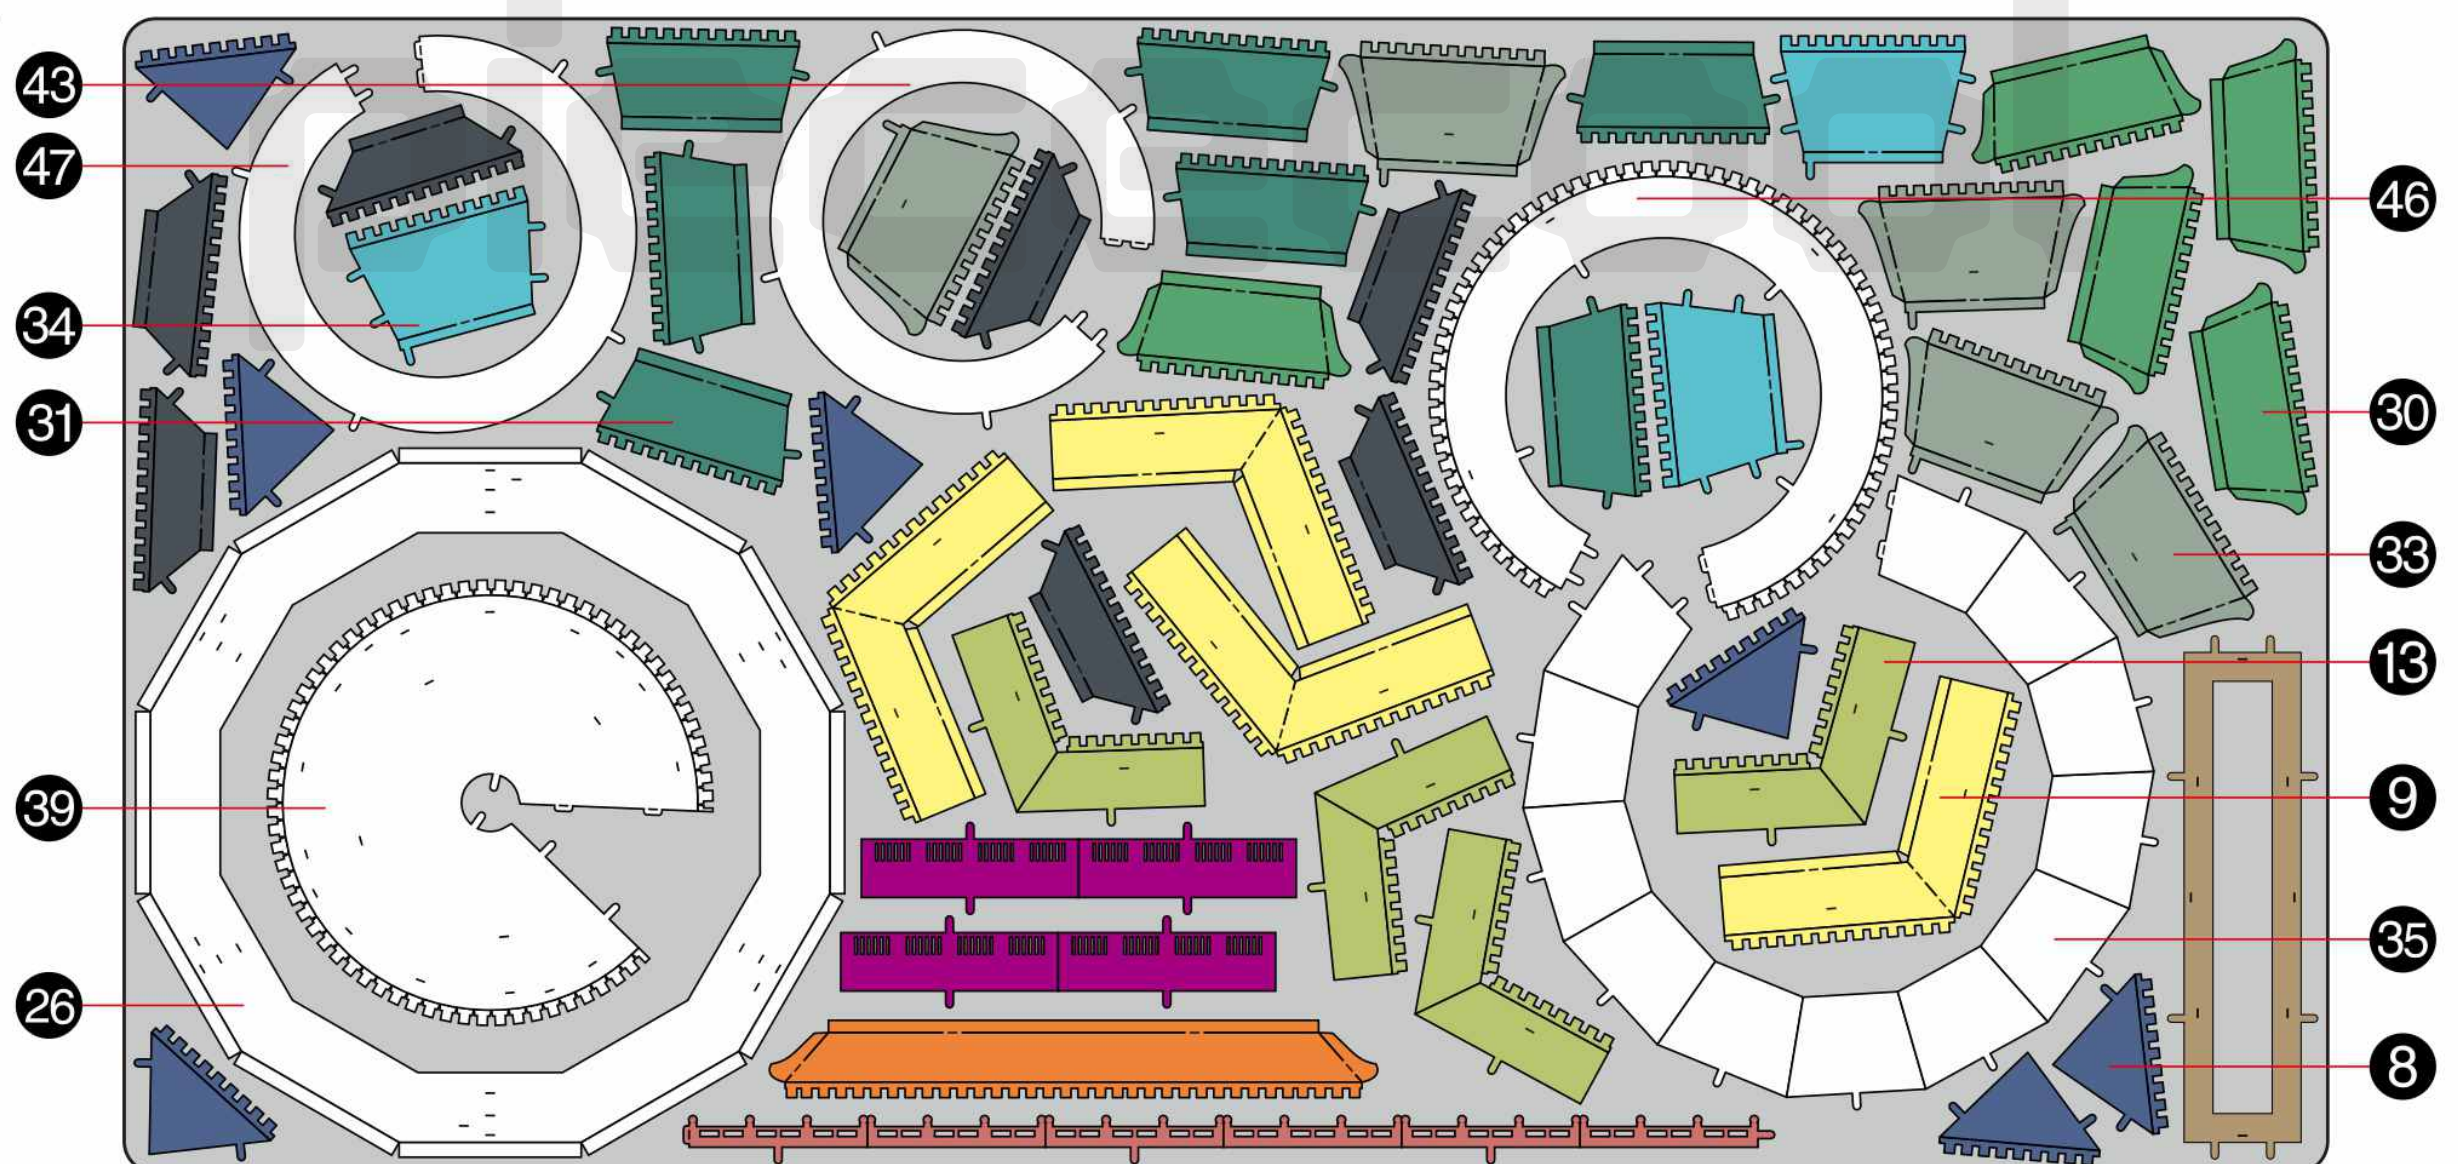

Metal Sheet

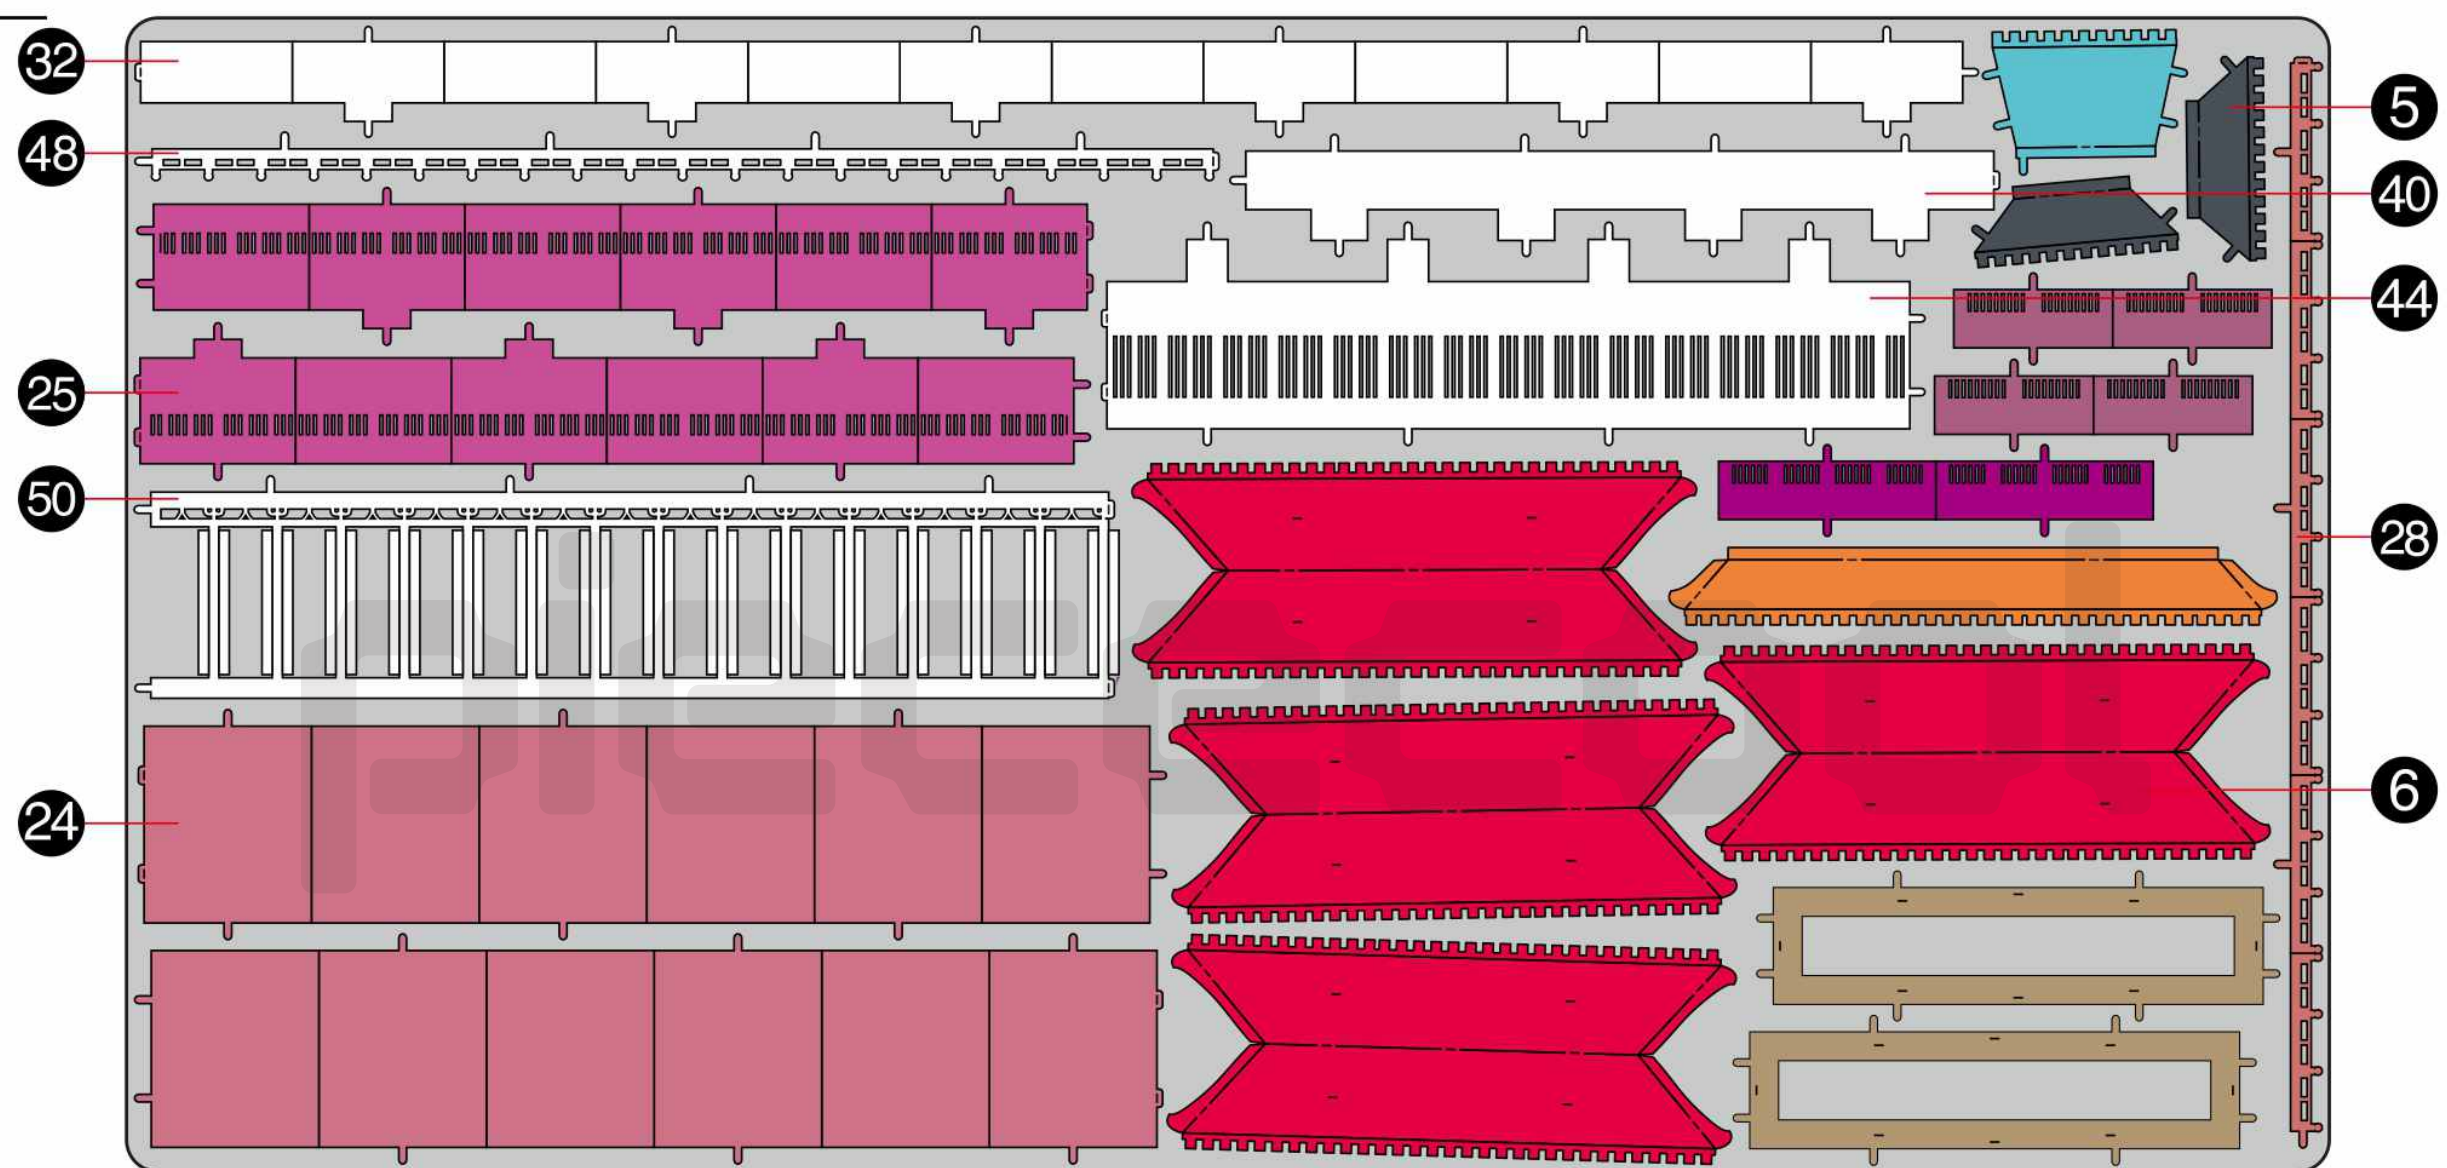

Metal Sheet

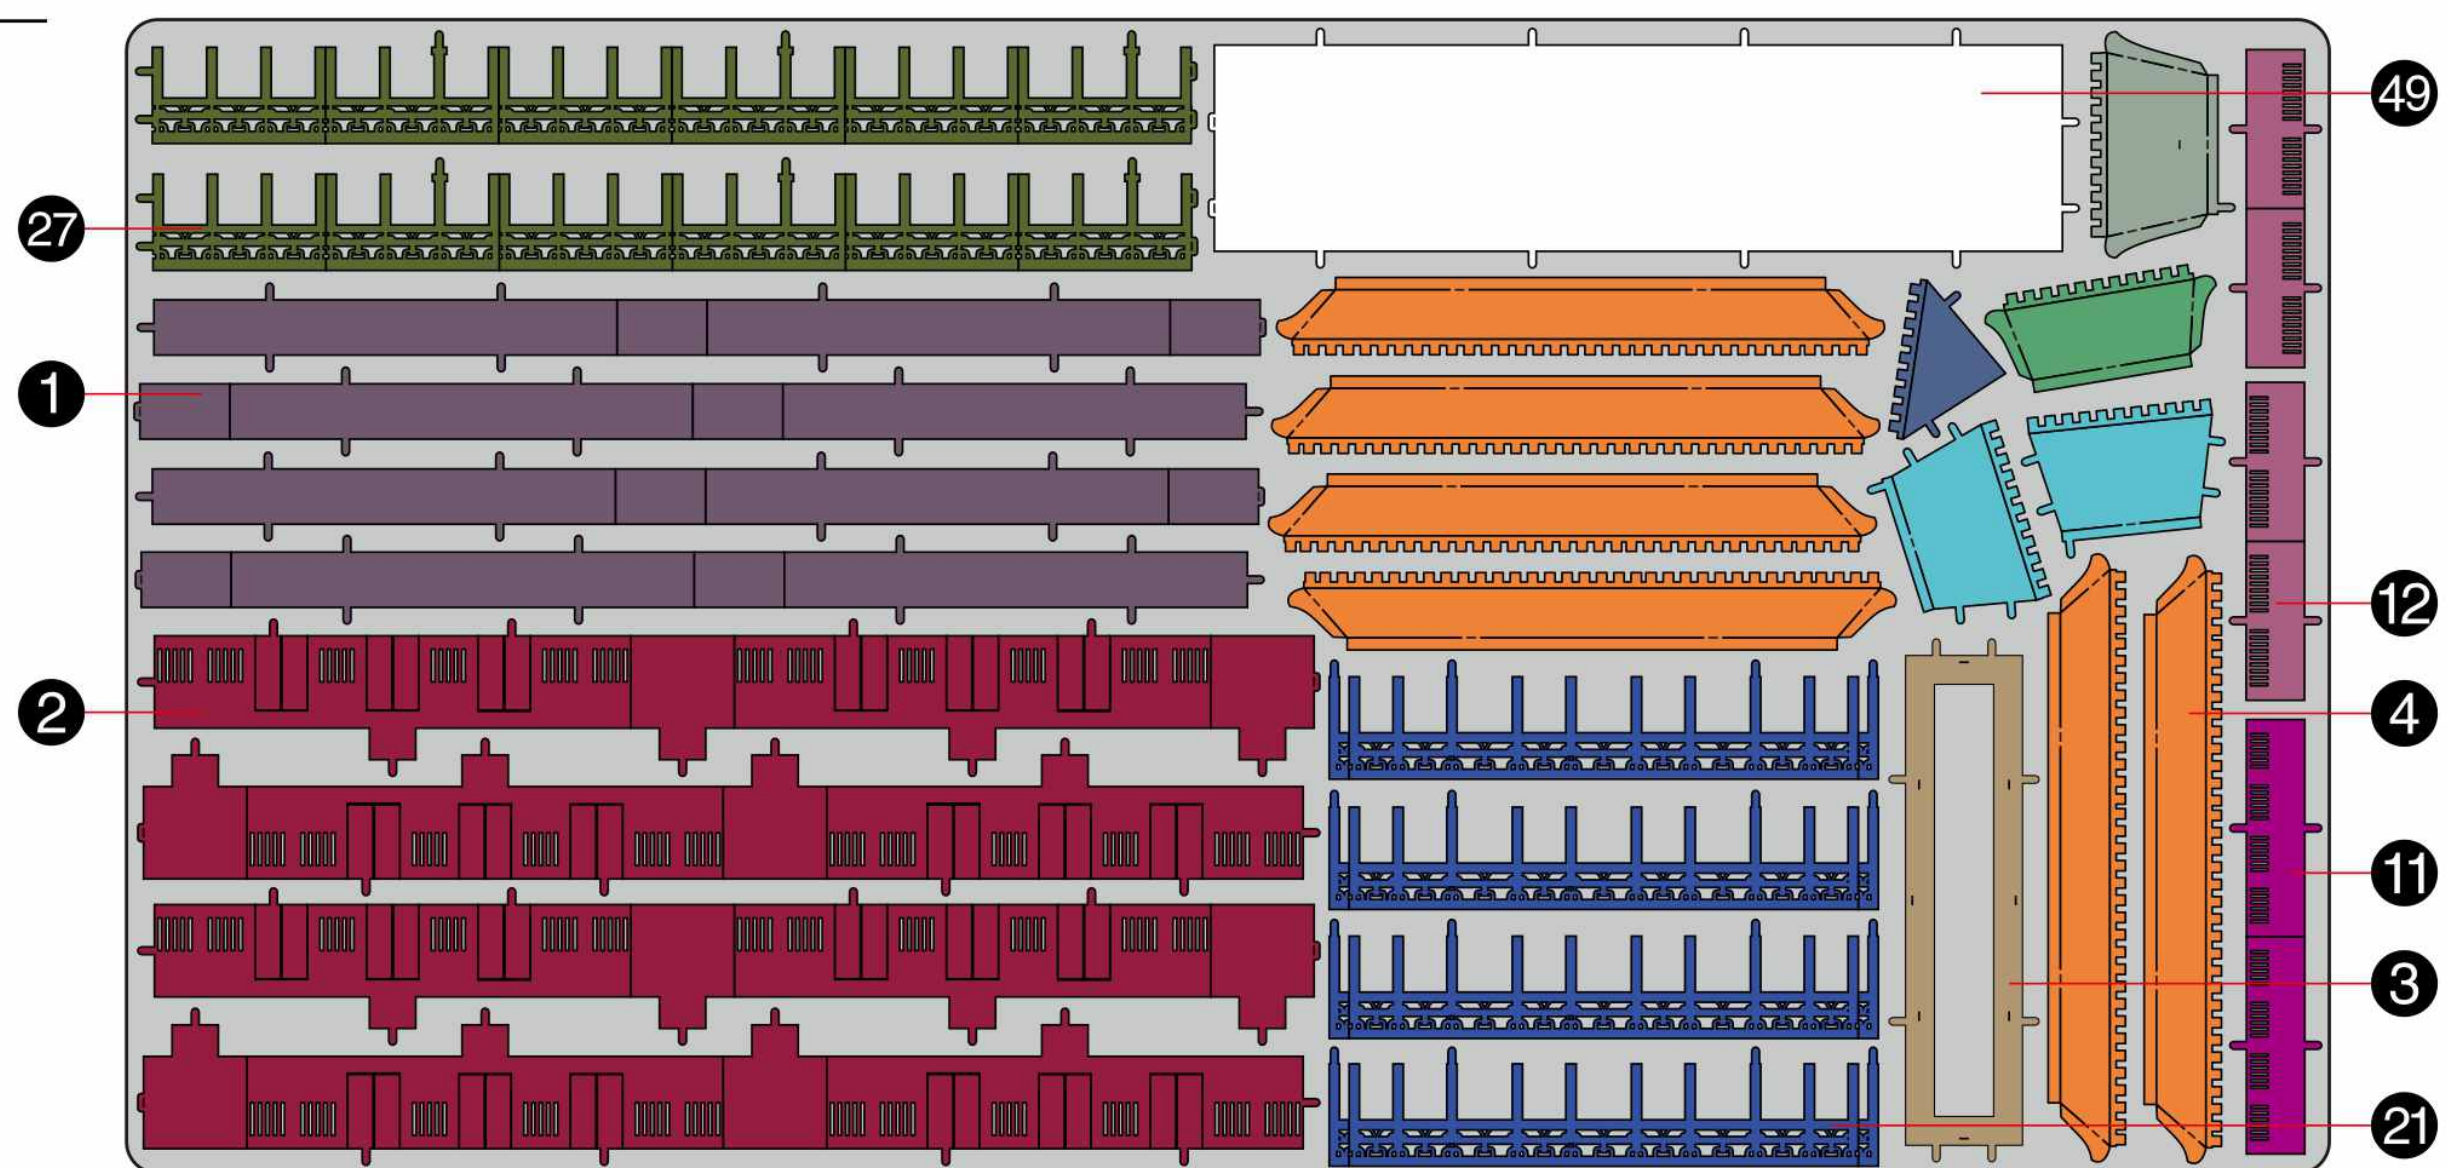

Metal Sheet

